




Merch Source Projector Entertainment II Outer Casing Replacement

Prerequisite-only guide

Written By: Winthrop Townsend

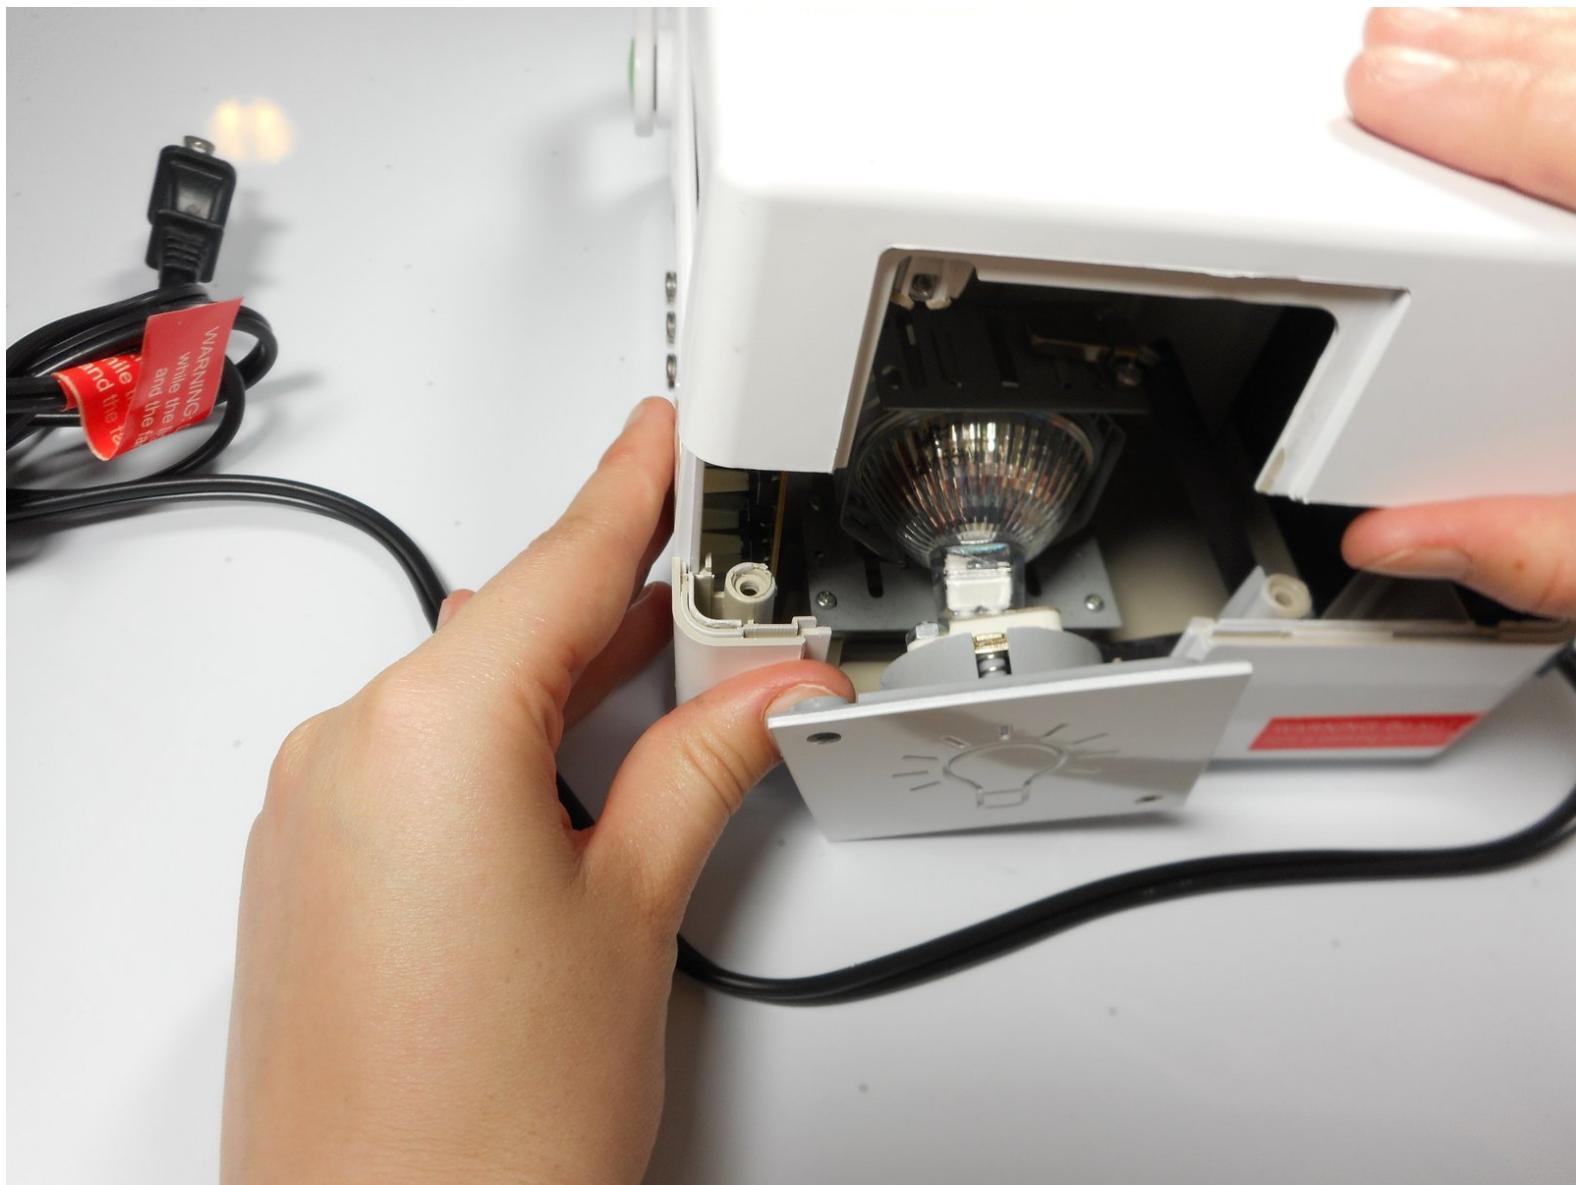

 **TOOLS:**


- Phillips #0 Screwdriver (1)

Step 1 — Outer Casing



- Flip the projector onto its back and unscrew the nine 15mm screws using the Phillips #0 screw driver.

Step 2

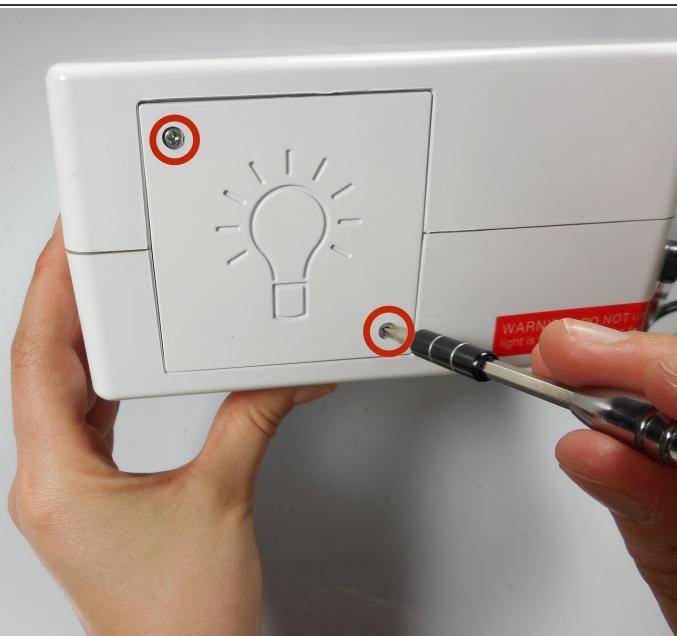

- Flip the projector right side up and unscrew the two 12mm screws on the light bulb panel located at the rear of the projector with a Phillips #0 screw head.
- *(i)* The bottom right panel screw does not come completely out the panel door.

Step 3



- Using your hands, gently pry the top and bottom of the projector casing apart.

To reassemble your device, follow these instructions in reverse order.