




Microsoft Surface 3 Kickstand Replacement

How to replace the kickstand on the Surface 3. Requires removing the battery and the display.

Written By: Harold Hall

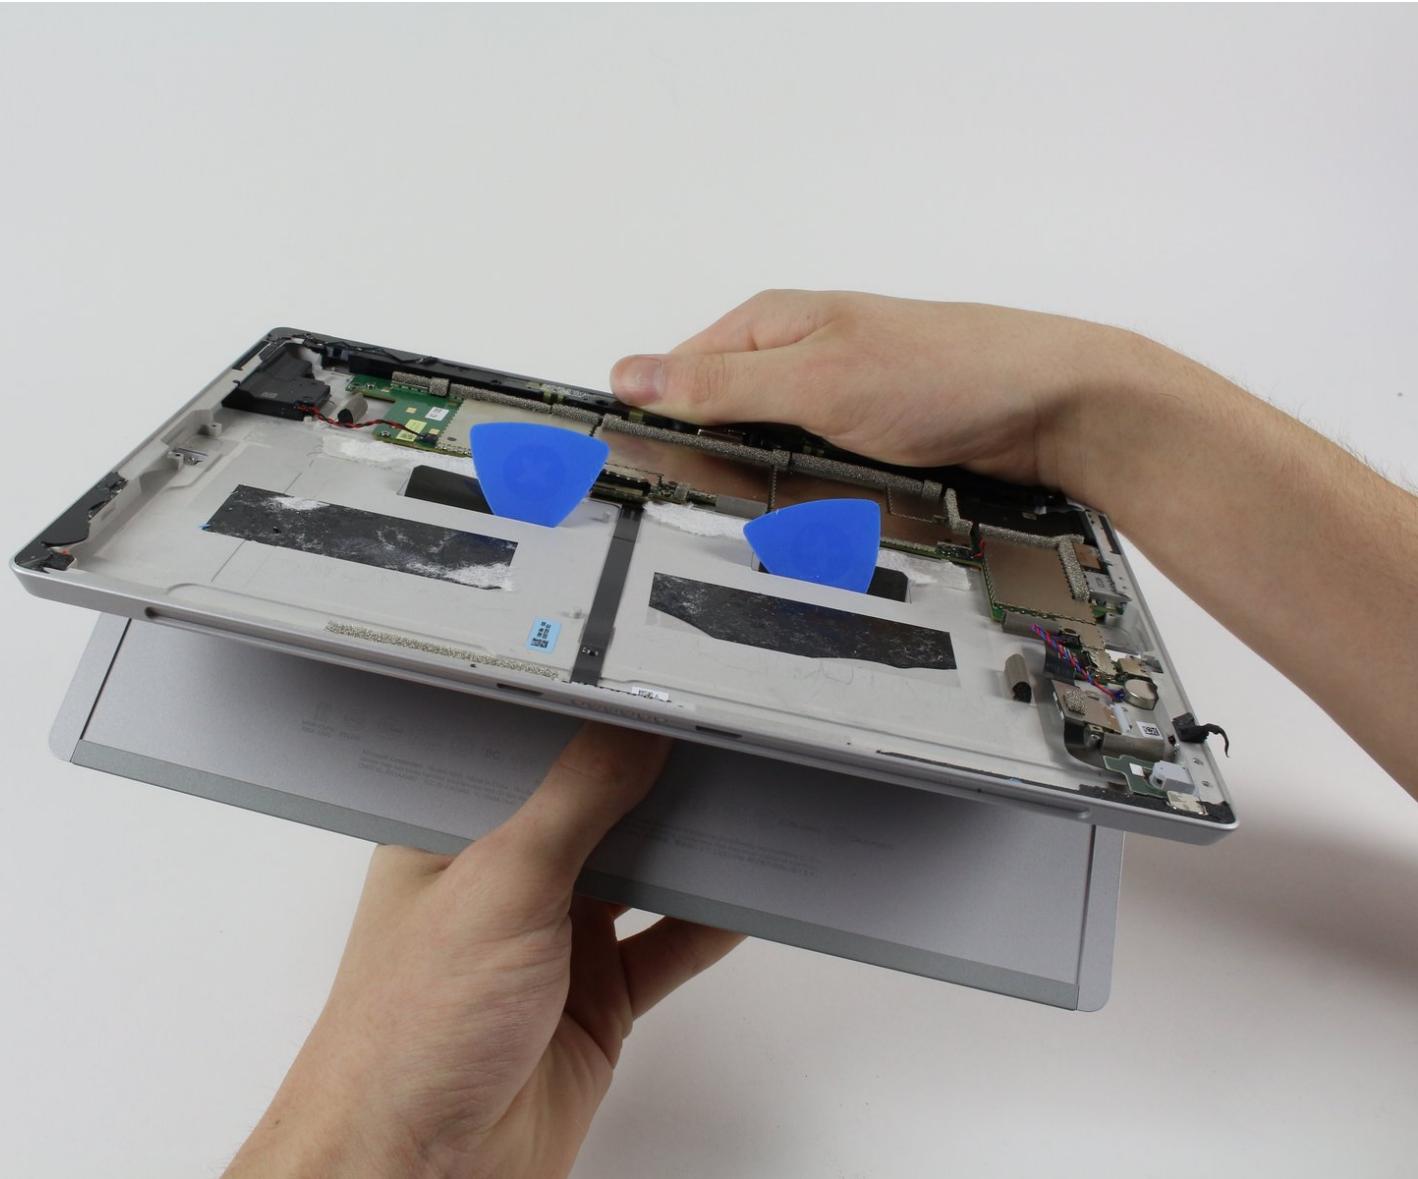

INTRODUCTION

Replacing the kickstand is one of the simplest things to fix in a Surface 3. However, you will still need to take off the display and remove the battery to fully access the parts to replace.

TOOLS:


- [iOpener Kit](#) (1)
- [Microwave](#) (1)
- [Plastic Cards](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

Step 1 — Casing



- Warm up an iOpener following the instructions found in the [iOpener guide](#).
- Place the warm iOpener on top of the edges of the screen. This heat will weaken the strength of the adhesive between the display and body.

Step 2

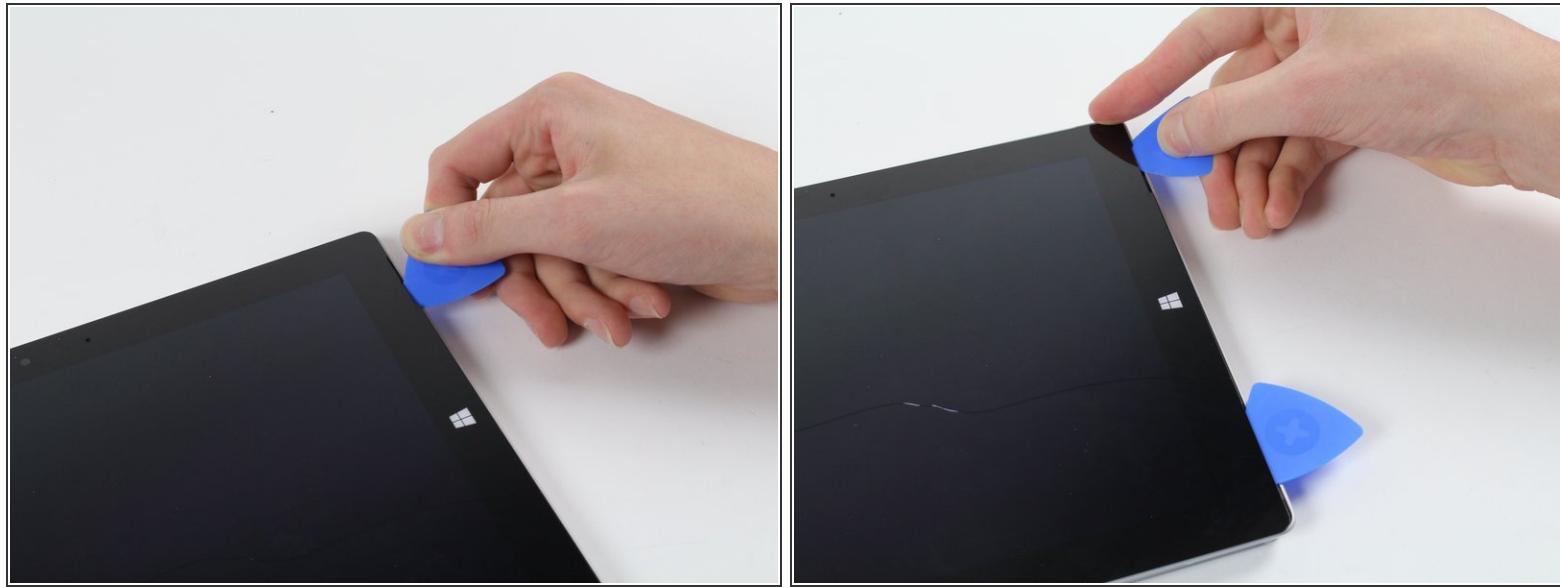

- Use iFixit opening picks to wedge under the edge of the screen at the speaker port.

(i) This may take significant force. A fingernail might work better for the initial lift

⚠ *If you push straight down near the edge you will go through the speaker mesh and possibly end up damaging your speaker; try to push the pick in at a shallow angle.*

Step 3



- Carefully try to work your way around the device using the picks, reapplications of the heated iOpener, and luck.
- *i* If you break the glass on one side you might want to try again starting from the other side so that you have a clean, unbroken, edge on that side.


⚠ While the glass on this display is not particularly sharp when broken, it is still broken glass and you should be careful with it.

Step 4



- Flip the display over so that parts underneath it are easily accessible.
- ⚠ Do not pull out the display as it is still attached to the motherboard.
- ⓘ If you are replacing the display, or want it out of the way, continue with the [display replacement guide](#) steps.

Step 5 — Battery

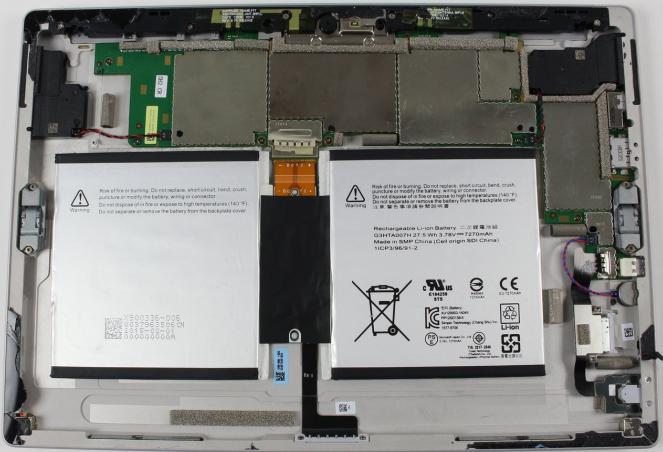


- Now that you've gotten the casing off of the Surface 3, you can start removing the battery pack.

Step 6



- Slide the iFixit plastic cards under the compartments of the battery pack.
- Slide the card around to undo the adhesive under the battery pack

Step 7

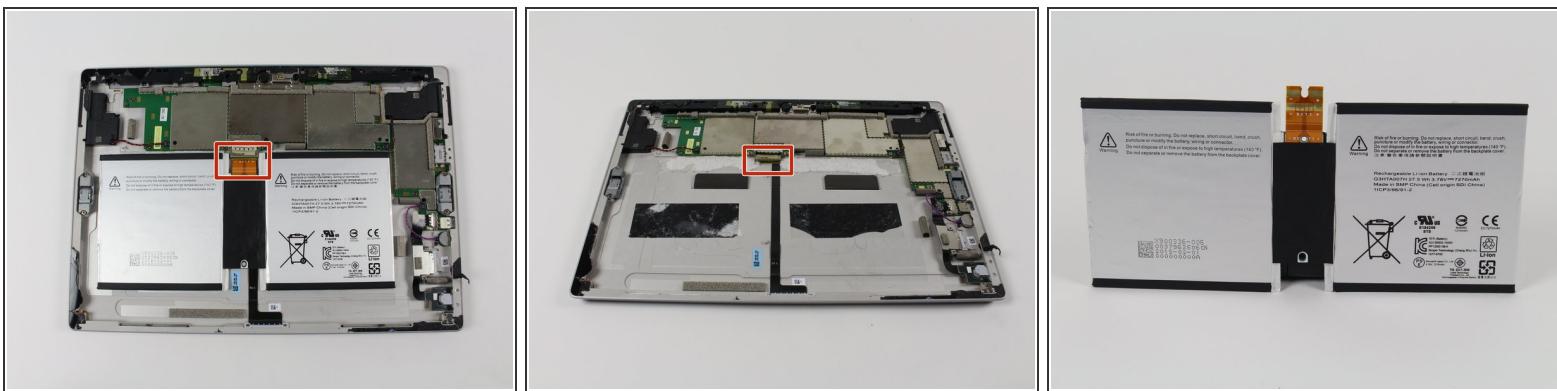

- Carefully slide the battery's flat power and data connector from its insert.
- You may now switch out the battery pack for a new one.

Step 8 — Kickstand



- Remove these four 3/32" Torx #3 screws.


(i) If you do not need to remove the hinges, skip to the step that handles the retaining tabs.

Step 9



- Remove these four 3/16" Torx #5 screws that hold in the hinges to replace the hinges.

Step 10

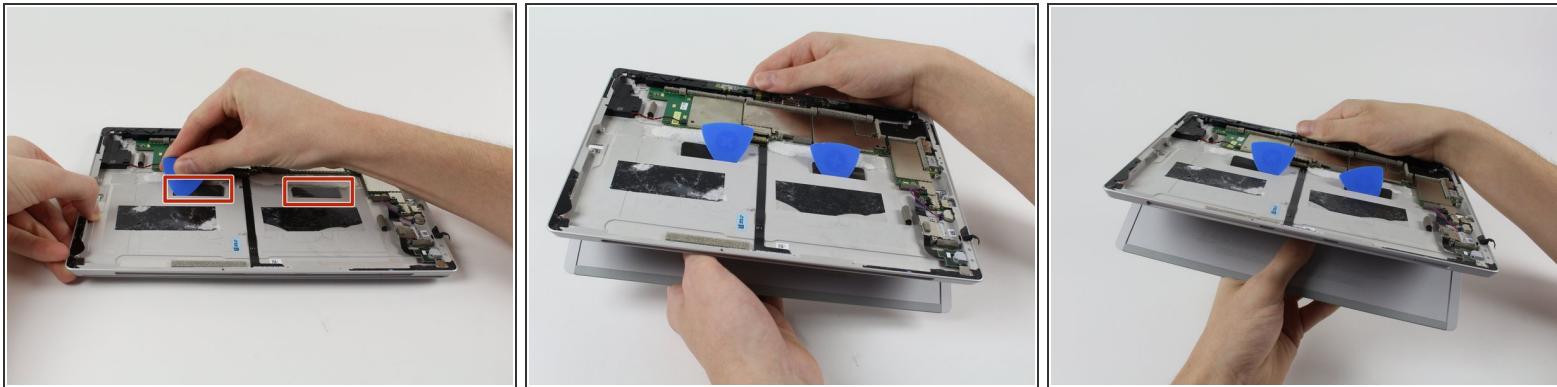

- These two retaining tabs need to be fed through the slots in the case to release the kickstand.
- Use picks to make the tab slide through the slot then simply pull out the kickstand,

To reassemble your device, follow these instructions in reverse order.