



Microsoft Surface Pro X SSD and SIM Card Door Removal

Remove the SSD and SIM door for access to the SSD and SIM card in the Microsoft Surface Pro X.

Written By: Adam O'Camb



This document was generated on 2019-11-20 09:05:21 PM (MST).


INTRODUCTION

Use this guide to remove the Microsoft Surface Pro X SSD and SIM card door, for access to the SSD or SIM card or to replace a damaged door.

TOOLS:


- [SIM Card Eject Tool \(1\)](#)

Step 1 — Open the kickstand

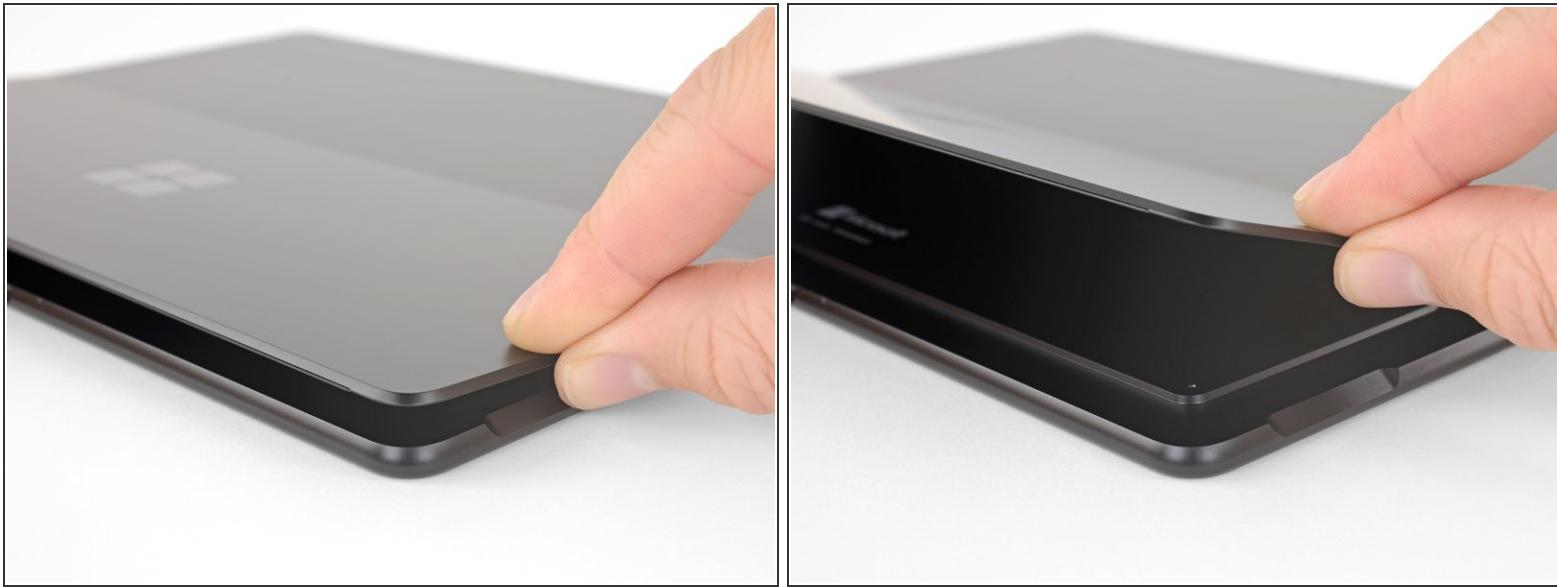

- ⓘ Make sure your Surface Pro X is turned off, and laying screen-side down on a soft surface.
- Lift the kickstand to at least a 90° angle, so that it is perpendicular to the Surface's screen. The further you open the hinge, the easier it is to access the SSD and SIM card door.

Step 2 — Open the SSD and SIM card door

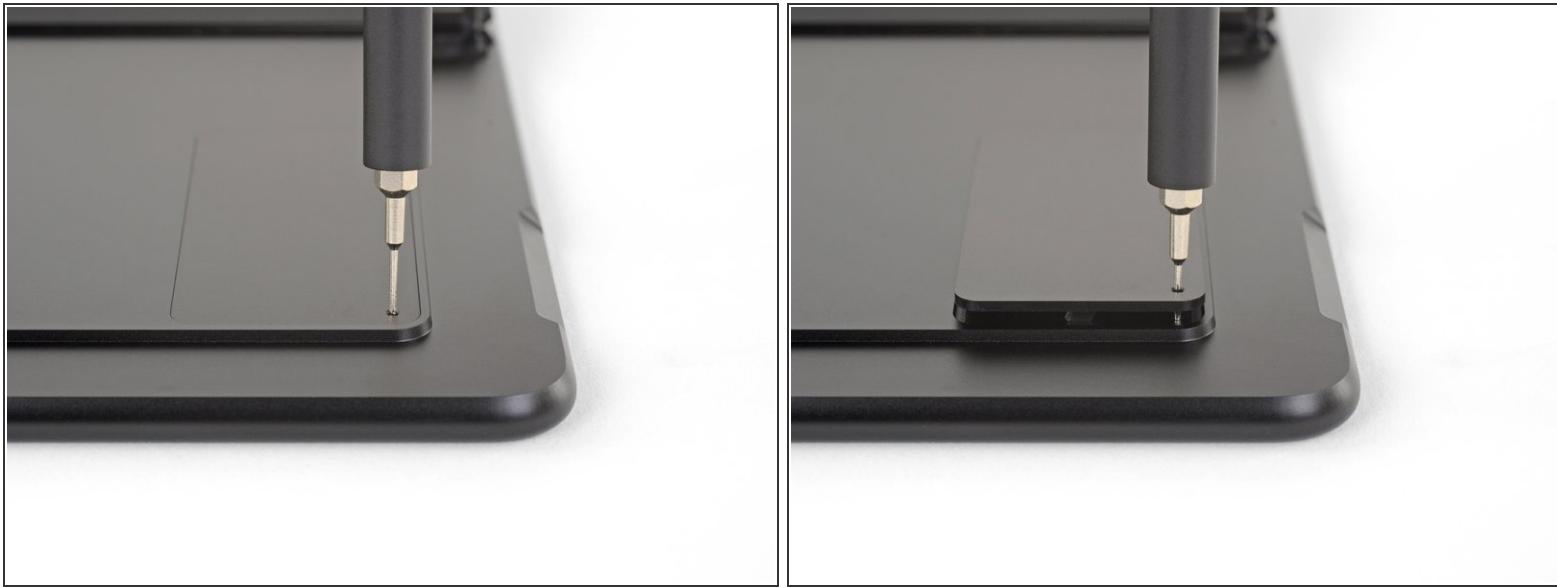

- Insert a SIM card eject tool or a paperclip into the small hole in the bottom right corner of the SSD and SIM card door, located near the bottom right corner of the Surface.
- Press firmly to open the door.

Step 3 — Remove the SSD and SIM card door



- Lift the SSD and SIM card door and remove it from the Surface.
- When reinstalling the door, [first insert the end of the door with the small tab into the Surface just above the SSD](#), then lay the rest of the door down.

To reassemble your device, follow these instructions in reverse order.