



Milwaukee Hackzall 2625-20 Outer Casing Replacement

Use this guide if you need to replace the outer casing of your Milwaukee Hackzall 2625-20.

Written By: Sarah Westberg



INTRODUCTION

Use this guide if you need to replace the outer casing of your Milwaukee Hackzall 2625-20.

TOOLS:

- [T9 Torx Screwdriver](#) (1)
- [T10 Torx Screwdriver](#) (1)
- [T15 Torx Screwdriver](#) (1)

Step 1 — Outer Casing



- Remove the screws holding the shell of the device together. Each screw size varies; you will use a T9 Torx screwdriver for one size 7.0 mm.
- Use a T10 Torx screwdriver to remove one 14.0 mm screw.
- Use a T15 Torx screwdriver for the remaining eight screws that are 16.0 mm.
- Remove the casing to reveal all of the internal components.

To reassemble your device, follow these instructions in reverse order.