




Minolta Dimage Xt Capture Button Replacement

This guide demonstrates how to disassemble the capture button of the camera in the event it must be modified to work properly.

Written By: Megan Milam

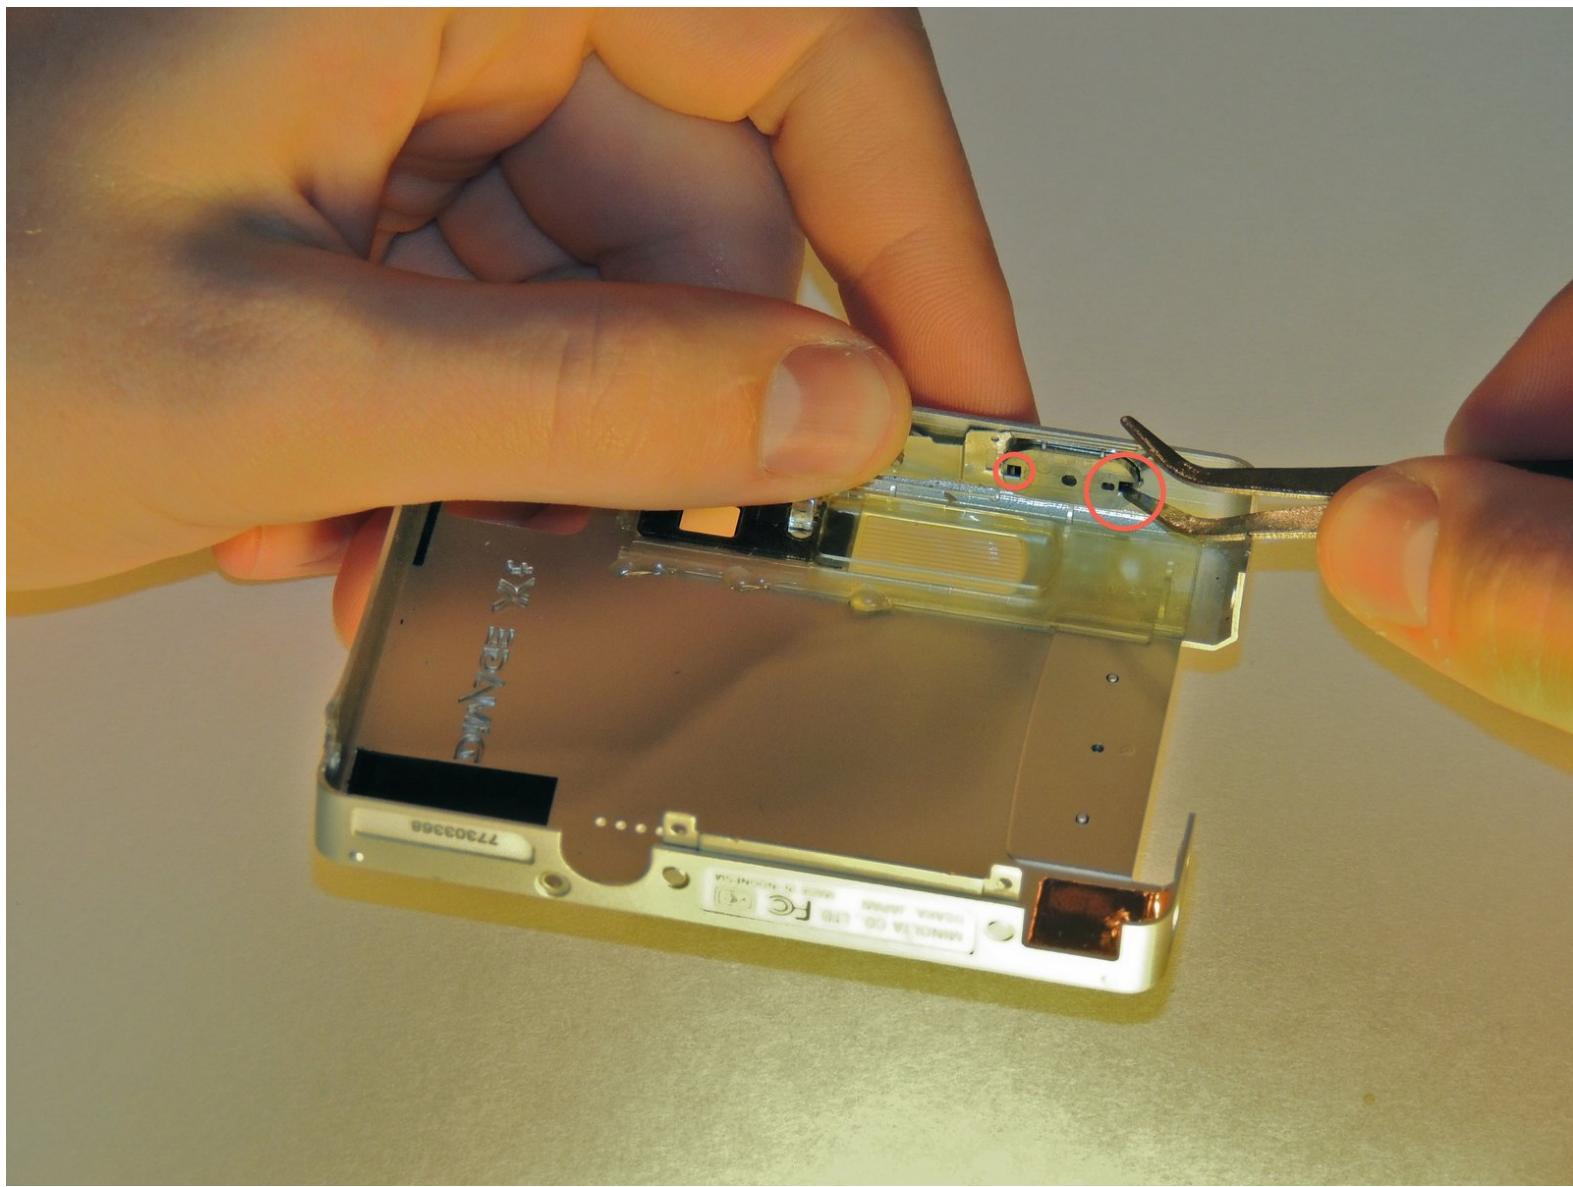

This document was generated on 2019-09-22 01:10:30 AM (MST).

INTRODUCTION

This guide disassembles the capture button, so the device can be checked for a broken spring or for debris blocking its movement.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Casing




- Locate and remove the silver screws on each side of the camera.
- *(i)* Use the Phillips #00 Screwdriver to unscrew all 2.0mm (4 instances) and 4.0mm (2 instances) screws.

Step 2

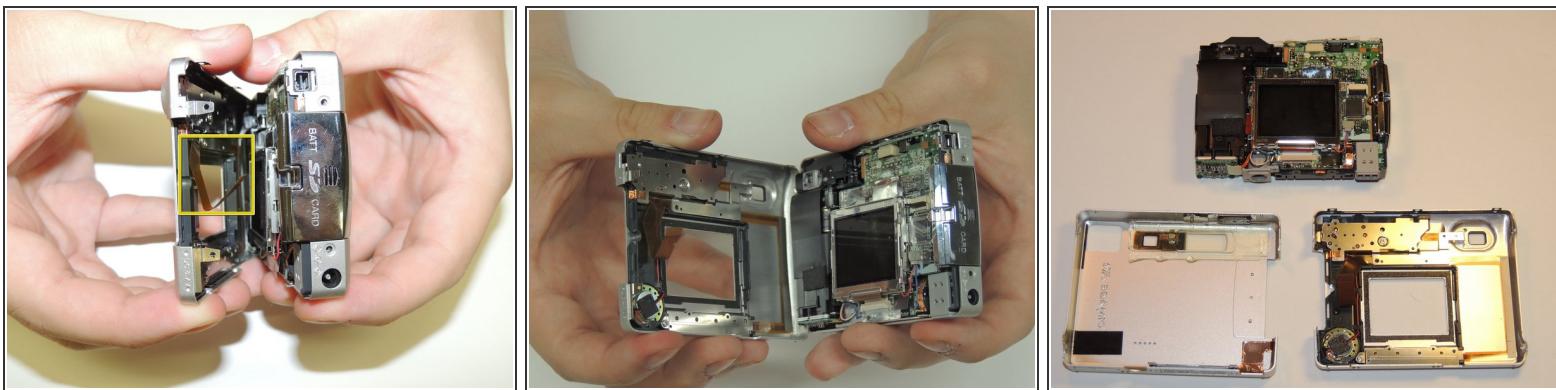


- Then, carefully pry apart the front and back outer casing away from the internal components.
- ⚠ Be aware of the ribbon wire that will disconnect when the casing is detached.

Step 3 — Capture Button

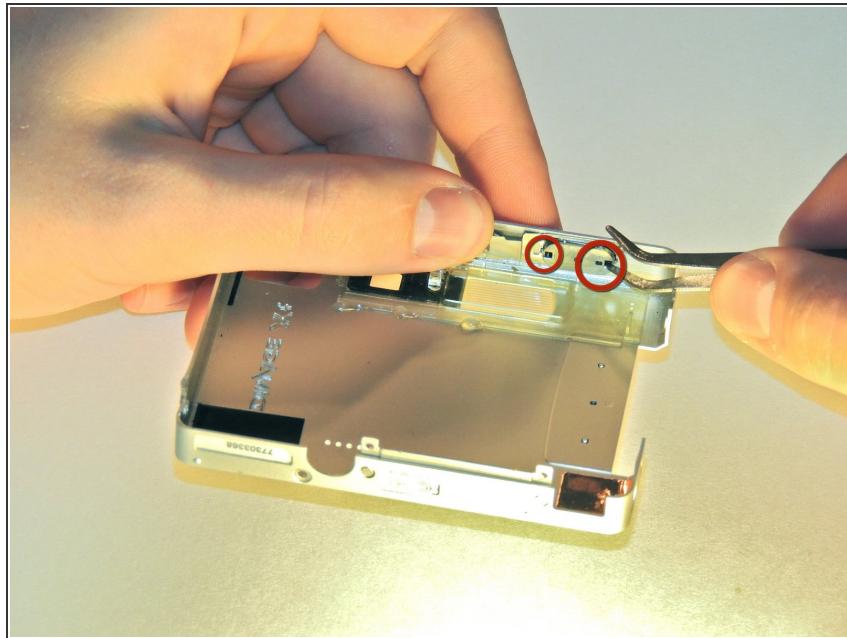

- Choosing the front half of the casing, locate the capture button on the top.
- Using tweezers, apply pressure to the two black hooks (circled in red) while holding the button down from the outside of the case.

Step 4

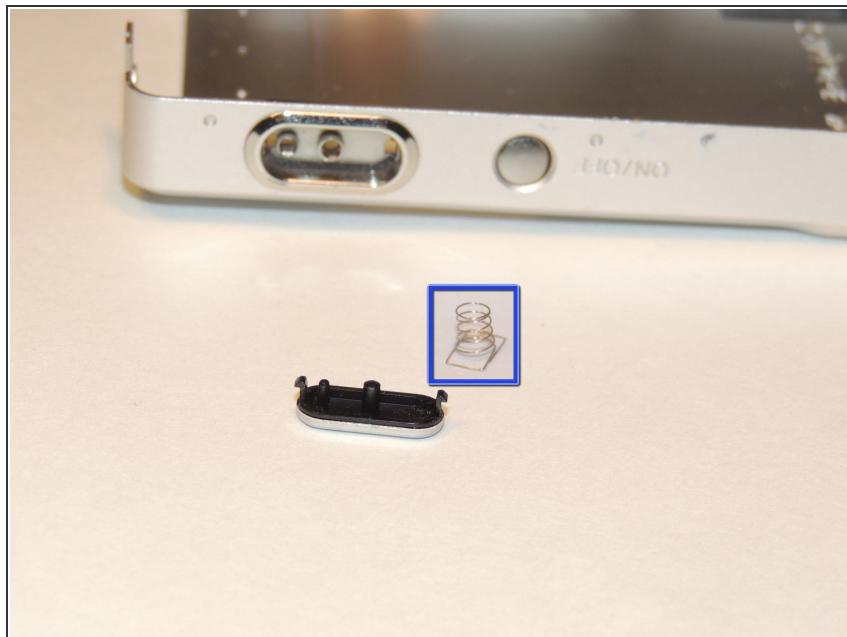

- The button will spring free. The capture device consists of the plastic button and a small metal spring.
- The button can be reassembled by using the tweezers to place the spring rectangle-side down on the button and snapping the button back into place.

Reassemble the casing by reversing steps 1 and 2.