


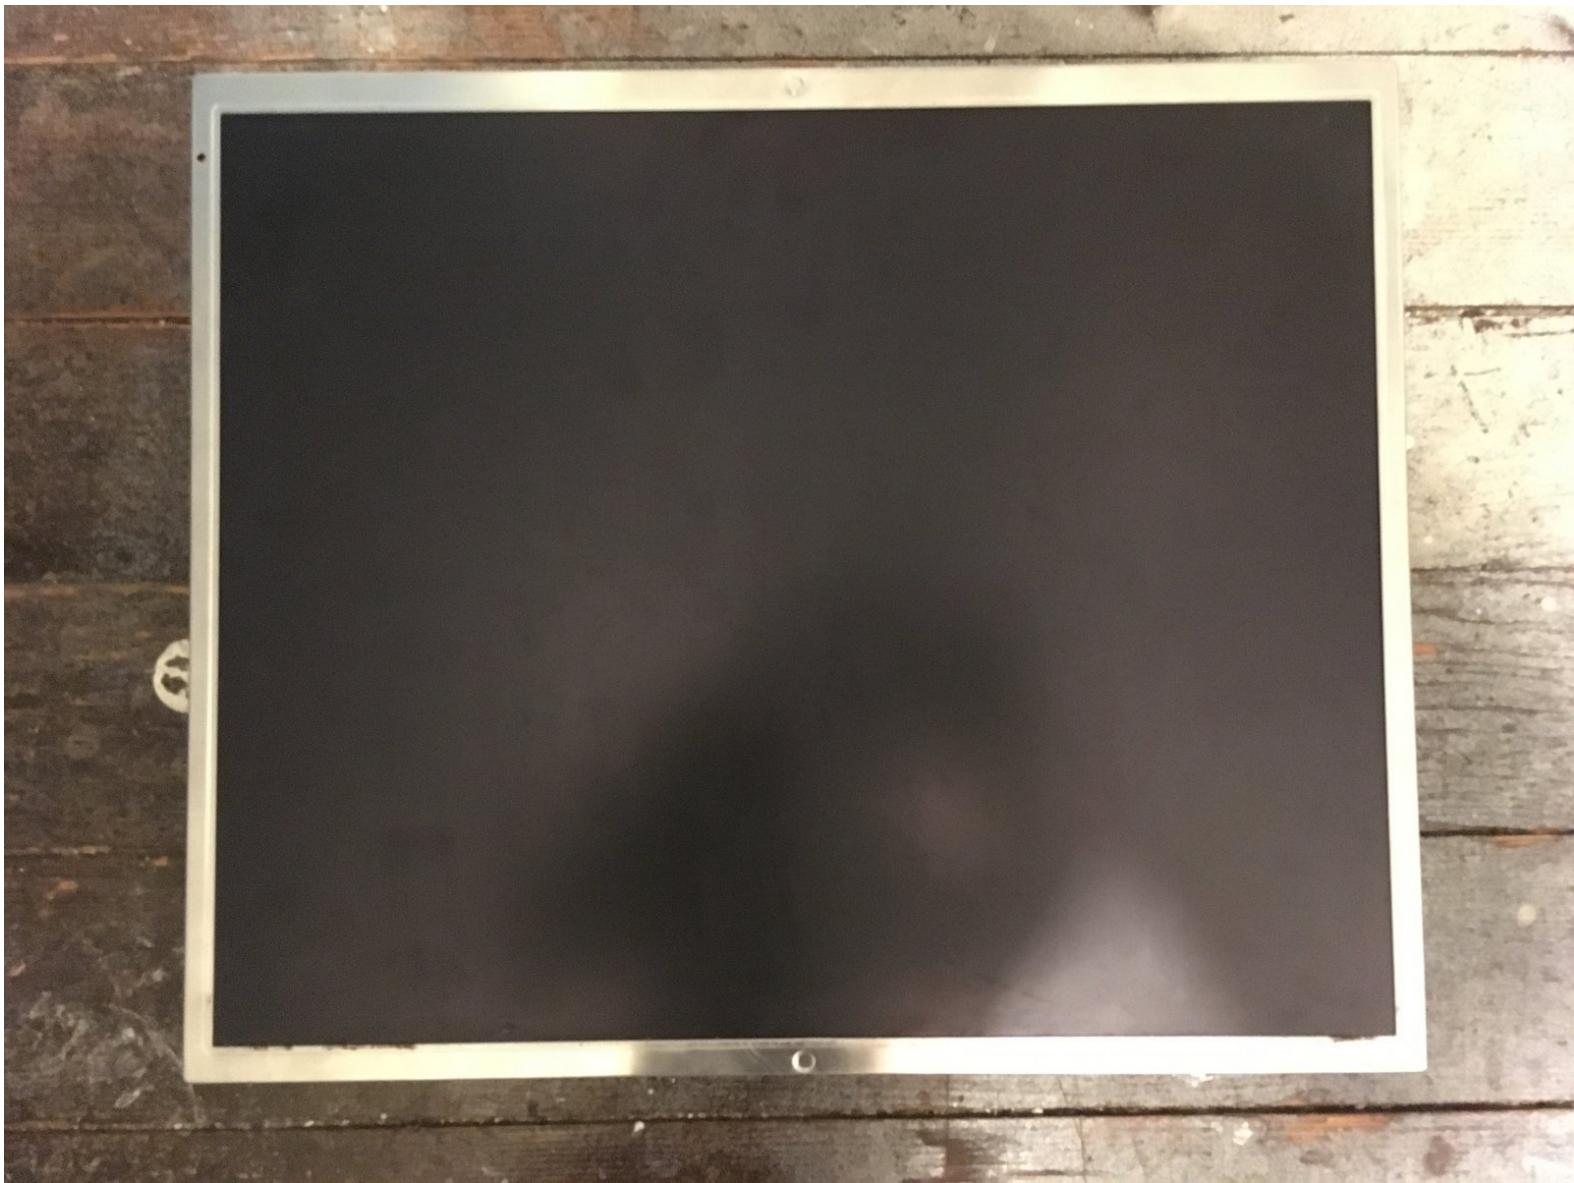

Mitsubishi Diamondpoint NXM76LCD Display Replacement

Display removal and replacement for the Mitsubishi Diamondpoint LCD.

Written By: Padraic Hoselton



 **TOOLS:**

- **Phillips #2 Screwdriver** (1)
- **Phillips #1 Screwdriver** (1)
- **5mm Nut Driver** (1)

Step 1 — Removing the stand.



- Lift the black cover off.
- Remove all 4 Phillips #2 screws.

Step 2 — Remove the 5 screws




- Remove the two 24mm Phillips #2 screws.
- Remove the three 8mm Phillips #2 screws.

Step 3 — Remove the back panel



- Lift the back and pry the back off.
- ⓘ The panel is held in with clips on the side. It needs a lot of force to take it off.

Step 4 — Remove the four screws

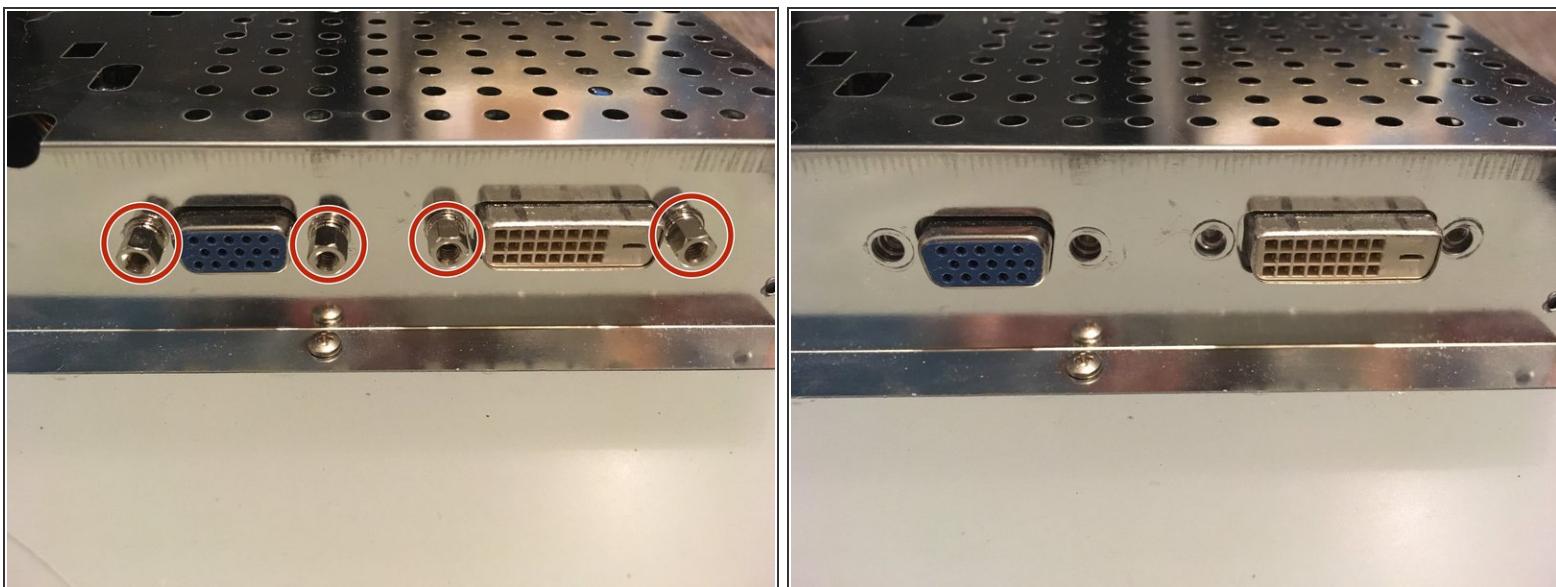

- Remove the four 5mm nut screws.

Step 5 — Remove the 5 screws



- Remove the seven Phillips #1 screws.

Step 6 — Remove the front panel




- Remove the three Phillips #2 screws.
- Remove the two data/power cables.
- Remove the two speaker cables.

Step 7 — Remove the display cable



- Pull the two tabs.
- Pull the connector off.

Step 8 — Remove the power switch

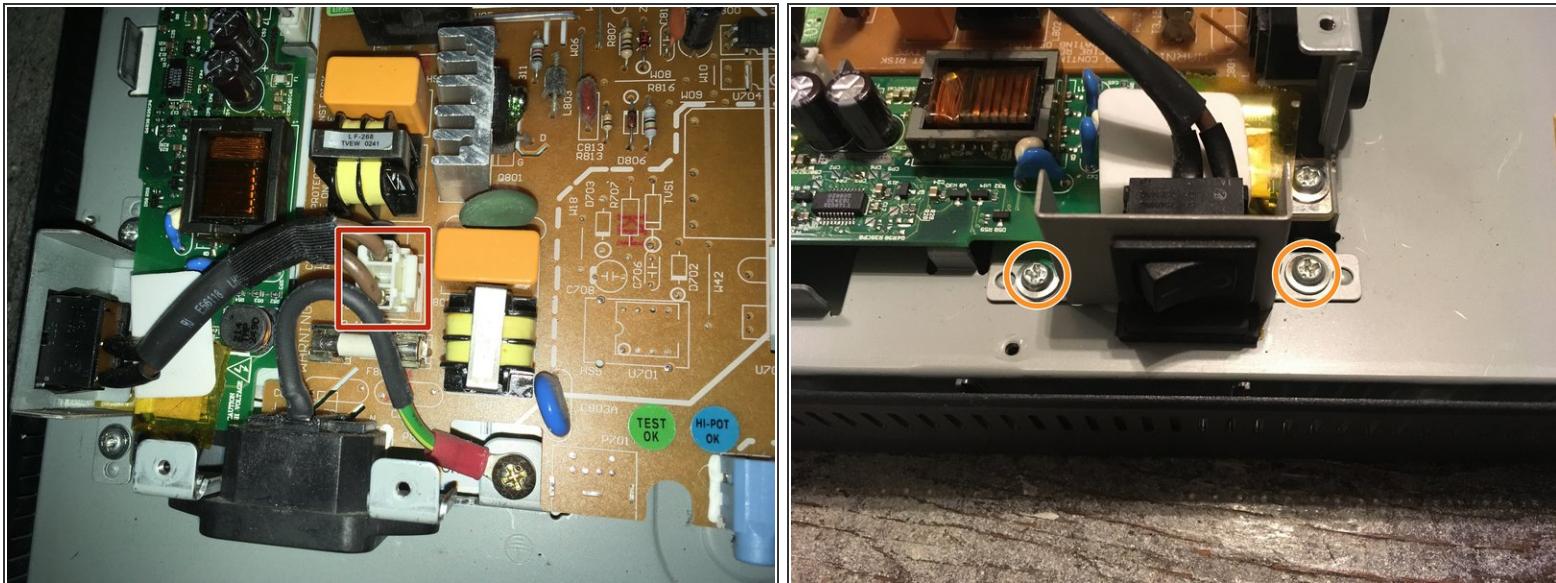

- Remove the switch cable off.
- Remove the two Phillips #2 screws.


Step 9 — Remove the display power



- Remove the four display power cables.


(i) These cables are interchangeable.

Step 10 — Lift the display out

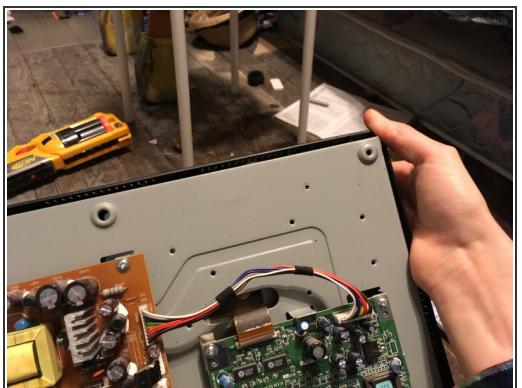

- Lift the display out.



Step 11 — Remove the four screws

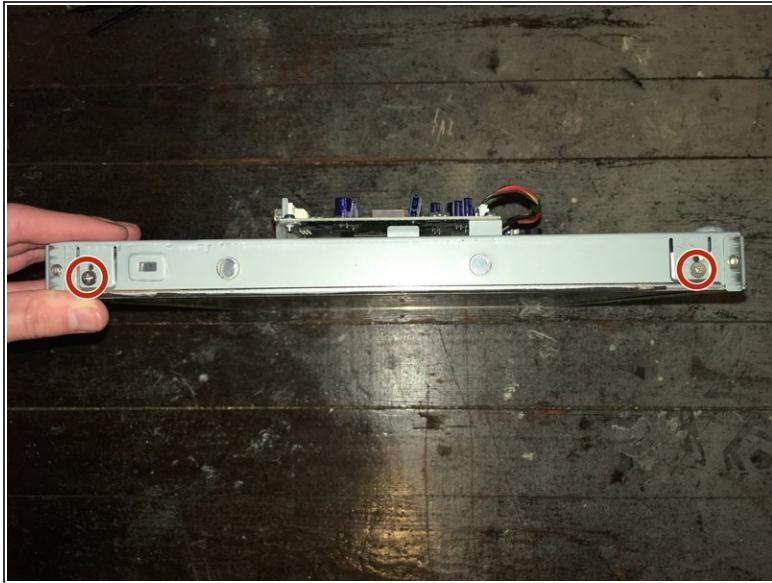

- Remove the four Phillips #2 screws.

⚠ These screws release the display from its enclosure. Hold the screen when removing these screws.

Step 12

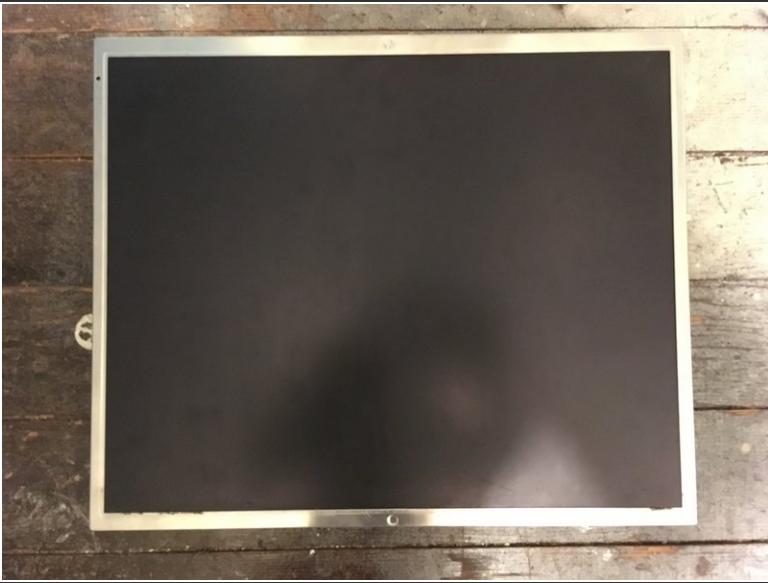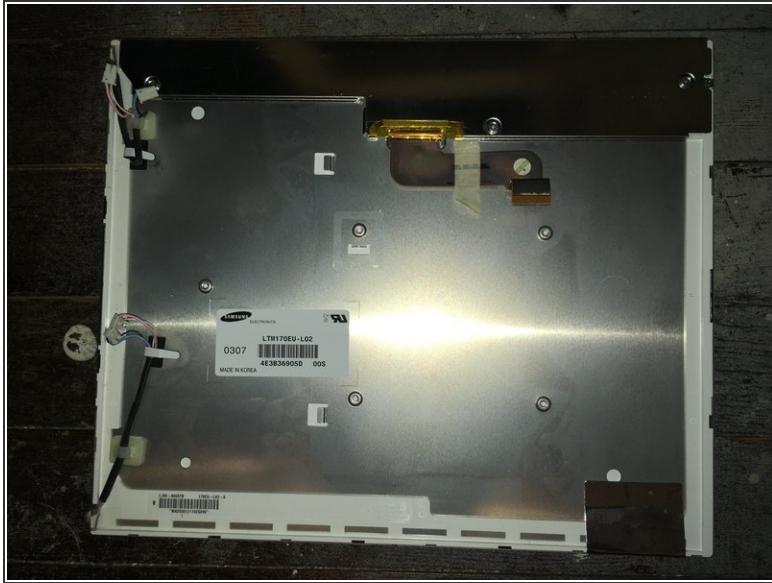

★ Remember to plug in all the cables on the display.

To reassemble your device, follow these instructions in reverse order.