



# Model-V2945Z Cordless Shark Floor and Carpet Sweeper-Rotating Brush Replacement

An illustrated guide to fixing model V2945Z Shark-Floor & Carpet Vacuum. Guide details the step-by-step process for replacement of the rotating brush.

Written By: Robert Whelan



## INTRODUCTION

This guide's intent is to provide instructions on how to fix this model of Shark Vacuum, by replacing a broken rotating brush. Its purpose is to educate viewers on how to do this simple repair. The detailed step-by-step instructions include hands-on illustrations throughout the process for this fix. The guide provides the quick, simple steps to locate and remove the brush for replacement. This guide saves viewers money from buying a new Shark Vacuum, by demonstrating how to fix their own.

---

### TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
  - [1.5" Thin Putty Knife](#) (1)
  - [Utility Scissors](#) (1)
  - [iFixit Tech Knife](#) (1)
-

## Step 1 — Replacing a Rotating Brush



- ⚠ Turn vacuum off before starting the fix.
- Power-off vacuum by pressing the button on the left-rear side of vacuum until the red light is off.
- Lay vacuum down with handle lying flat on the floor.

## Step 2



- ☑ Remove and empty dust tray; make sure to clean any debris built up.
- Lay vacuum up-side-down, locating the broken brush.



### Step 3



- Turn the lock counter-clockwise to unlock access to the rotation brush; use a key or flathead screwdriver to fit the lock.
- Remove the square brush cover to access the rotation brush.
- ❗ Once unlocked, the small square brush holder will detach.

### Step 4



- Remove the large band from the rotation brush.
- Push the band to the side and lift up the right-side of the brush.



## Step 5



- Detach left-side of the brush from the vacuum.

## Step 6



-  Use scissors to cut away any debris entangled in the brush.
-  The brush is easily damaged by debris if not cleaned regularly; keeping the brush clean lengthens the life of the vacuum.
- Clean the area surrounding the brush by scraping with a putty knife before inserting the replacement brush.

To reassemble the device, follow these instructions in reverse order.