



Motorola Buzz ic502 SIM card Replacement

No tools are necessary, simply be careful of where you touch the SIM card

Written By: Austin Quinn



INTRODUCTION

In this guide, the user will learn where the SIM card is and how to remove it.

Step 1 — Battery



- First flip the phone over.
- Then find the back release circled in red.

Step 2



- Carefully remove the back using the release.
- Lift from the bottom!

Step 3



- Lift the battery from the right side.
- After the battery has lifted about a 45 degree angle remove from phone.

Step 4 — SIM card



- The SIM card is located here
- Carefully push the SIM card down from the top with your finger
- Make sure to hold card from sides and do not touch the marked spot on card

To reassemble your device, follow these instructions in reverse order.