



Motorola Droid 2 Speaker Replacement

Replace a blown speaker on your Droid 2.

Written By: Andrew Bookholt



INTRODUCTION

This guide will take you through the process of replacing a faulty or non-functioning speaker in your Motorola Droid 2.

TOOLS:

- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Battery




- Slide the battery cover toward the bottom edge of the phone.
- Remove the battery cover from the rear of the phone.

Step 2



- Lift the battery out of the Droid 2 from the edge closest to the bottom of the phone.
- Remove the battery from the Droid 2.

Step 3 — Rear Case

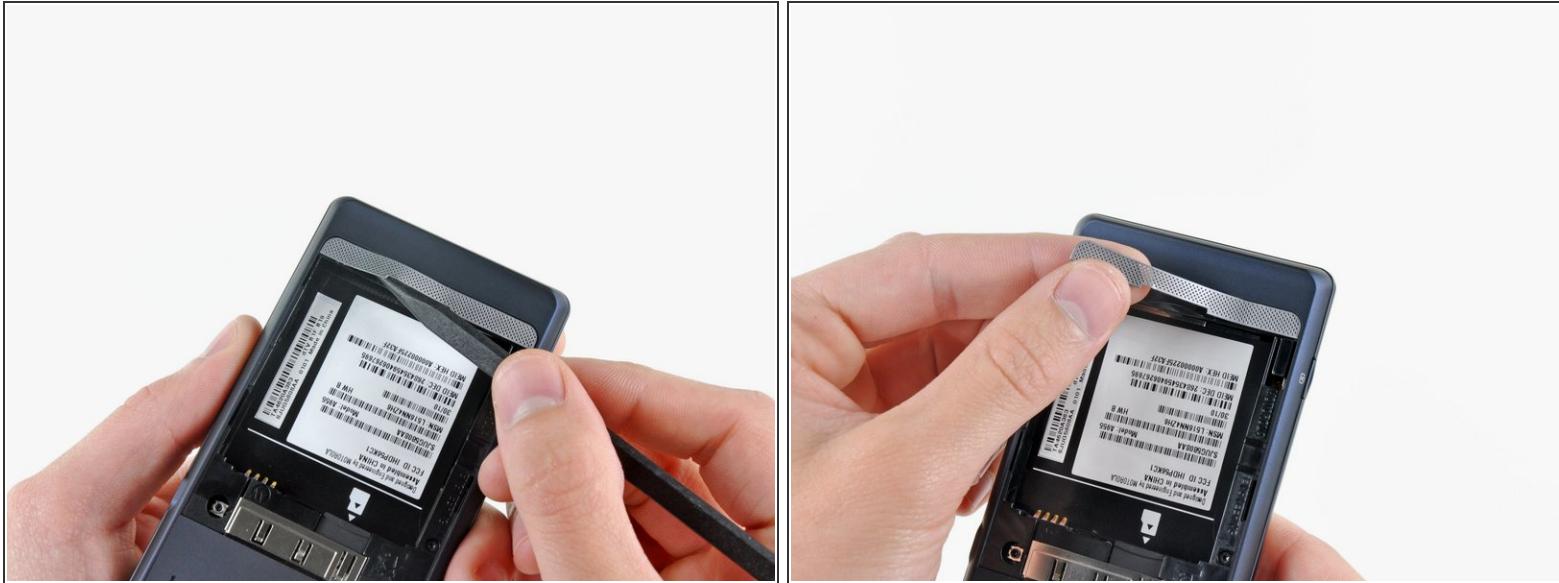

- Using the tip of a spudger, peel up one corner of the silver ribbon below the battery compartment.
- Peel the ribbon off the phone.

Step 4



- Insert the flat end of a spudger and pry the plastic camera cover up off the phone.

 The thin plastic cover is attached to the phone with an adhesive. Work slowly and carefully.

Step 5



- Use the tip of a spudger to remove the camera bezel stuck to the rear case.

Step 6



- Remove the seven 5.5 mm T5 Torx screws securing the rear case to the inner case.

Step 7




- Insert the flat end of a spudger and pry downwards to release the plastic tab holding the rear case to the motherboard screw.

Step 8




- Gently insert a spudger between the rear case and front case at the top of the phone, near the audio jack.
- Carefully pry the top edge of the rear case up from the rest of the phone.

Step 9

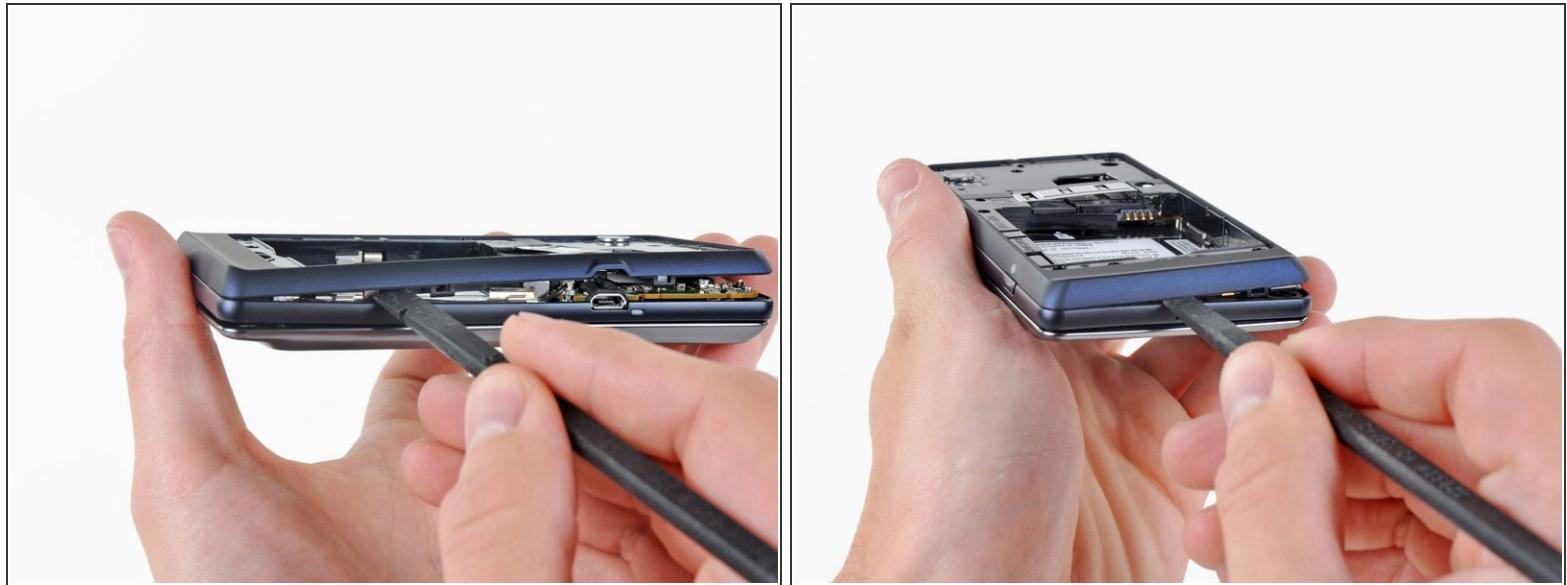

- With the spudger still inserted between the rear case and front case, slide the spudger along the right edge of the device, moving toward the bottom, prying as you go.
- Continue prying along the bottom edge of the device from right to left, freeing it from the front panel.


Step 10

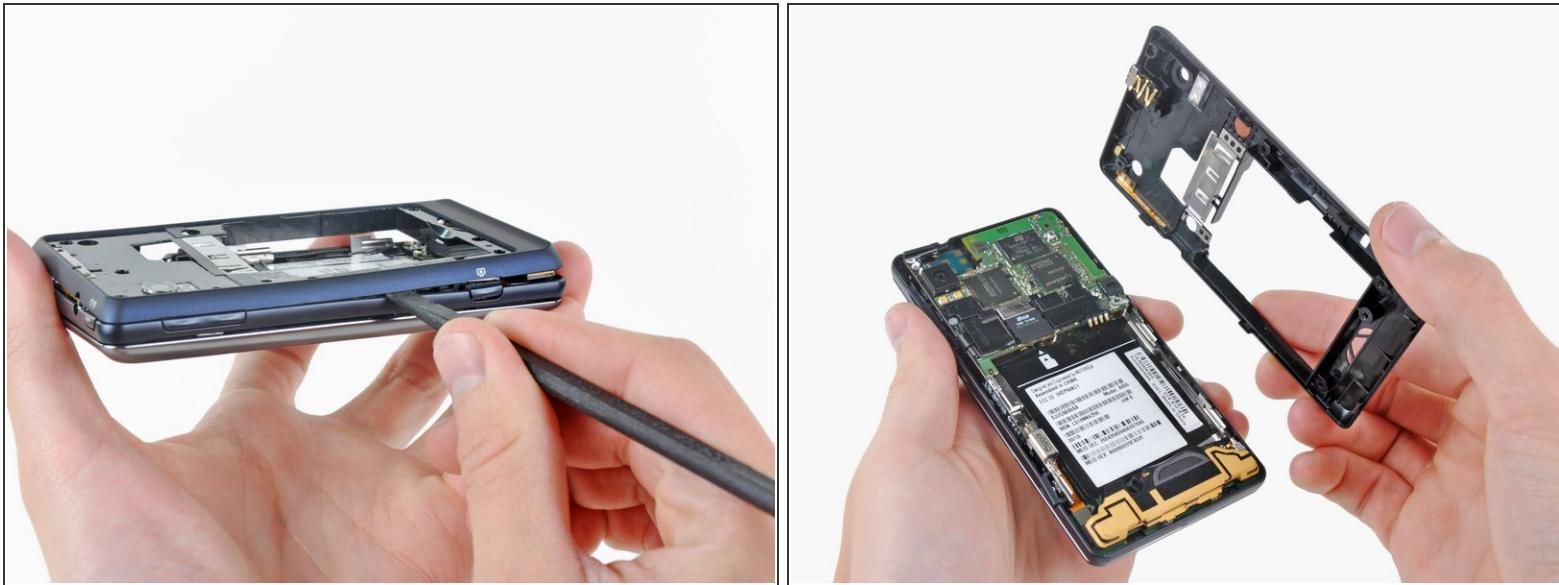

- Continue prying the rear case from the front case along the left side, moving from bottom to top.
- Lift the rear case up out of the phone.

⚠ At this point, the button covers on the side of the phone are free and may fall out if you tip the phone upside down.

Step 11 — Speaker

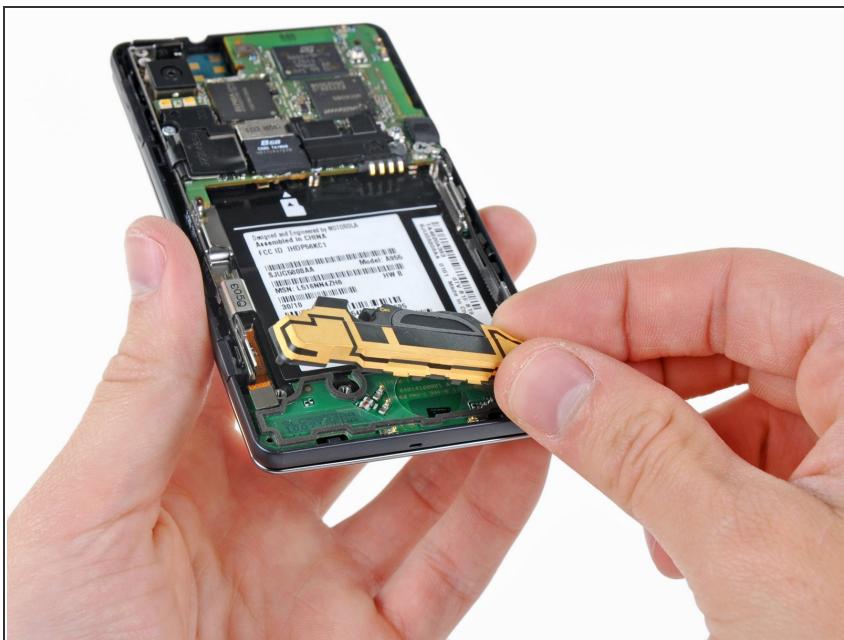

- Carefully lift the speaker/antenna assembly up and out of the phone.

☞ If you are re-assembling your phone, insert any power, camera, or volume buttons that may have fallen out at this point.

To reassemble your device, follow these instructions in reverse order.