



# Motorola Droid RAZR HD Front Panel Replacement

Guide to replace Motorola Droid RAZR HD screen and digitizer.

Written By: Brendan Baronia




## INTRODUCTION

You've shattered your screen and now you can barely use your phone without covering your hand in cuts. With this guide, you'll be able to replace that screen with a slick new one.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Front Panel Assembly

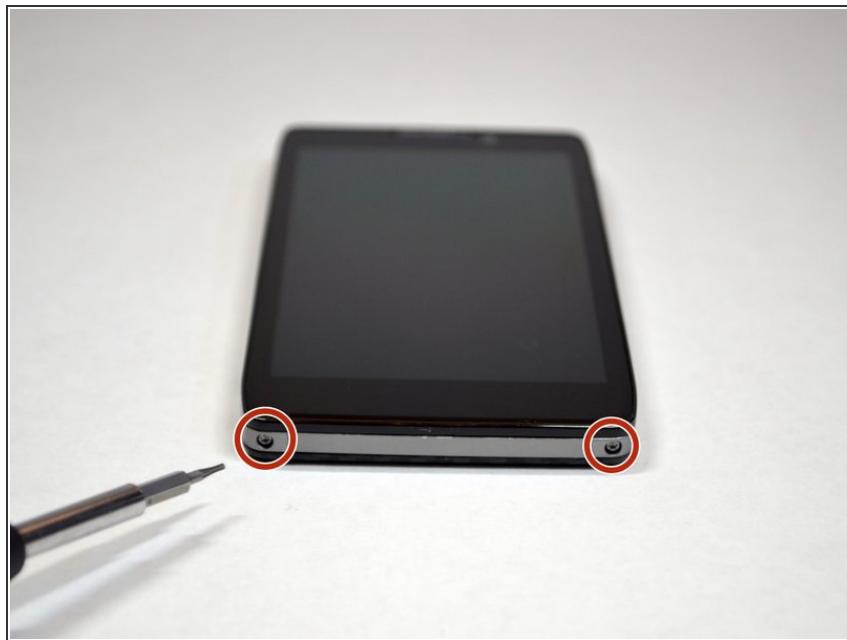

**⚠** Power off the device before disassembly to avoid damage or harm from electrical surges.

- Remove the two 4.5mm screws in the bottom left and right corners of the device using a T4 Torx Screwdriver.

## Step 2



- Holding the device in your hand, push the screen towards the top of the phone until it disconnects from the base of the phone.


## Step 3



- Use a plastic opening tool to lift the screen from the phone.

**⚠** Do not try to completely detach the screen; cables are still connected to the device and can be damaged.


## Step 4

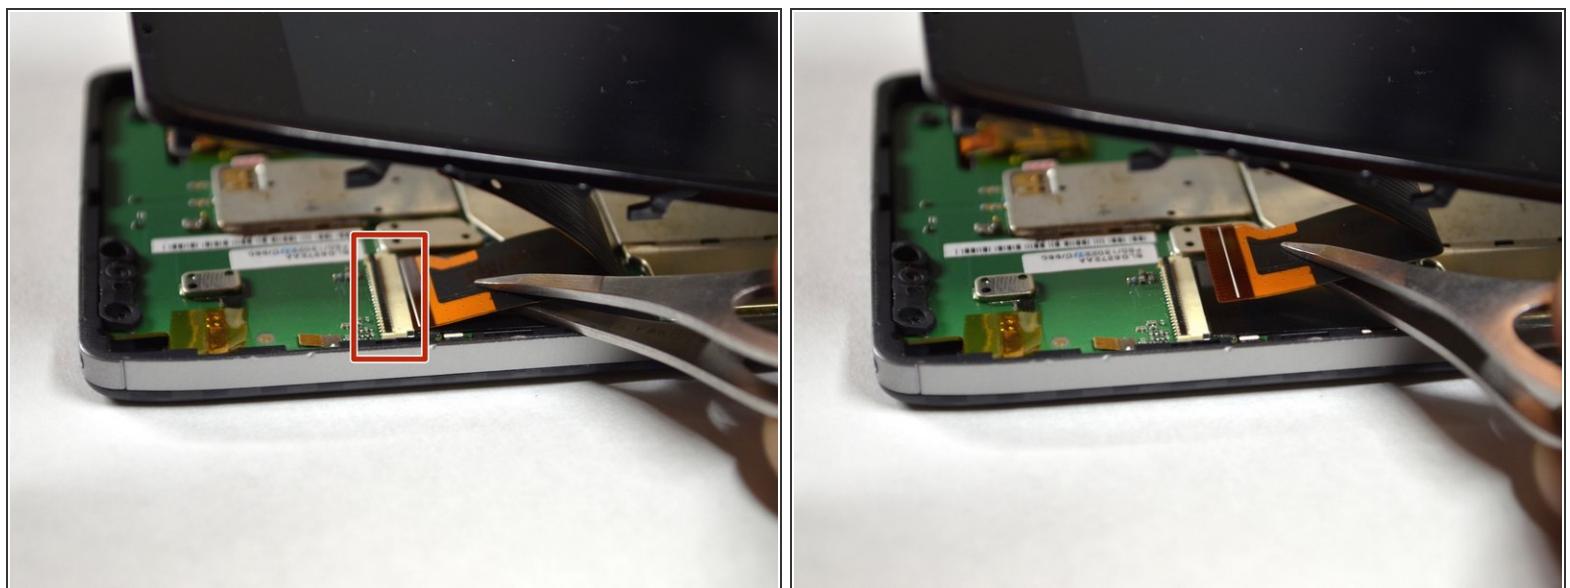

- Use tweezers to remove the yellow tape covering the lcd/digitizer cable connector.
- Carefully lift up the black locking tab to release the lcd/digitizer cable.



**i** The cable connector is located on the bottom right section of the phone.

## Step 5

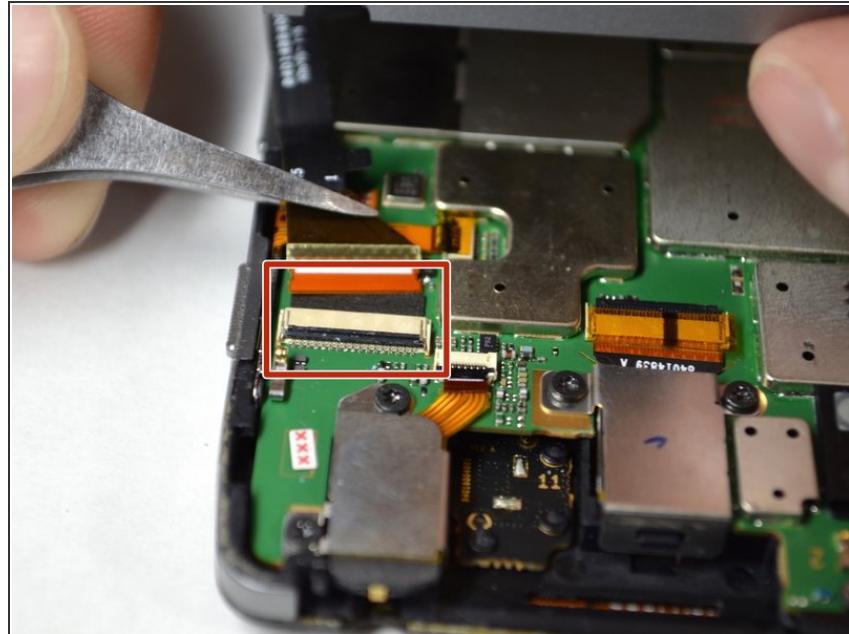



- Lift up the screen further to reveal another cable at the top of the device connecting the motherboard to the screen.
- *(i)* This connector is located on the top right section of the phone.
- Use tweezers to lift the black bar on top of the ZIF connector.
- Pull the ribbon cable out of the connector with tweezers.
- Now that there are no cables connecting the screen to the motherboard, remove the screen.

## Step 6 — Front Panel

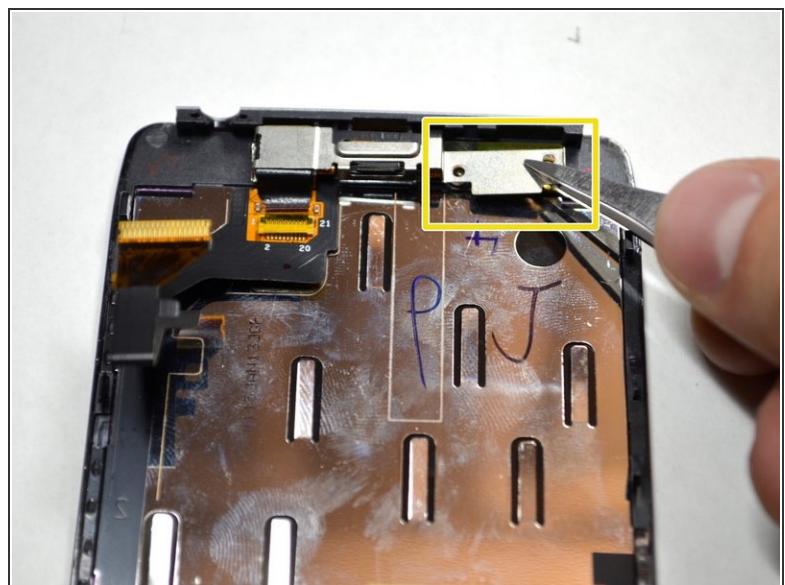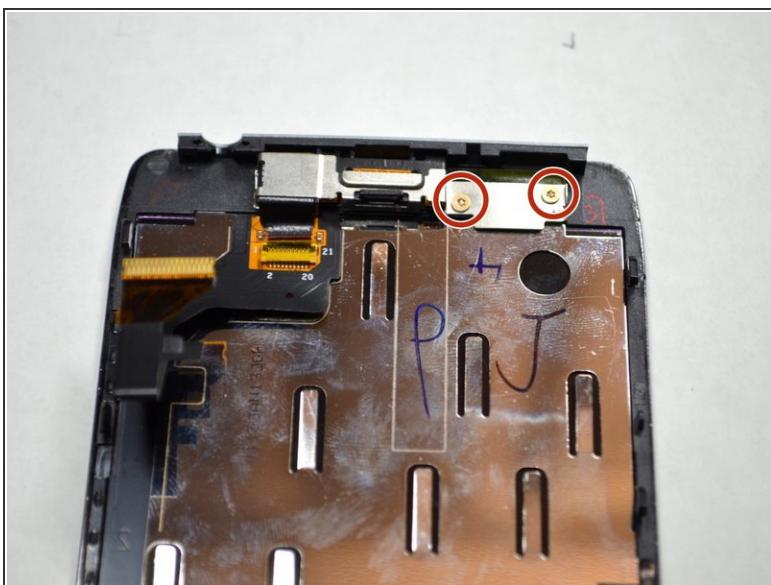

- Remove the two 2.0mm T4 Torx screws near the top of the screen.
- Remove the metal plate protecting the front camera and ear speaker with tweezers.

## Step 7

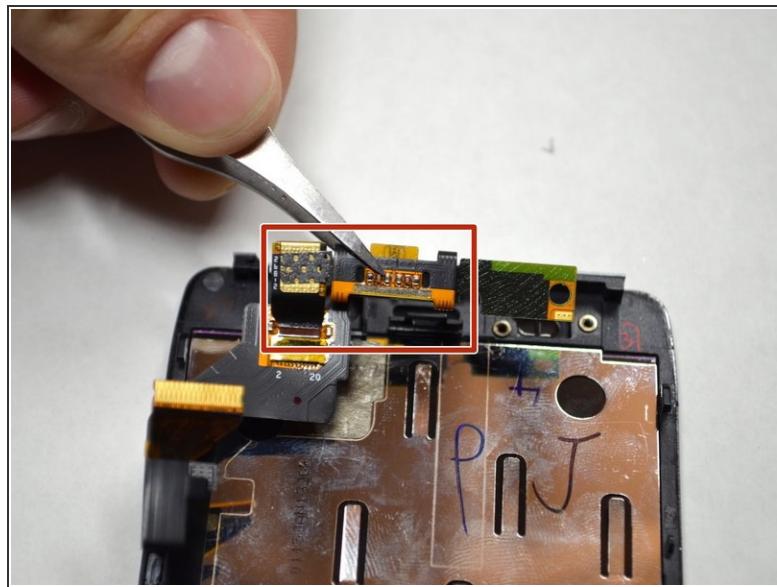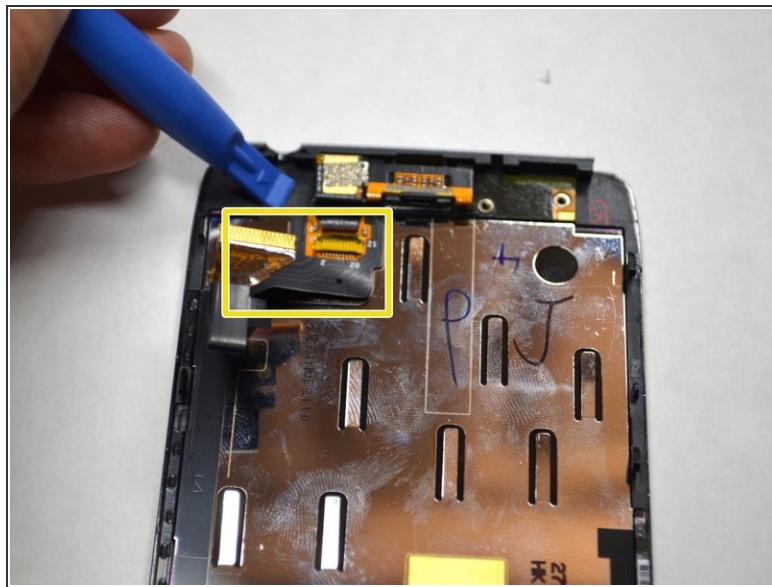

- Using a plastic opening tool, lift up the front camera and ear speaker assembly.
- Remove the assembly with tweezers.

To reassemble your device, follow these instructions in reverse order.