




Munchkinz LCD Assembly

This guide will show how to replace the screen in a Supersonic Munchkinz tablet.

Written By: David Wood

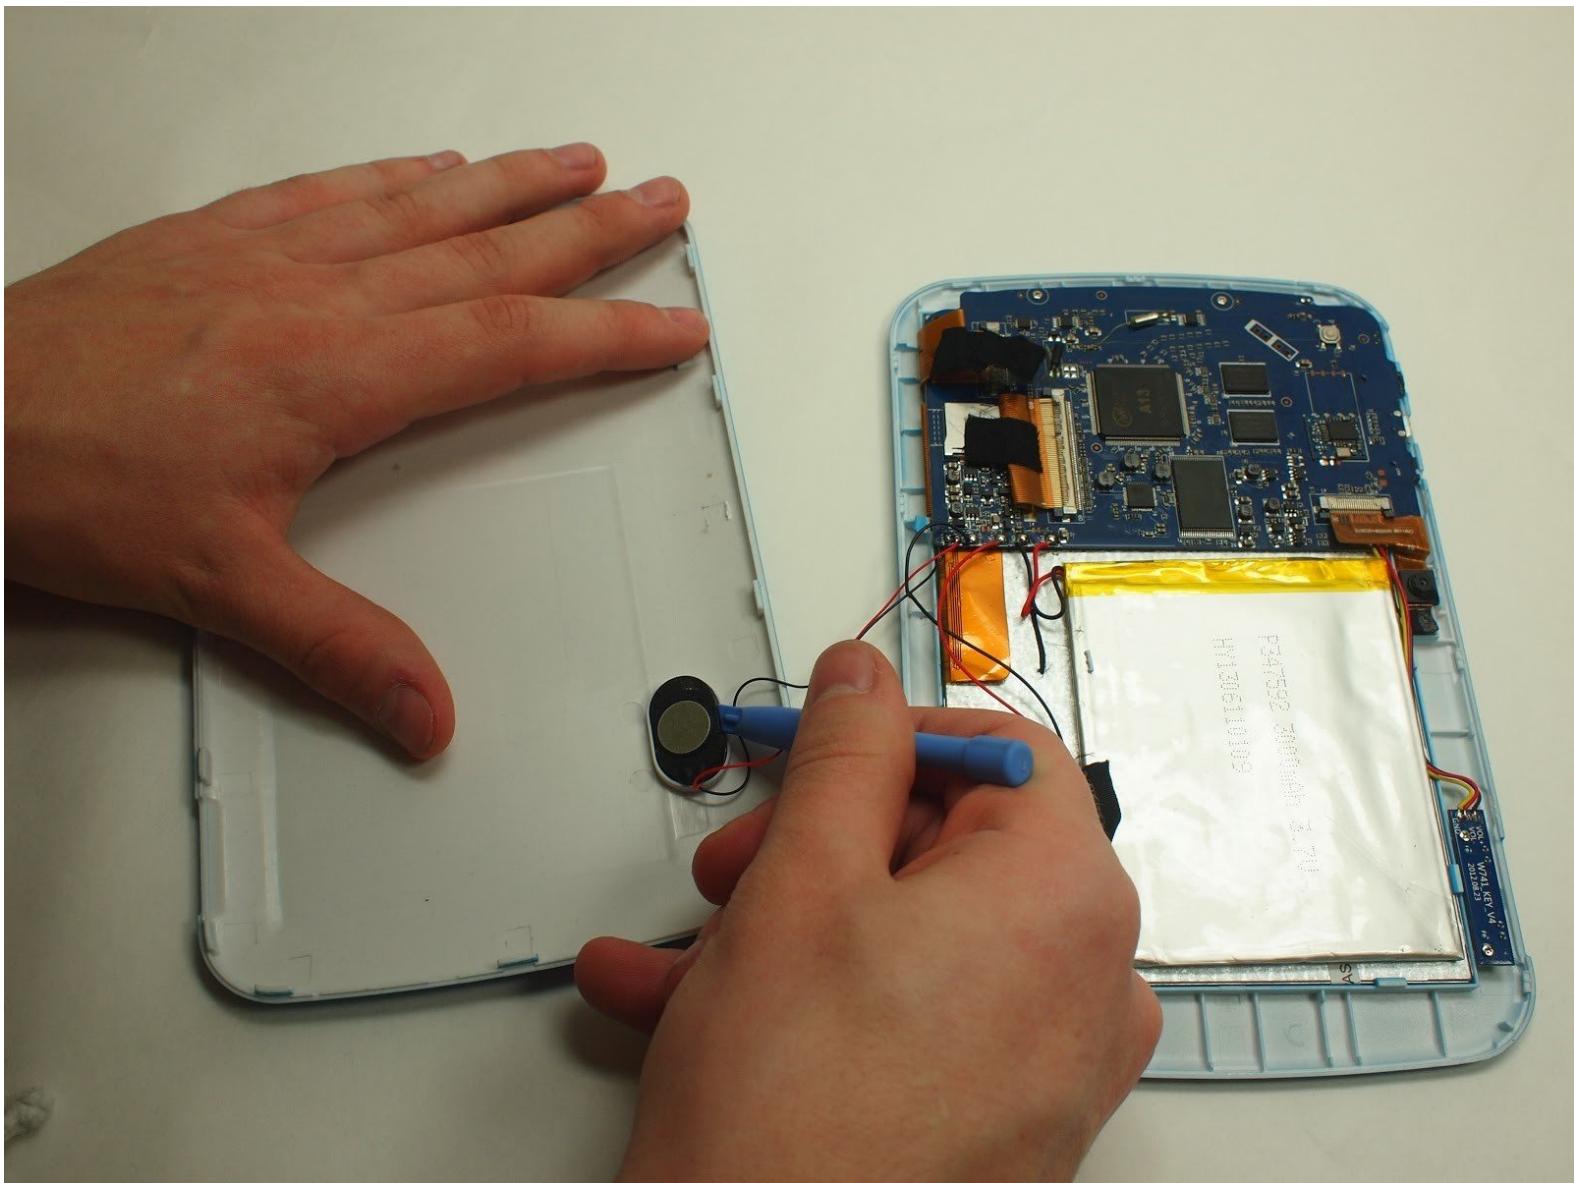


INTRODUCTION

If your screen is not working properly follow this guide to replace it.

TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)


Step 1 — Opening Device

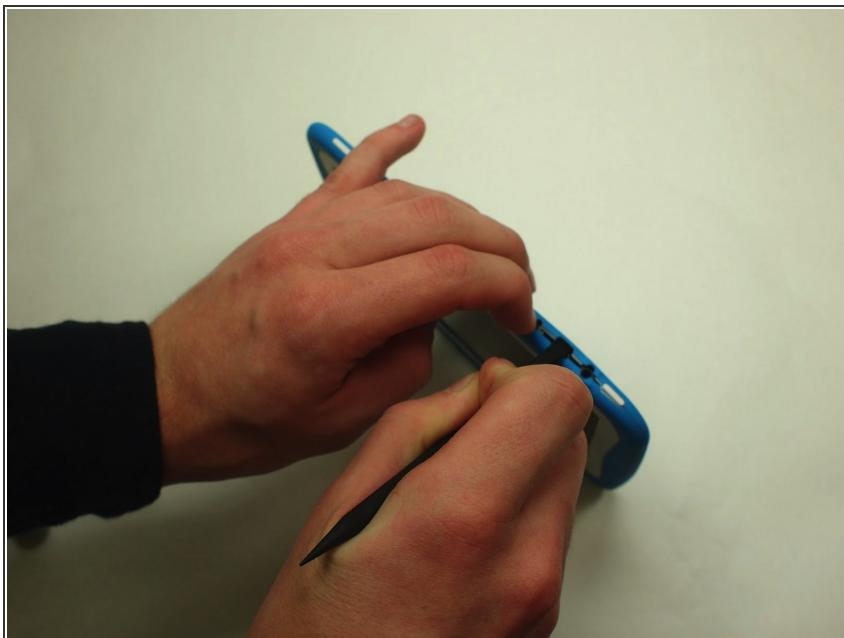

- Insert spudger into the USB Micro slot and pry the case apart.

 Be careful not to go too deep and bend the prong inside the Micro USB port.

Step 2 — Pry Device Apart

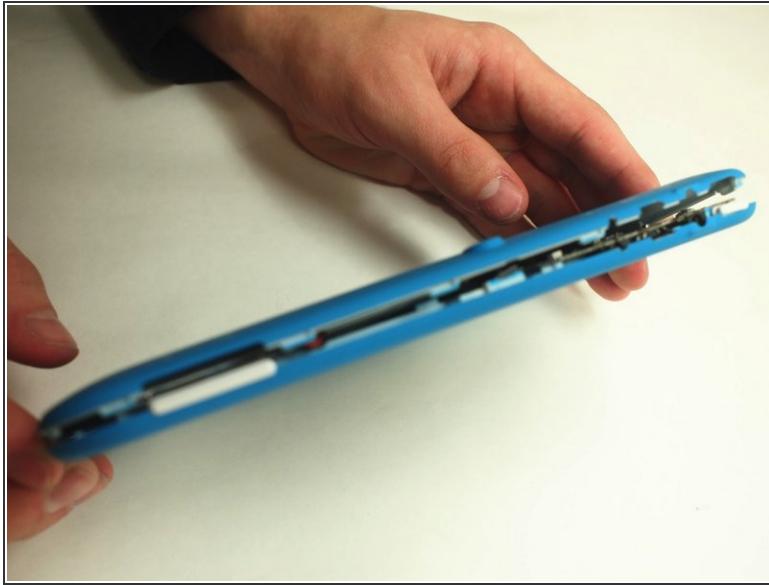

- Slide the wide plastic opening tool across the seem, separating it if you can't pry the device open using just the spudger.

 Gently separate the case so none of the cords inside are disconnected

Step 3 — Separated Device




- After prying the device apart, it should look like this.

Step 4 — Remove Speaker





- Use the plastic opening tool to remove the speaker from the casing.

Step 5 — Pry Camera

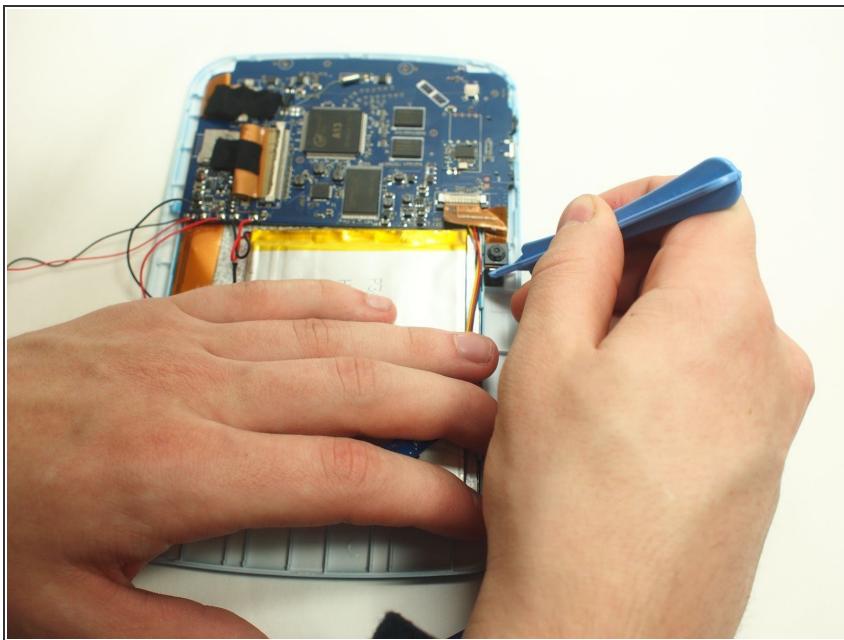


- Use the slim plastic opening tool to pry the camera from its position.

Step 6 — Unscrew Volume Module

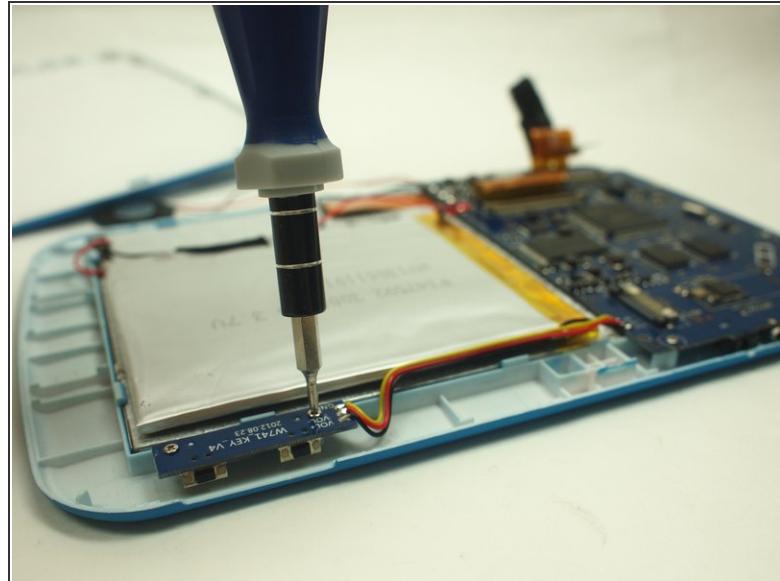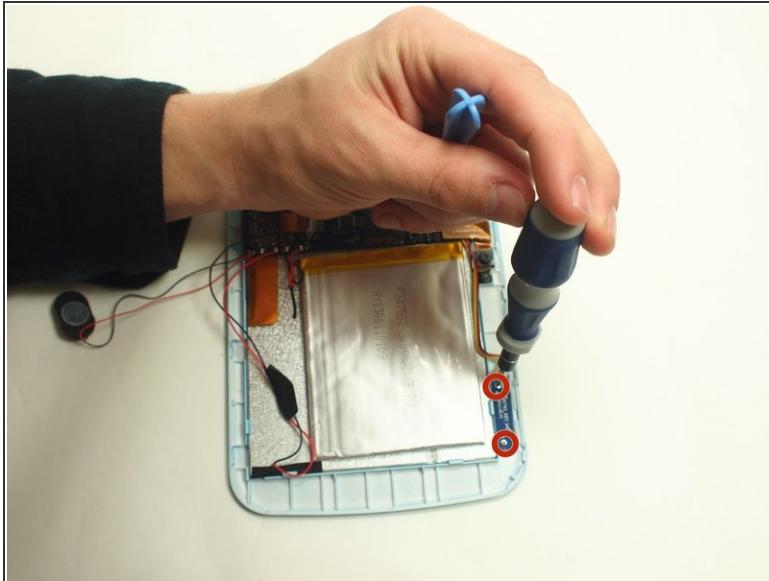

- Unscrew the two screws that hold the volume module to the casing.


Step 7 — Pry Battery

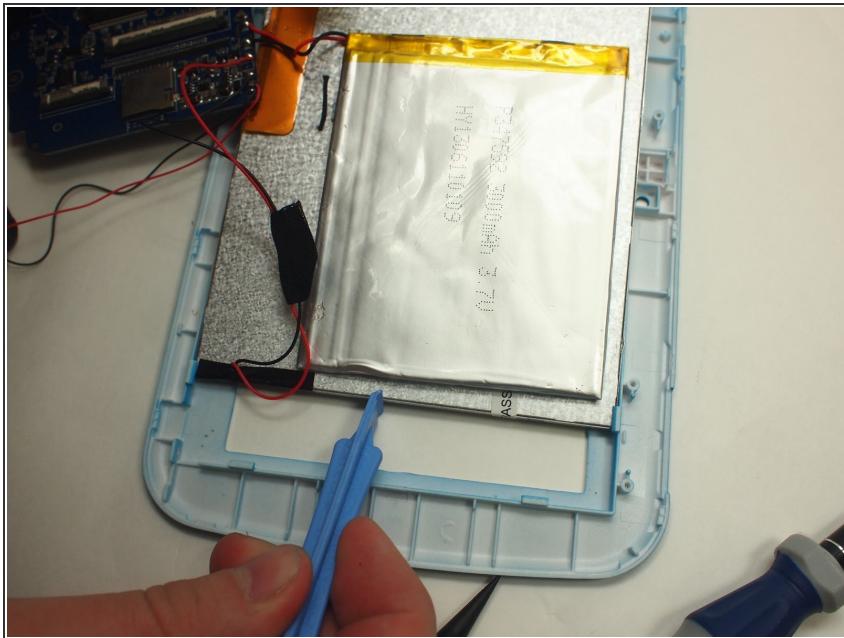

- Use the plastic opening tool to slowly pry each side of the battery up.

 Be careful not to bend the battery too much.

Step 8 — Remove Ribbons

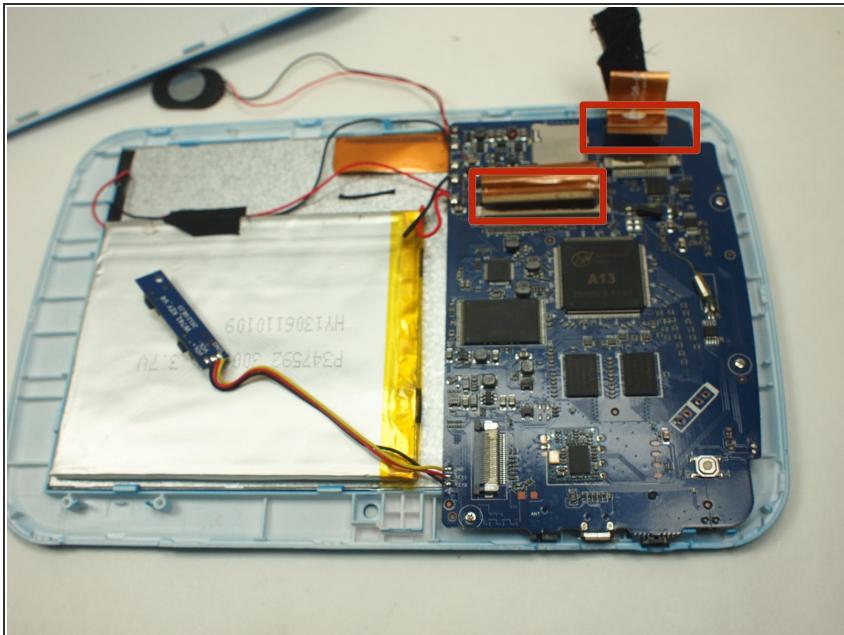


- Remove the two highlighted ribbons from the motherboard.

Step 9 — Remove Screws




- Use the screw driver to remove the highlighted screws.

Step 10 — Remove Hidden Screw

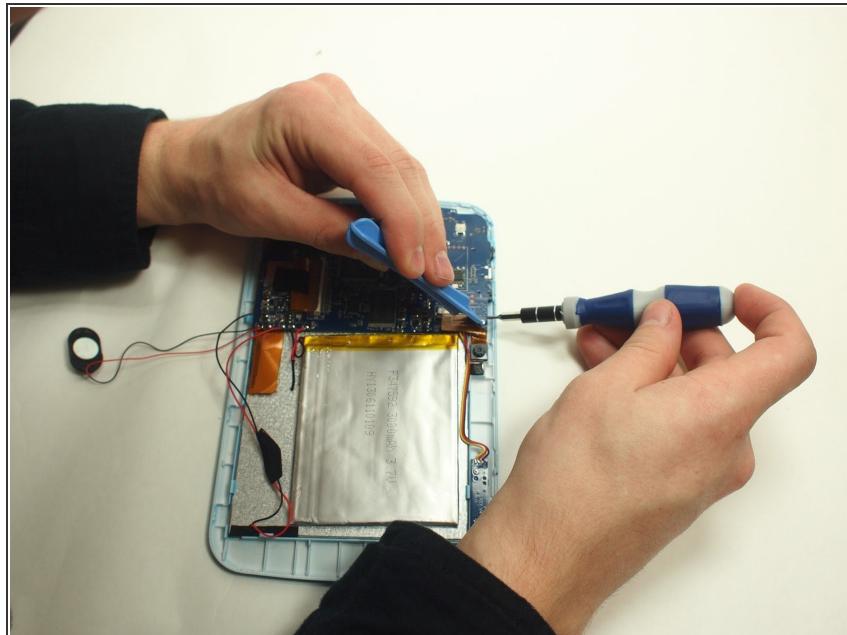


- Use the plastic opening tool to hold the camera ribbon back.
- Unscrew the screw under ribbon with the screw driver.

Step 11 — Remove Motherboard

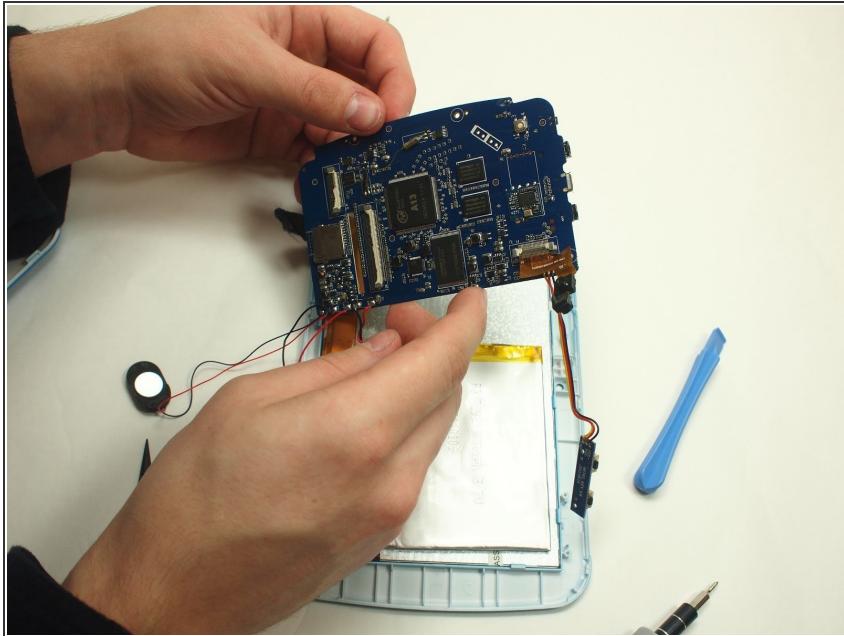


- Remove the motherboard from the casing.

Step 12 — Pry Up Screen

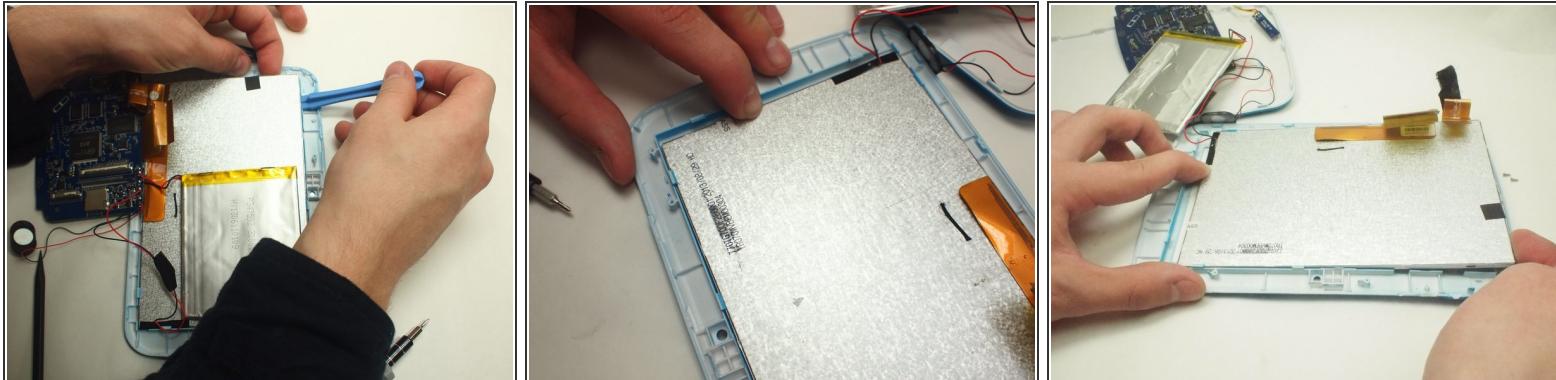

- Oriented the device so the battery is closest to the user.
- Use the plastic opening tool to pry the clips up to release LCD screen.
- Gently lift the northern end of the screen and slide it out horizontally.

Step 13 — Solder LCD Wires

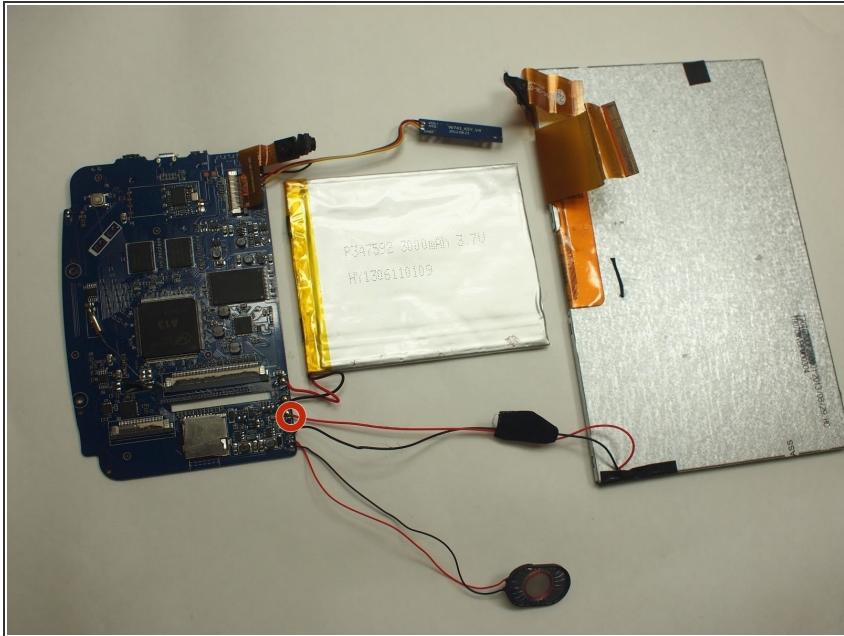

- Unsolder the black and red LCD wires.

To reassemble your device, follow these instructions in reverse order.