




# Munchkinz Speaker Replacement

Here is a step by step guide to replace the speaker in a Supersonic Munchkinz tablet

Written By: David Wood

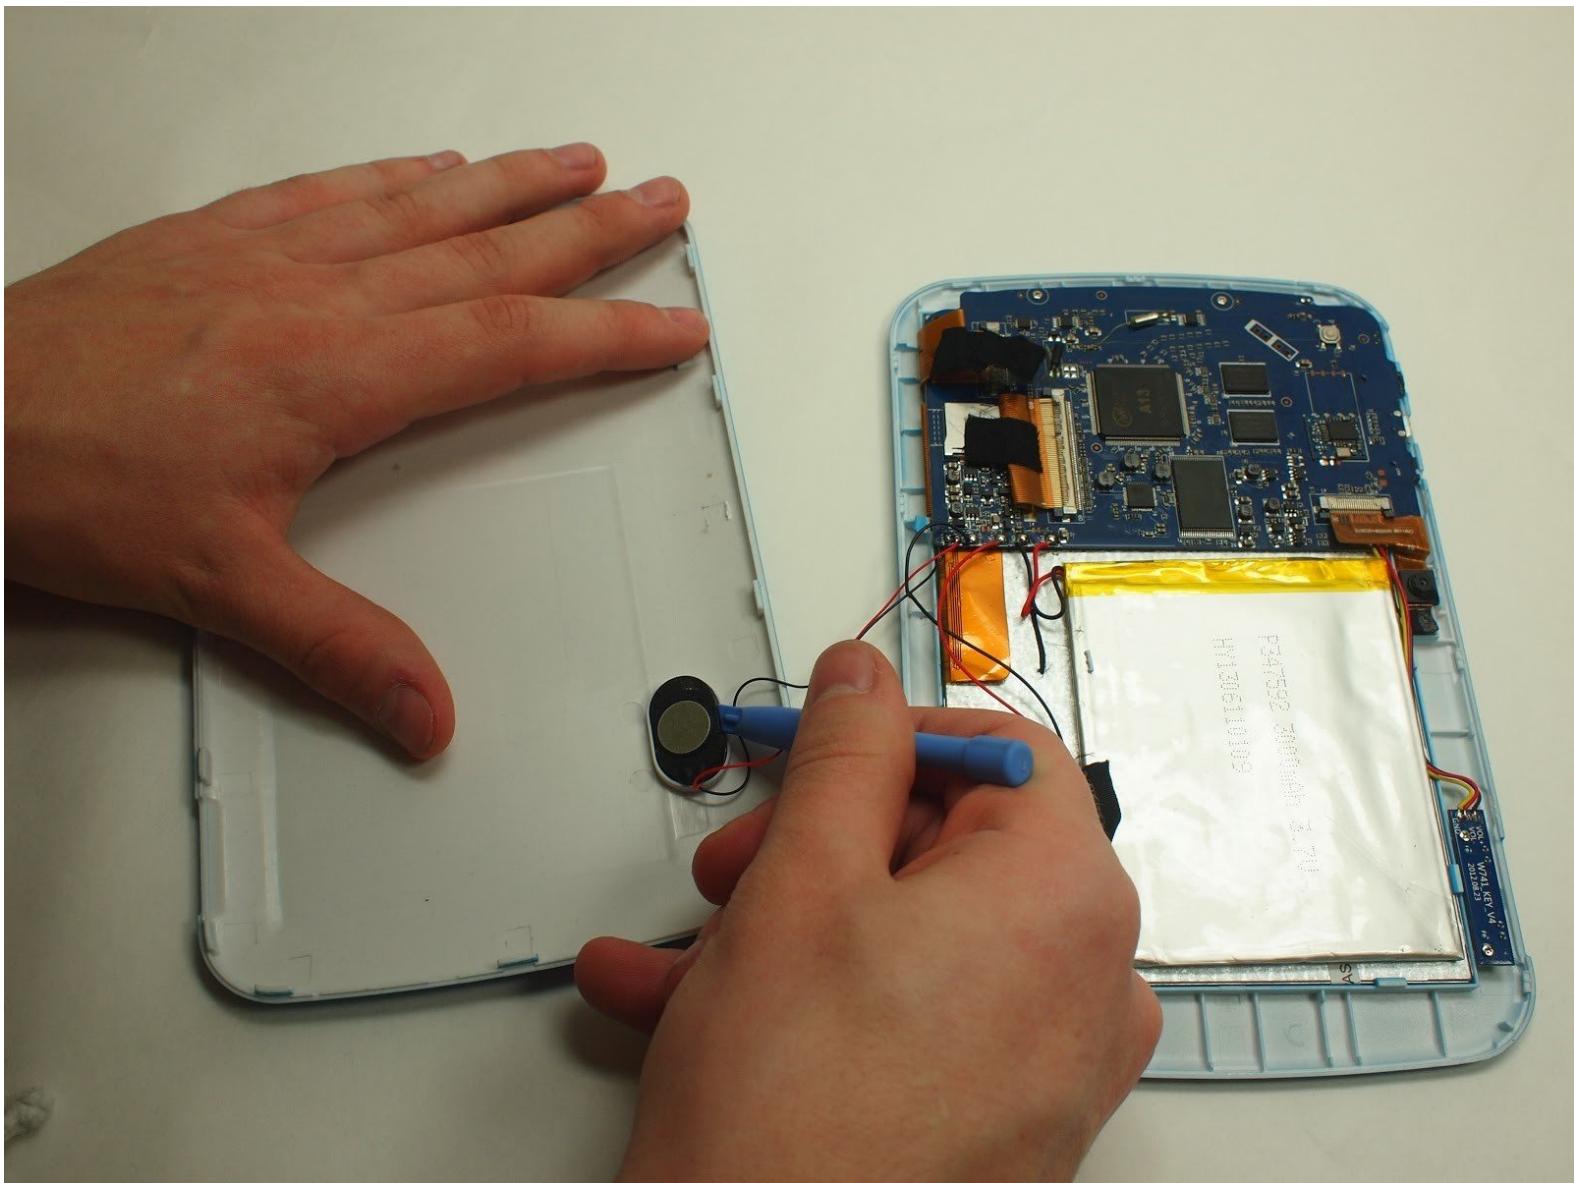


# INTRODUCTION

If your speaker in not functioning correctly, follow this guide and replace the speaker.

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)


## Step 1 — Opening Device

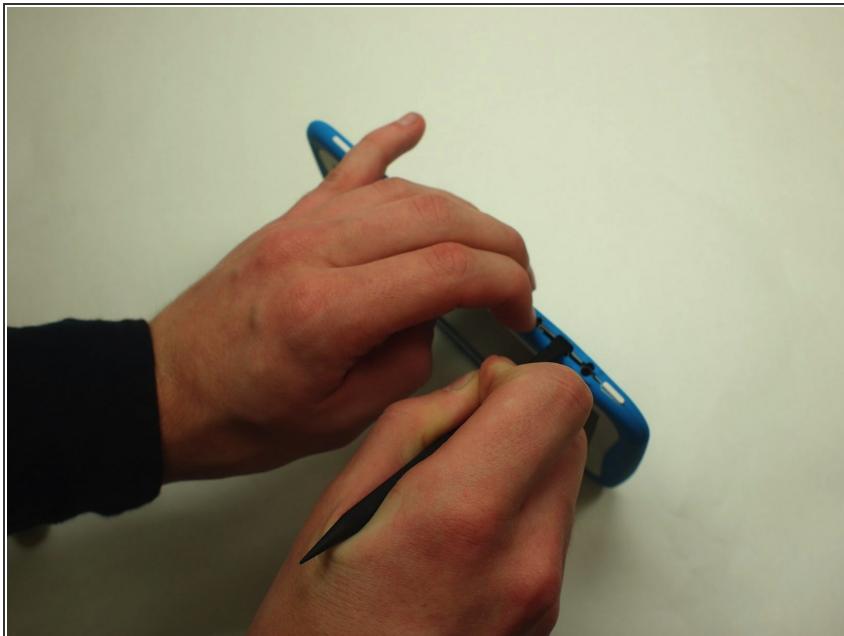

- Insert spudger into the USB Micro slot and pry the case apart.

 Be careful not to go too deep and bend the prong inside the Micro USB port.

## Step 2 — Pry Device Apart

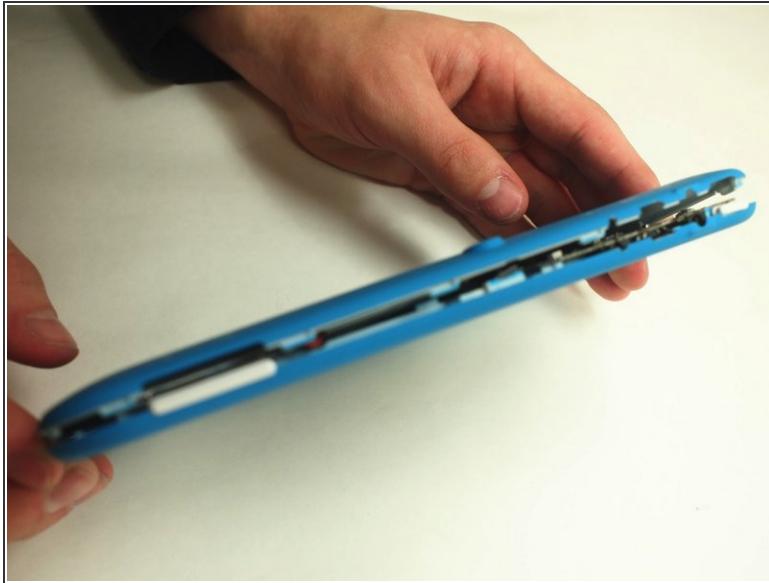

- Slide the wide plastic opening tool across the seem, separating it if you can't pry the device open using just the spudger.


 Gently separate the case so none of the cords inside are disconnected

## Step 3 — Separated Device



- After prying the device apart, it should look like this.

## Step 4 — Pry Speaker

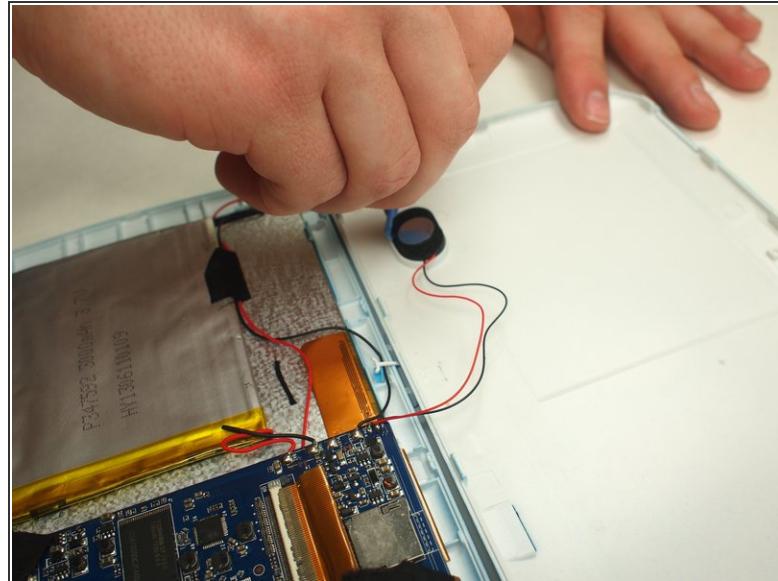


- Use the slim plastic opening tool to remove the speaker from its position on the case.

## Step 5 — Locate Wires



- Locate the red and black wires that connect the speaker to the motherboard.

## Step 6 — Solder Wires

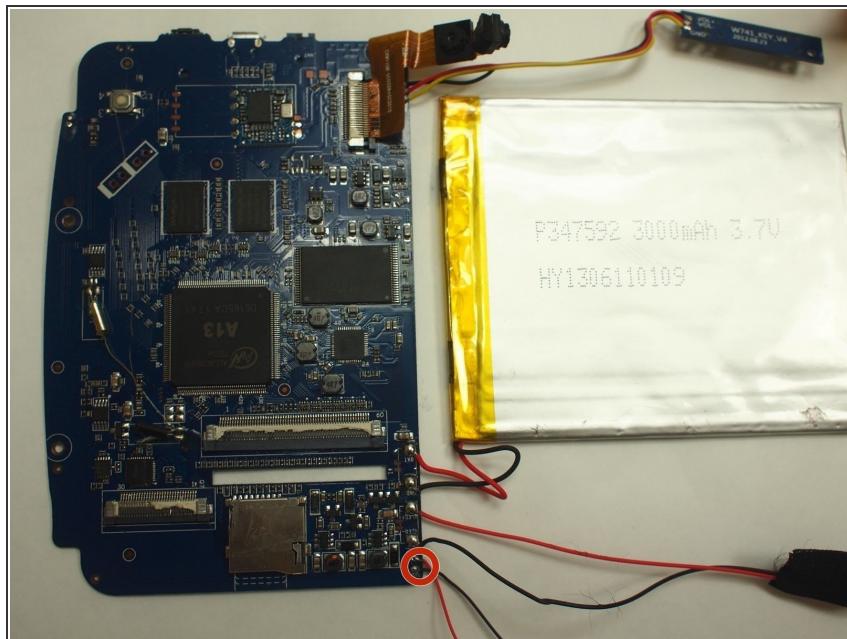

- Un-solder the red and black speaker wires that are connected to the motherboard

To reassemble your device, follow these instructions in reverse order.