



Nabi 2S Camera Replacement

Use this guide to remove the camera of your device.

Written By: Molly Scott



INTRODUCTION

This guide will aid you in the process of removing the camera of the device. This is useful in replacing a broken or dis-functioning camera.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Nabi 2S Disassembly



- Remove the red rubber case from the device.

Step 2



- Make sure the screen is facing away from you and the back cover is facing you.
- Using a Phillips #0 Screwdriver, unscrew the 3mm screws counter-clockwise in each corner of the plastic back cover. It will be a total of four screws. The smaller case on the back cover is attached to the main cover so it will not need to be removed.

Step 3



- Using the plastic opening tool, remove the case.

i Removing the case will take a bit of effort and force. We recommend using two hands and if possible another person to help. It will require some gusto.


i It is helpful to pry at the corners first to loosen the case.

Step 4



- After the back case is loosened, remove it from the device to change or access the battery.

Step 5 — Camera

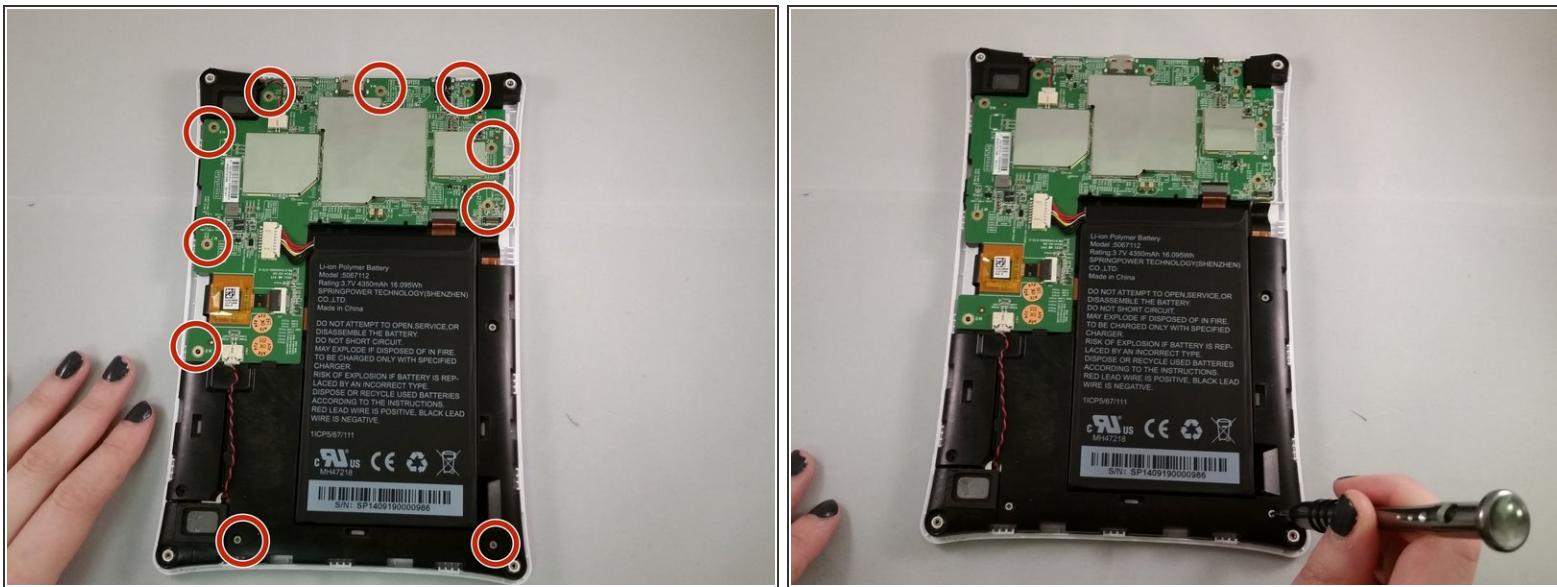

- Unscrew the circuit board from the motherboard by using a Phillips #0 screwdriver to unscrew the ten 4mm screws in a counter-clockwise rotation.

Step 6



- The camera is attached to the circuit board and then tucked underneath. Gently grip the part attached to the circuit board and pull it up and away from the circuit.
- Gently slide the camera out from underneath the circuit board.

(i) The camera is stuck to the device with adhesive tape so do not rapidly remove it.

To reassemble your device, follow these instructions in reverse order.