



Neato Botvac 80 Battery Replacement

This guide will help you to remove the battery from your Neato Botvac 80.

Written By: Alexander Silfa



INTRODUCTION

This guide will show you how to replace a faulty battery.

TOOLS:

- Philips Head Screwdriver: Size J1 (1)

PARTS:

- Neato Botvac 70e, 75, 80 and 85 Replacement Battery (1)

Step 1 — Battery



- To begin, locate the battery cover that is located underneath the device.
- You will need to remove the 22.5mm bolts with a J1 Torx screwdriver.
- *(i)* Screws cannot be removed from the cover.

Step 2



- Gently lift to remove battery cover.

Step 3



- Locate battery clip.
- Press down on latch with thumb and slide clip back.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.