



Neato Botvac 80 Brush Replacement

Use this guide to remove the brush on your Neato Botvac 80.

Written By: Brandon Blank



INTRODUCTION

Fix your robot's poor cleaning capabilities by cleaning/ replacing your brush.

This guide instructs you to detach the brush guard; this is intended to prevent damage to the actual brush and brush motor. Then replacement of the brush will be simple!

TOOLS:

- **T10 Torx Screwdriver (1)**

Step 1 — Brush



- To begin, turn the Neato Botvac 80 upside down and locate the brush.
- You will need to remove the four 10mm bolts with a T10 Torx screwdriver.

Step 2



- Find the two inlays in front of the wheels and pull them to release the brush guard.

Step 3



- Remove brush by pulling out and to the side.

To reassemble your device, follow these instructions in reverse order.