



Neato Botvac D75 Battery Replacement

Procedures to remove the battery from the Neato Botvac D75.

Written By: Juan Cornejo



INTRODUCTION

The battery is made from Nickel Metal Hydride (NiMH) with 3600mAh battery capacity and 12 Volt DC.



TOOLS:

- Phillips #1 Screwdriver (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

PARTS:

- Neato Botvac 70e, 75, 80 and 85 Replacement Battery (1)


Step 1 — Battery

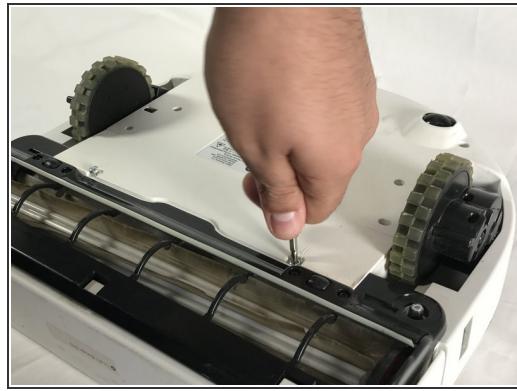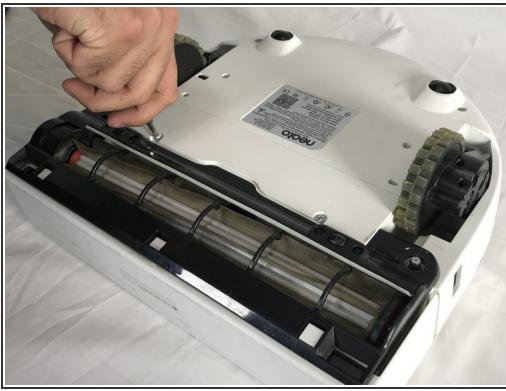

- Use Phillips #1 screwdriver to unscrew the two bottom cover screws

Be careful, the screws are self-retained on the cover itself and does not come off the battery cover.

Step 2

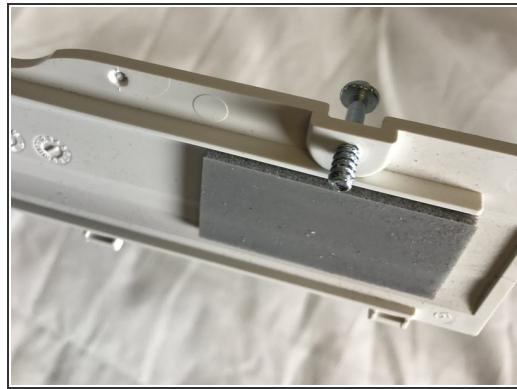

- Lift battery cover out.

Step 3



⚠ Be careful when taking out the battery. Do not pull on the wires or battery trying to get the connector out.

- The cord has prongs on it that are a little difficult to get out. Use a flathead screwdriver to press the release tab on the connector to remove it.

To reassemble your device, follow these instructions in reverse order.