



Neato Botvac D8000 Air Filter Replacement

This guide provides information on the replacement of the air filter.

Written By: Diana Leal



INTRODUCTION

This is a step-by-step instruction guide on how to replace the air filter. This may be needed if robot is not collecting dust or may need a cleaning.

Step 1 — Air Filter



- Grasp the top latch of the filter cover and gently lift up to reveal the air filter.

Step 2



- After you take out the holster from the robot, pull the tab to remove the filter.

Step 3



- Once the filter has been completely removed, you may clean or replace the filter.

To reassemble your device, follow these instructions in reverse order.