


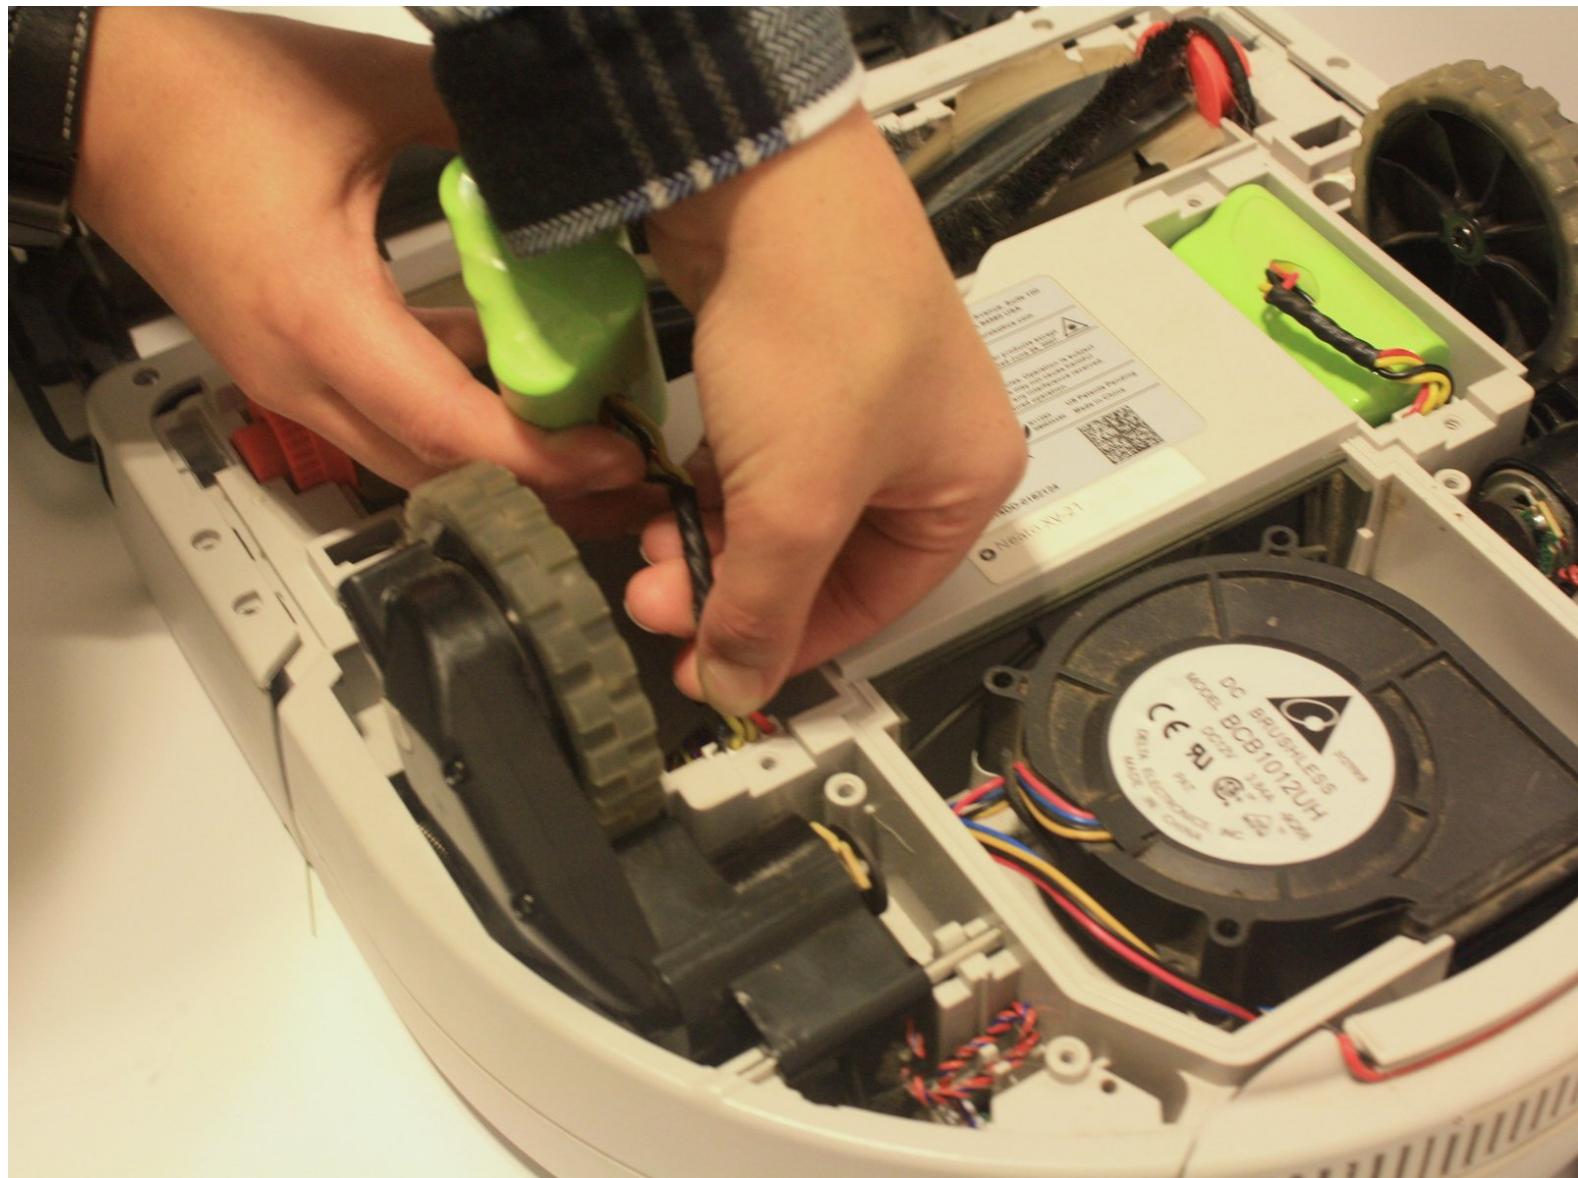

# Neato XV-21 Battery Replacement/Removal

Use this guide to replace batteries in your Neato XV-21 robot.

Written By: Fernando Aguilar



## INTRODUCTION

This guide will show how to replace the dead, dying, or faulty batteries in your Neato XV-21.


### TOOLS:

- Phillips #0 Screwdriver (1)

### PARTS:

- [Neato XV Series Replacement Batteries \(1\)](#)

## Step 1 — Back Panels of Neato XV-21

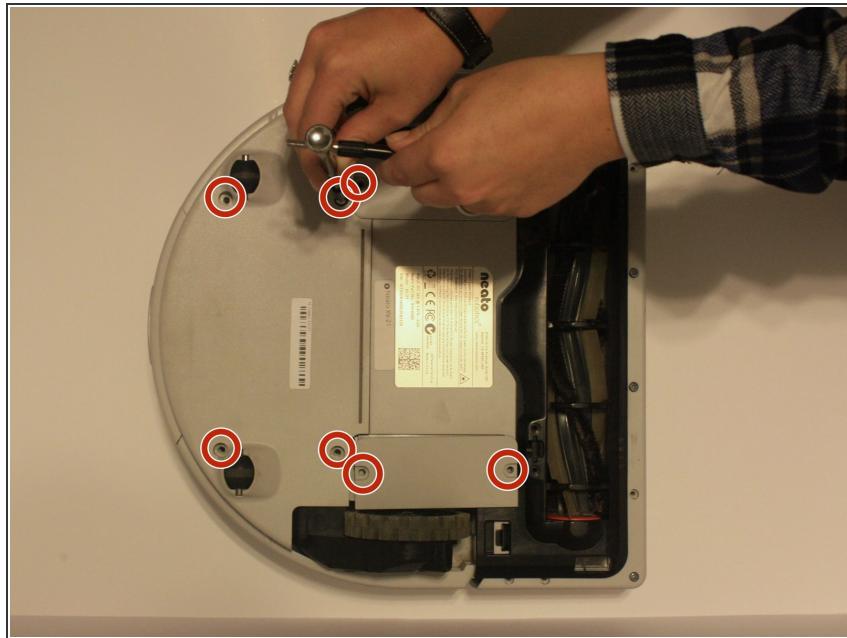

- Flip the Neato on its back so the bottom is exposed
- Unscrew the seven screws.


## Step 2



- Lift the panels to reveal the batteries, brush and fan


**i** There should be little to no resistance during this step, do not continue if the pieces do not separate easily

## Step 3

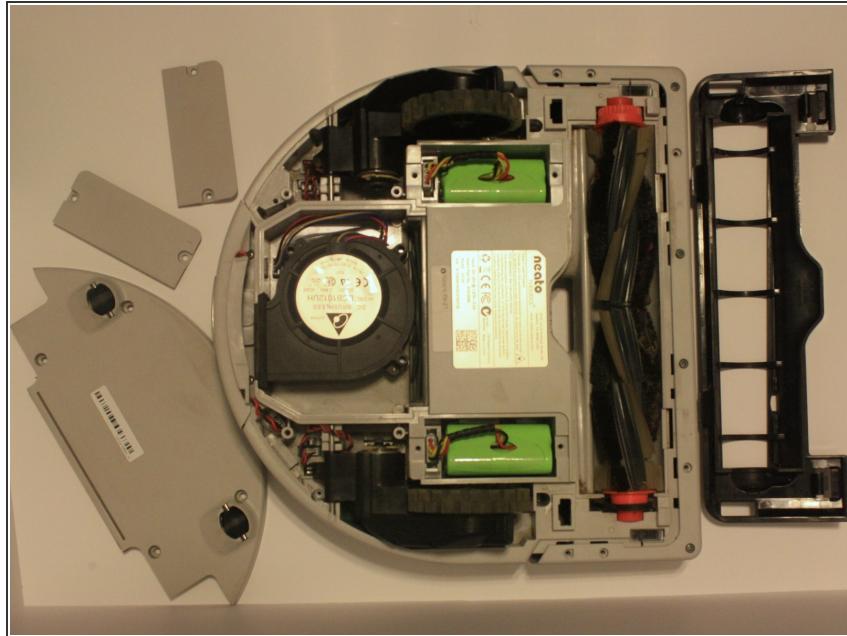

- The Neato's core components are now exposed and ready to be cleaned and/or replaced.

## Step 4 — Battery

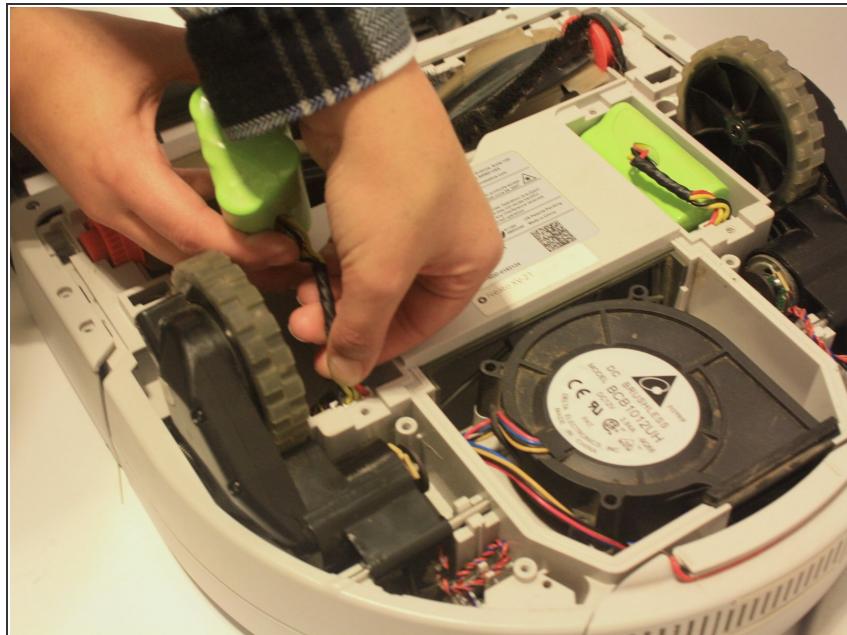

- Pinch and pull the white connector to disconnect the battery from the device

**⚠** Failure to complete this step could cause electric shock or later complications

- Lift and remove the battery from the cavity

**i** If replacing the battery, make sure to use proper disposal methods.

To reassemble your device, follow these instructions in reverse order.