




# Nerf Dart Tag Furyfire Trigger Replacement

This guide will show you how to remove and replace the trigger within the device.

Written By: Bradley Penrow

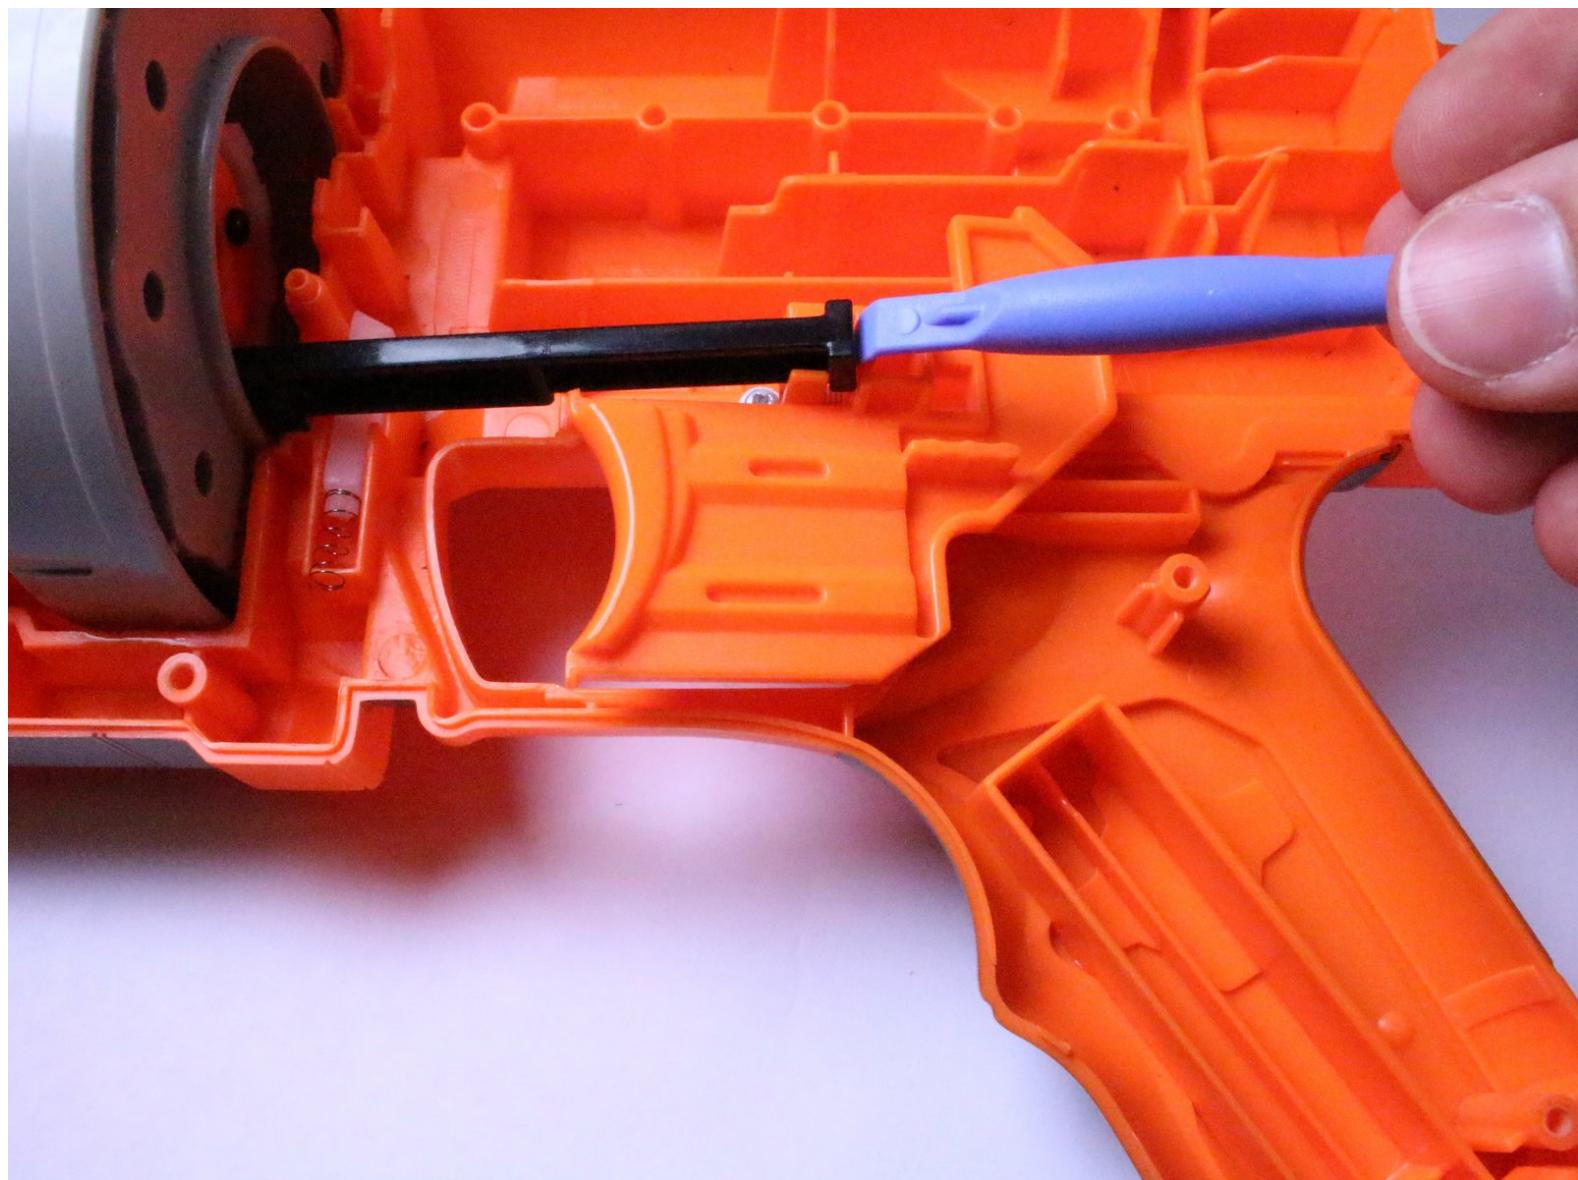

## INTRODUCTION

In this guide you will learn how to remove and readjust the trigger of the device. Learning to do so will assist you with trouble shooting problems such as the sticking of the trigger when operating the device. This problem is usually caused by clogging of foreign objects within the device, spring malfunction, or misaligned pieces.

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Remove the screws



- Using a 00 Phillips screwdriver, remove all screws from the front panel. The screws have a length of .95 cm.

## Step 2 — Remove Panel



- After the screws have been removed, gently lift the panel from the gun and set it aside.

## Step 3 — Remove Black Cylinder



- Locate the black cylinder connected to the large spring near the top of the device.
- Once located, push the black cylinder against the spring and lift it out of the device.


## Step 4 — Remove Spring



- Using your hand, lift the large spring and attached plastic stabilizing piece out of the gun and set aside.


**⚠** Ensure that the small spring connected to the stabilizing piece remains connected.

## Step 5 — Remove Pump Handle

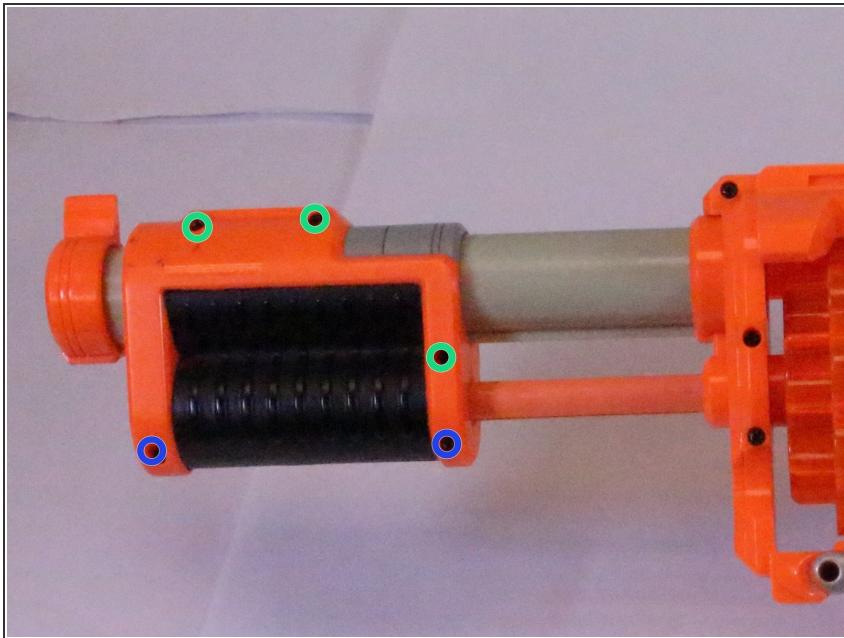


- Remove the two screws circled in blue. They are .95 cm in length.
- Remove the three screw circled in green. They are .7 cm in length.

## Step 6 — Remove the Pump Handle

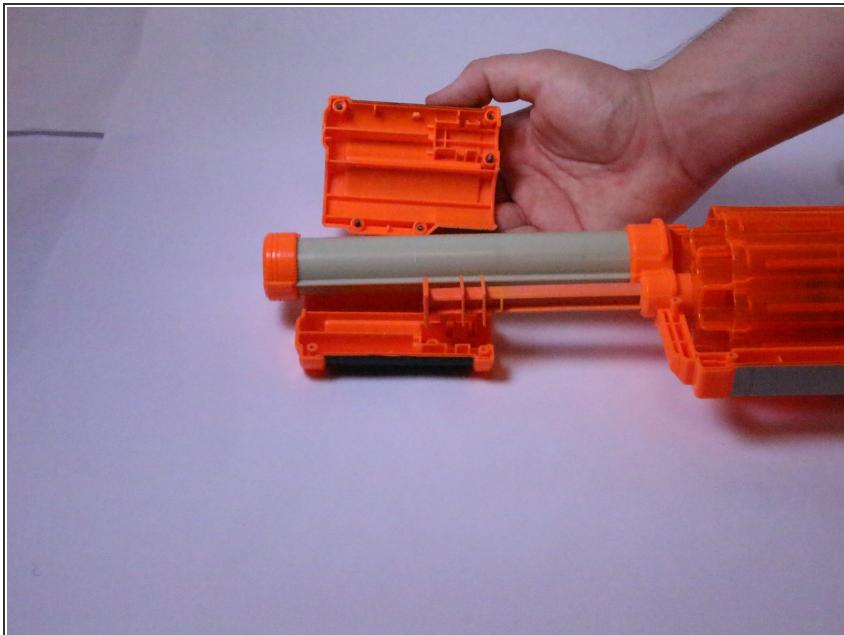


- Once all of the screws have been removed lift the pump handle off and set it aside.

## Step 7 — Remove Attached Spring

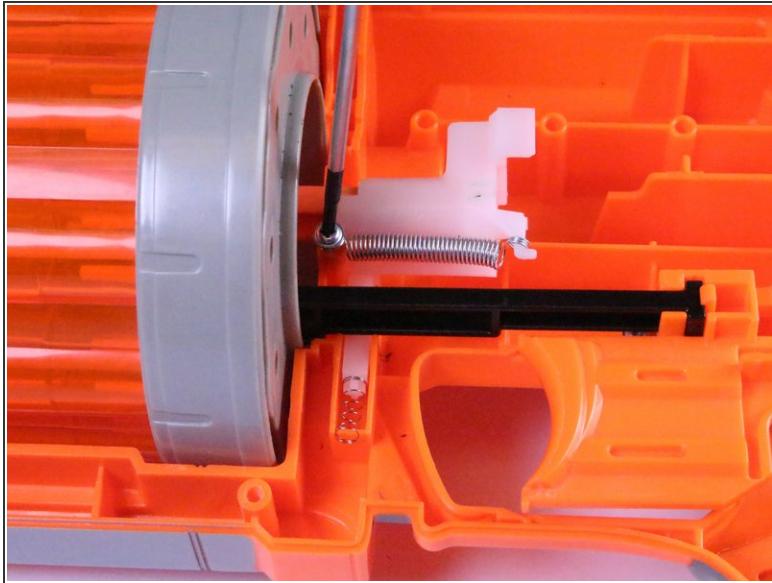

- In order to remove the white plastic holder, you must remove the spring that keeps it in place. Using a 00 Phillips screwdriver, carefully remove the screw while holding the spring in place.

## Step 8 — Disengage White Piece

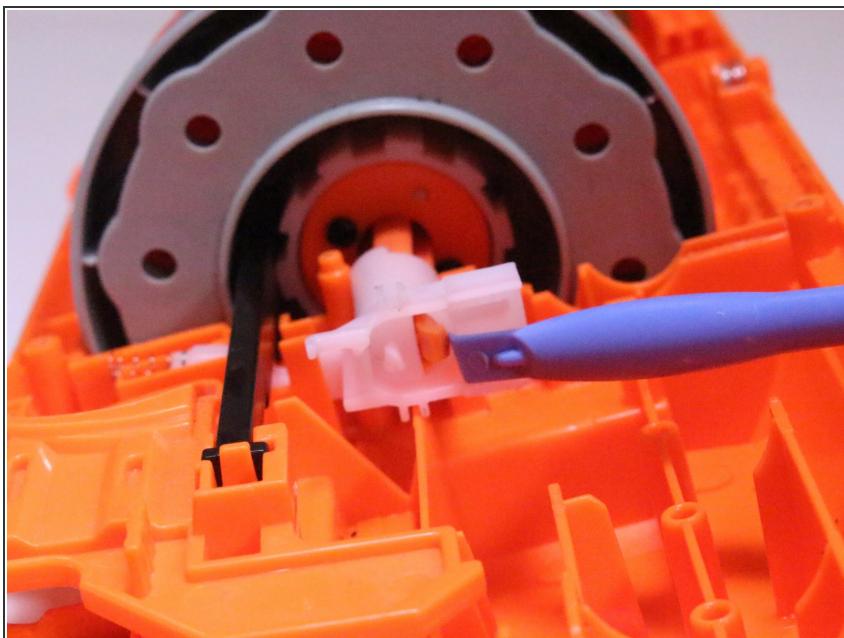


- Using a plastic opening tool, lift the white piece out of the gun and set it aside.

## Step 9 — Remove the Pump Track



- Using your hand, slide the track out of the gun by pulling it away from the device.

## Step 10 — Detach Black Piece from Trigger

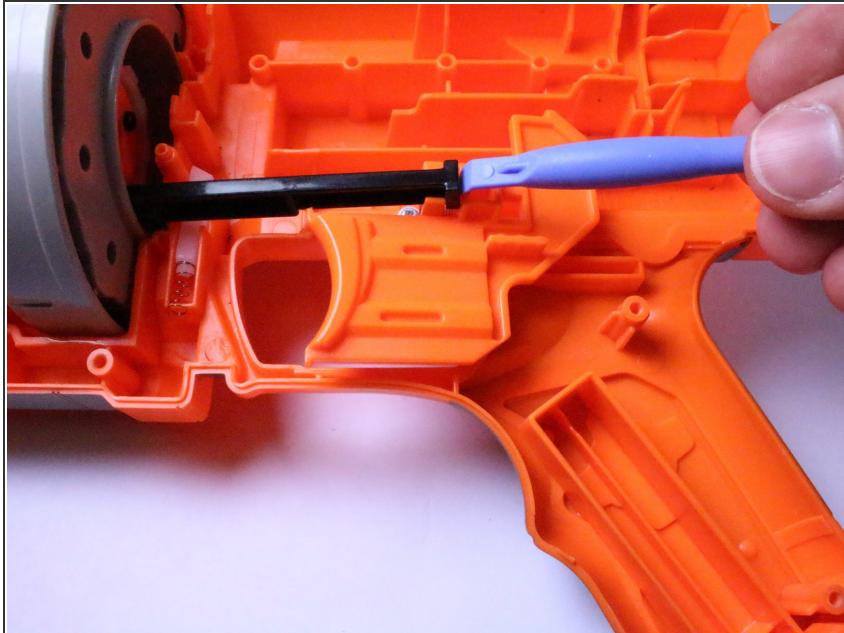

- Using a plastic opening tool, detach the black piece from the trigger. You do not need to remove the black piece from the gun.

## Step 11 — Remove Trigger



- Once the black piece has been detached, the trigger can be lifted out of the device.

To reassemble your device, follow these instructions in reverse order. Ensure that the spring located behind the trigger is attached to the limb on the backside of the trigger.