




# Nerf Dart Tag Swarmfire Motor Spring Replacement

The purpose of this guide is to help users find and replace the motor spring.

Written By: Sonal Purohit

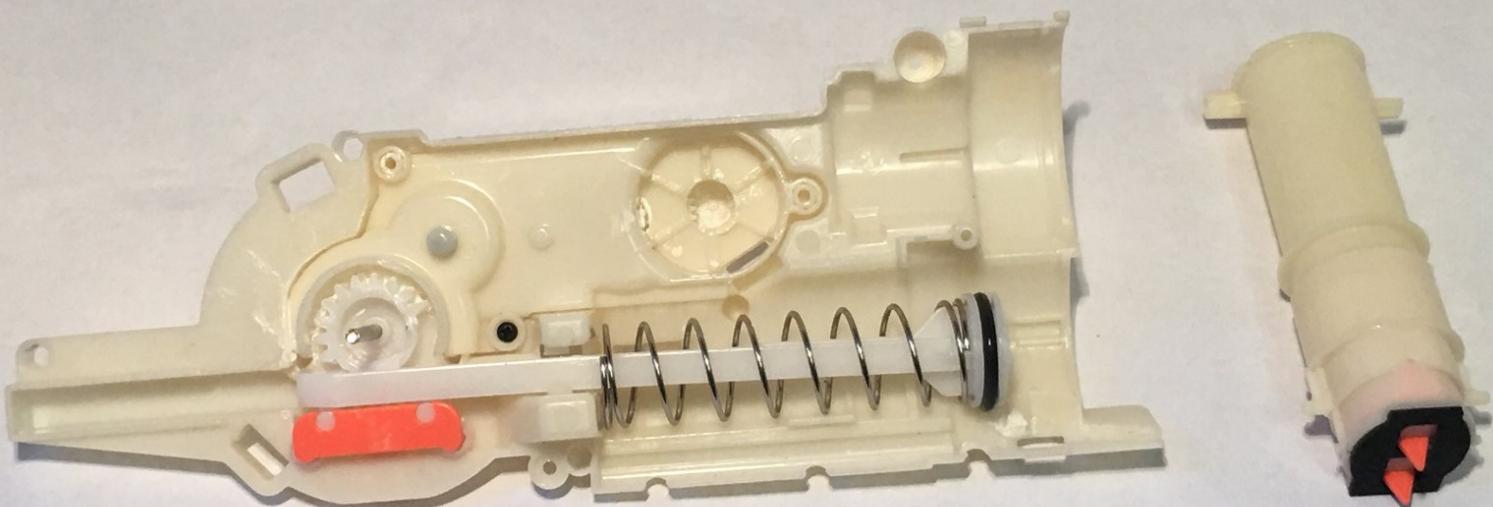

## INTRODUCTION

This guide will help you find and replace the motor spring.

### TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [J1 Screwdriver Bit \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

## Step 1 — Motor Spring Replacement



- Using the JIS #1 screwdriver, loosen the nine screws, holding the outer yellow shell in place
- The screwdriver you'll be using is a J1 head from the 64 Bit Kit.
- Be sure to use the Magnetic Project Mat to prevent loss of the screws.

## Step 2




- Lift off the outer yellow shell.

## Step 3





- Remove the screw holding the battery compartment shut.
- Lift off the inner blue casing

## Step 4

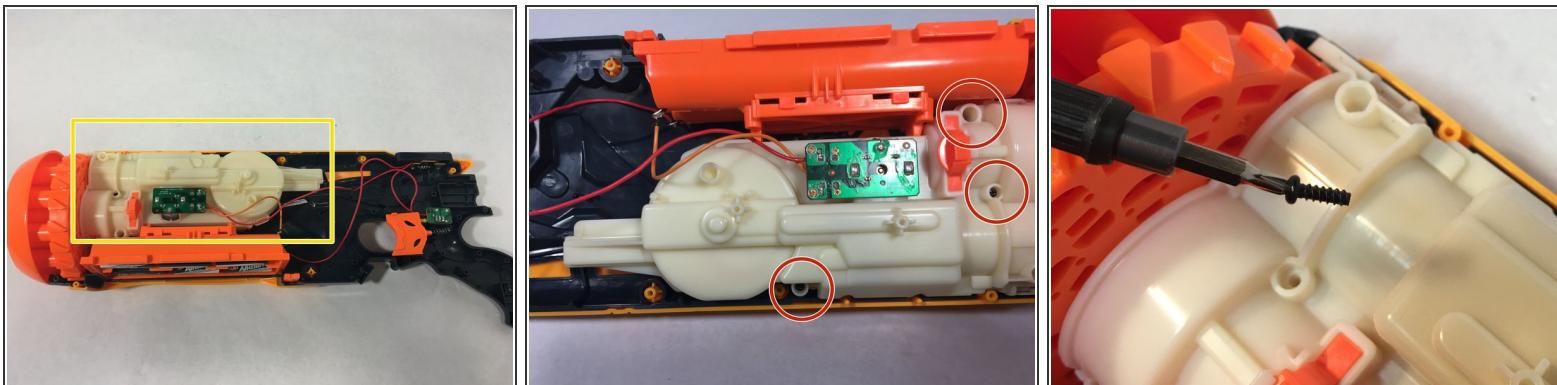




- Lift off the blue casing, exposing the white motor spring compartment.
- Loosen and remove the three screws holding the white compartment door shut.

## Step 5

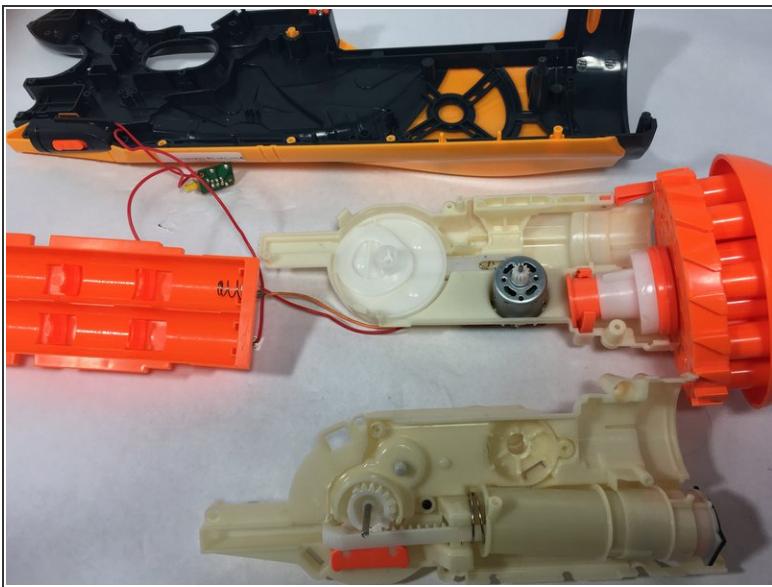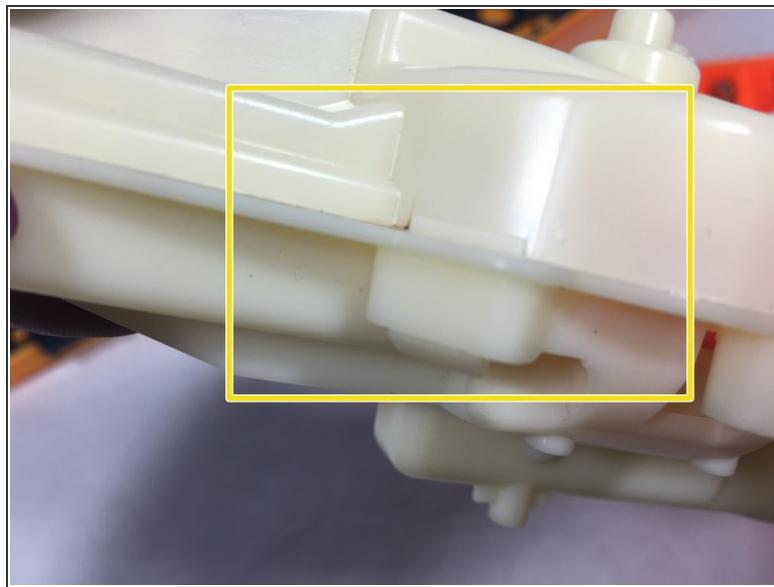

- Unsnap the white compartment into two pieces.

## Step 6

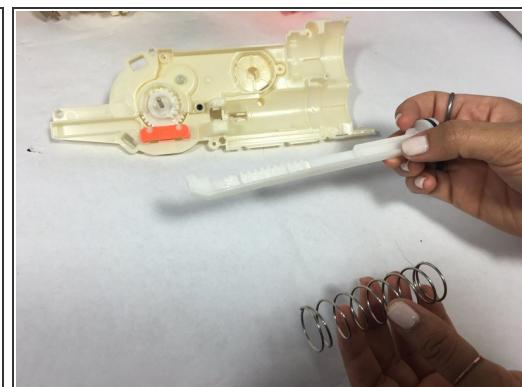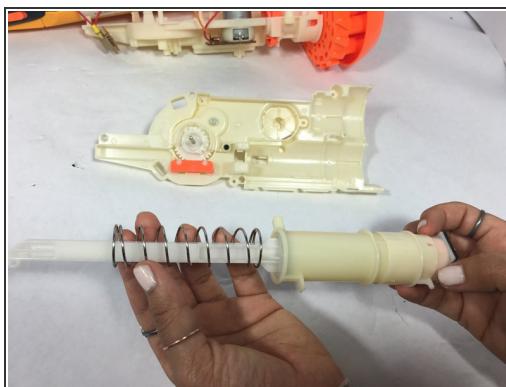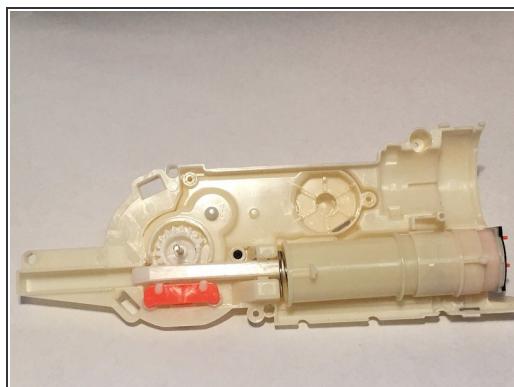

- Remove the motor spring located inside the rotating barrel and replace.

To reassemble your device, follow these instructions in reverse order.