


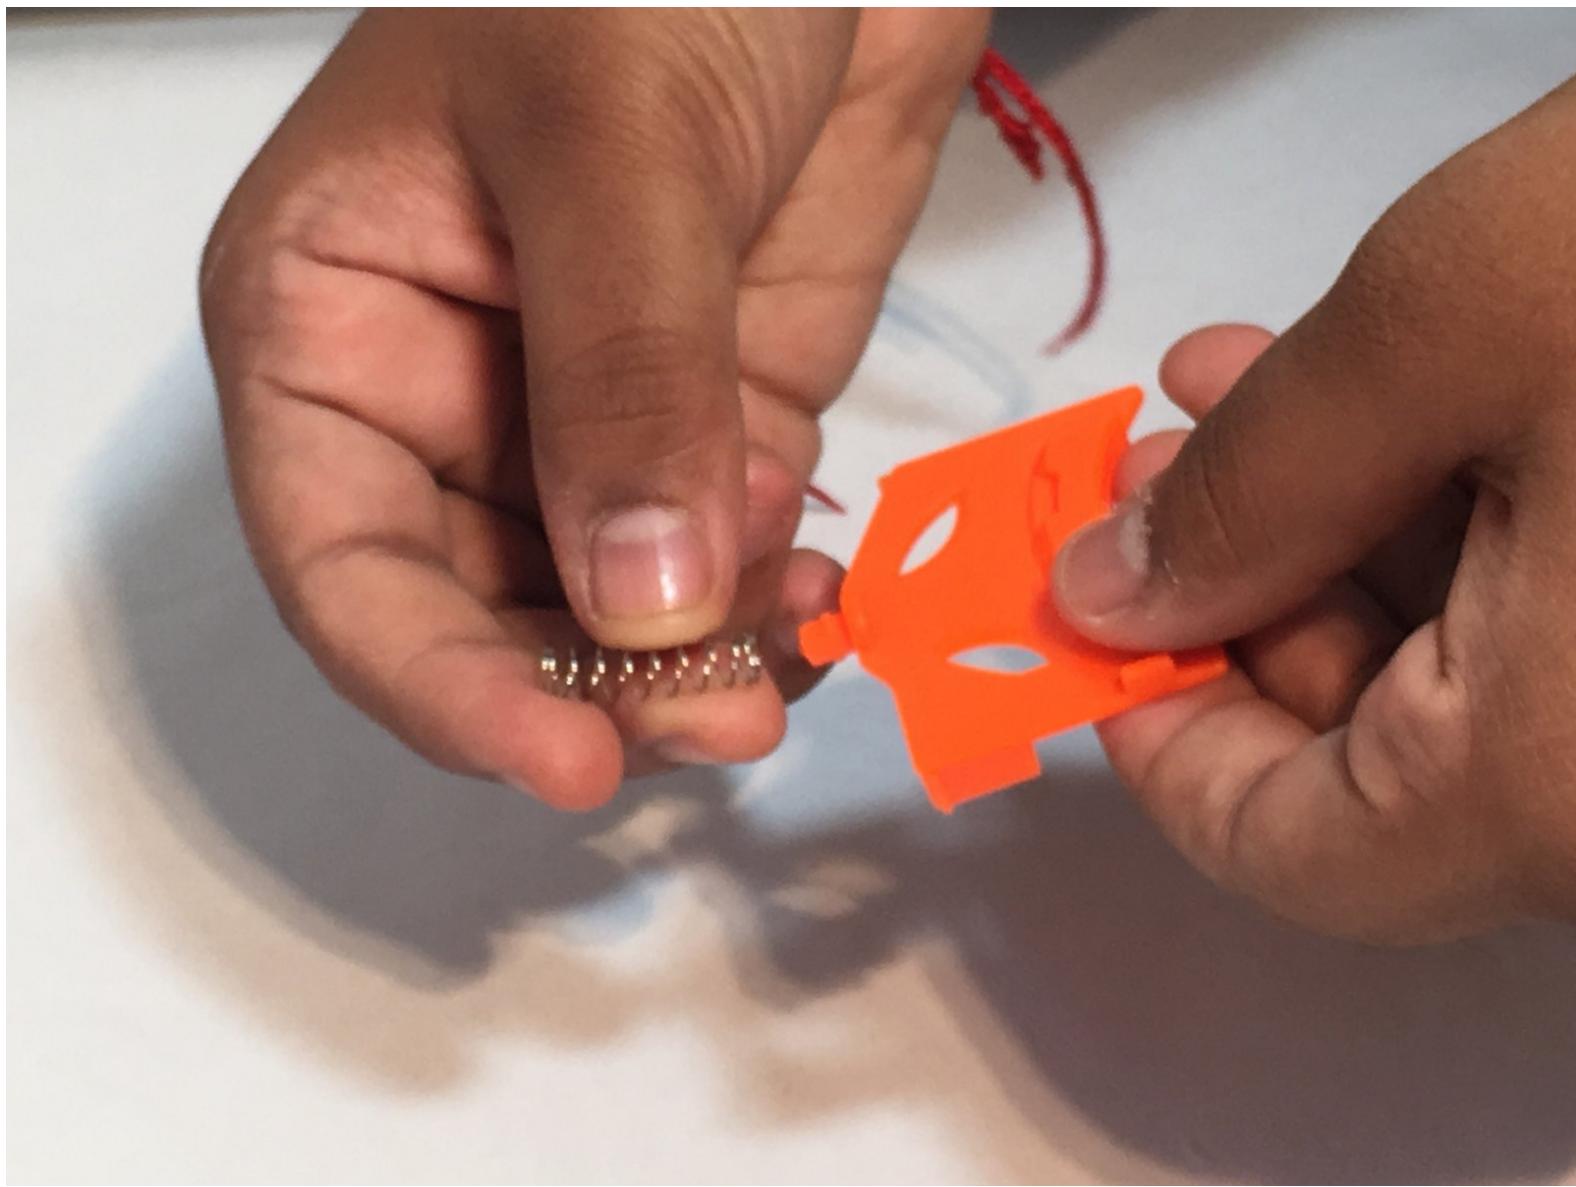

Nerf Dart Tag Swarmfire Trigger Spring Replacement

This guide is to help the user disassemble the Nerf gun and replace a damaged or worn trigger spring.

Written By: Ashely Janae Wodall



This document was generated on 2019-09-18 02:31:27 PM (MST).



INTRODUCTION

In this guide, you will be able to easily find and replace the trigger spring for the Nerf Dart Tag Swarmfire.

TOOLS:

- [J1 Screwdriver Bit \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — Trigger Spring

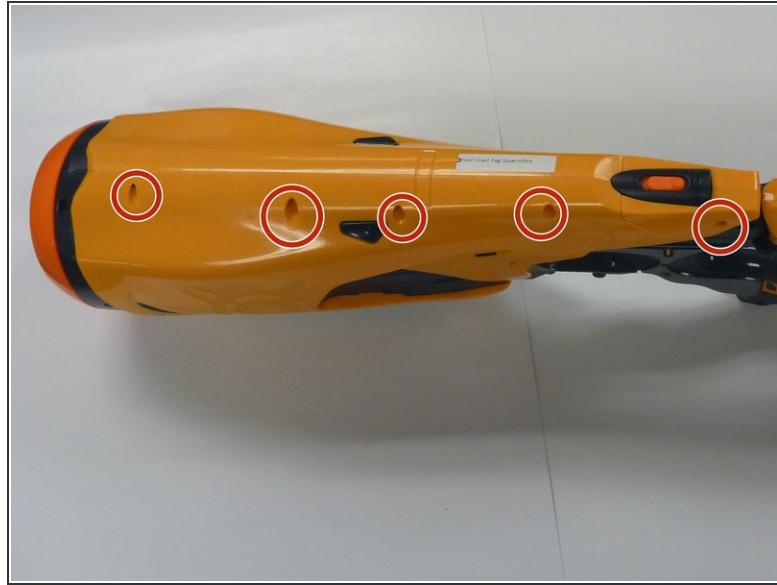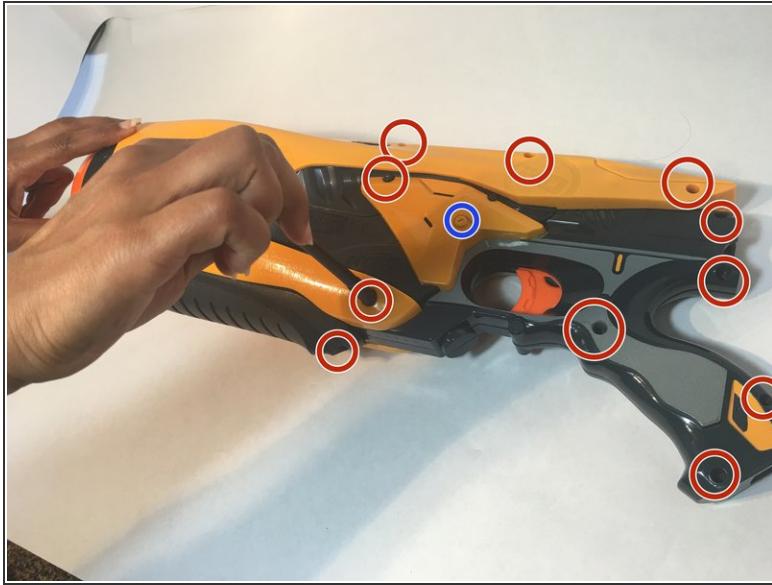


- Place the Nerf gun on its side and loosen all nine screws so the device can be opened.
- Avoid the fake plastic screw, which is merely decorative.

Step 2



- Remove the yellow and blue plastic covers from the Nerf gun to display the Nerf gun's motherboards and motor.


Step 3

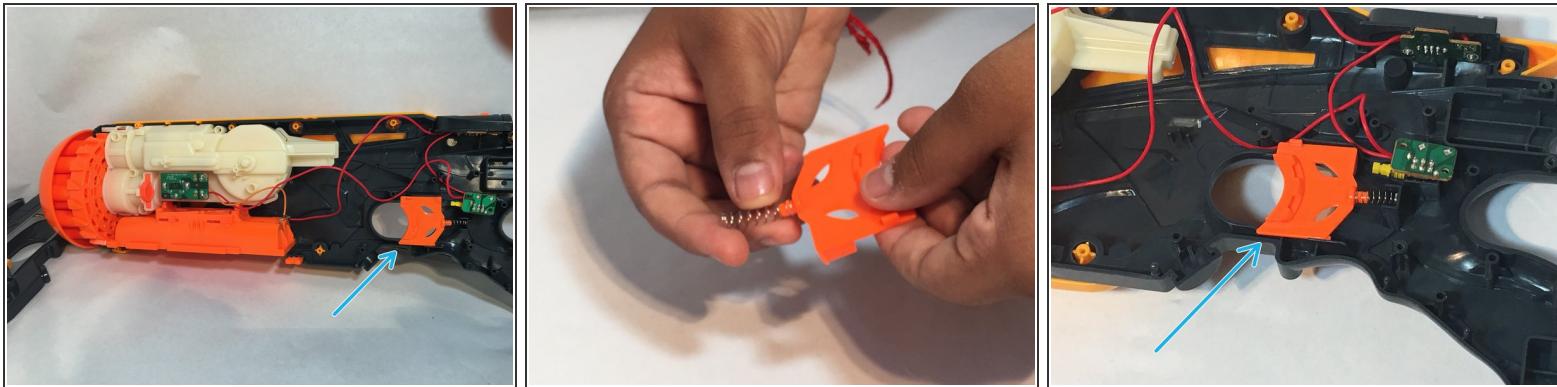

- Locate the orange trigger (dark blue if it's the newer version).
- Slide trigger out of place and check the spring.


⚠ It's important to check the spring for damage before removing the spring to prevent injuries.

Step 4

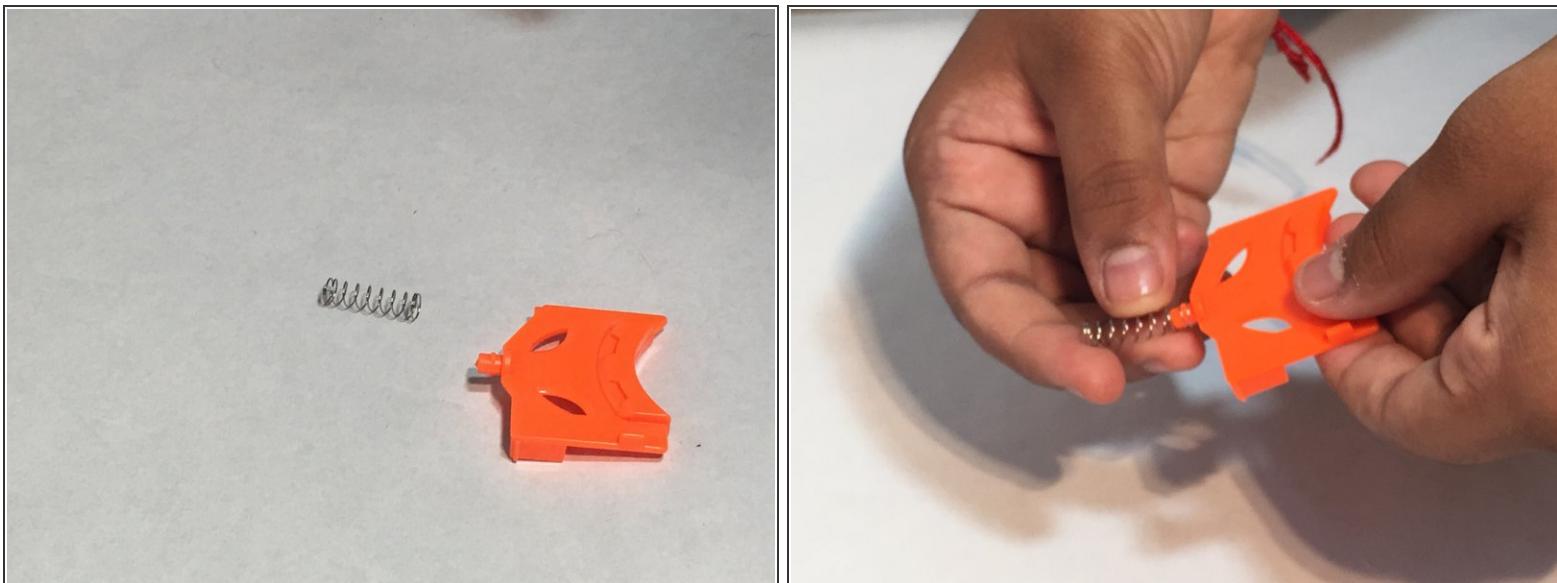

- If it is damaged, pull the spring off the trigger.
- Push the new trigger spring onto the trigger
- Make sure the trigger catches the small trigger notch so it doesn't fall off

Step 5

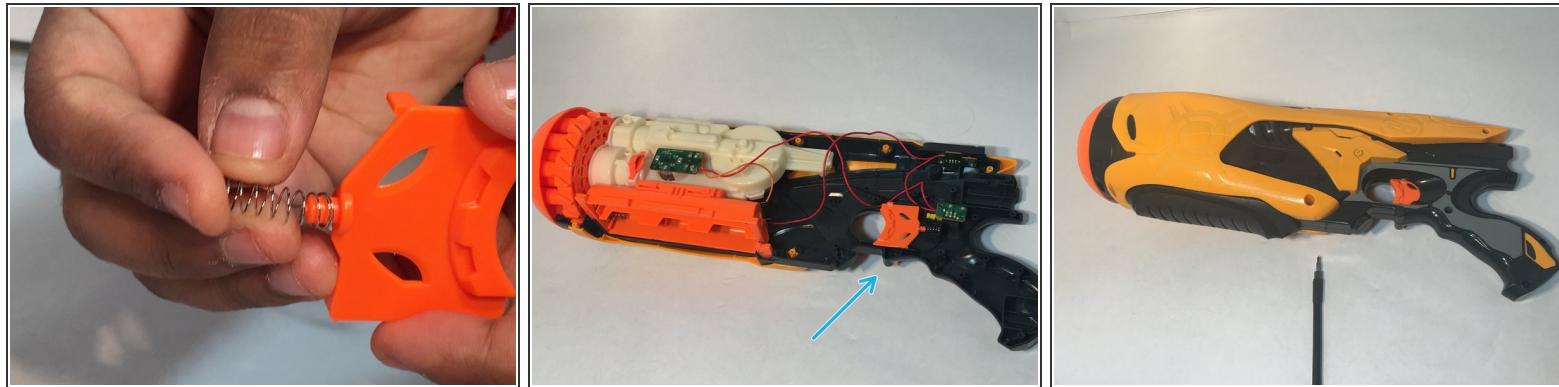

- Put the trigger back into place with the trigger spring pressed into the small compartment.

To reassemble your device, follow these instructions in reverse order.