



# Nerf Elite Triad EX-3 Disassembly

This guide will show you how to get inside a Nerf Elite Triad Ex-3 pistol.

Written By: Jaden Abbott



 **TOOLS:**


- Phillips #1 Screwdriver (1)

## Step 1 — Nerf Elite Triad EX-3



- Grab your pistol.

## Step 2

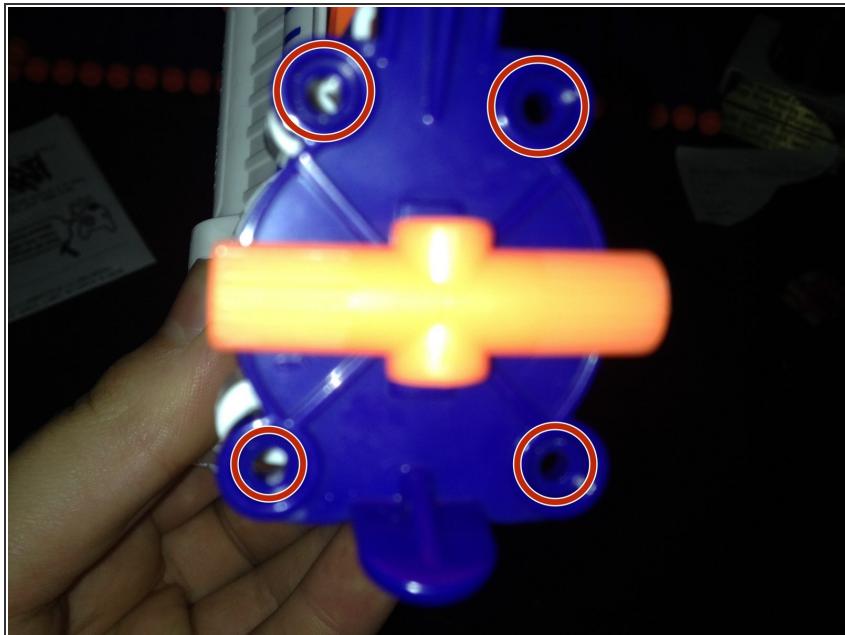

- Grab the screwdriver and unscrew the 4 screws

## Step 3



- Pull the piece out from the reloading trigger.

⚠ The white cylinder at the other end of the spring is very greasy. Do not wash off the grease on the cylinder!

## Step 4



- Here is a picture of what the inside should look like.

To reassemble your device, follow these instructions in reverse order.