



# Nerf Vortex Praxis Projecting Ejector Clip Replacement

This guide will show how to remove the firing mechanism from the blaster.

Written By: Diego medina



## INTRODUCTION

This repair should rectify weak fire or if the blaster doesn't fire at all. A screwdriver with a long shaft will be needed to get to all of the screws. Also watch out for any small parts that may come apart and fall out as you're working on the device.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Projecting Ejector Clip




- Start by taking out all of the screws for the casing of the gun. Using the PH #00 screwdriver, unscrew all four 1.3-cm screws in the pump.

## Step 2



- Take out all of the screws with a Phillips screwdriver. Using a PH #00 Screwdriver, unscrew all fourteen, 1.2-cm screws.

## Step 3

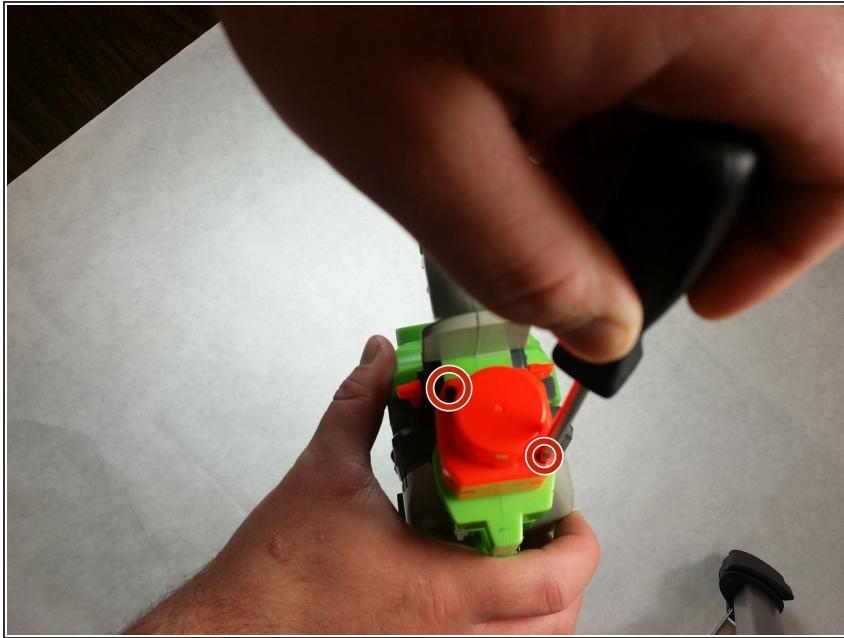

- Remove the small stock at the back end of the gun by removing two, 1-cm screws.

## Step 4




- Pull apart the case of the gun.

## Step 5




- Remove the 1.2 cm Phillips screw and the silver 1.1 cm Phillips screw at the front of the gun.
- Remove the silver 1.1 cm Phillips screw next to the first screw.

## Step 6

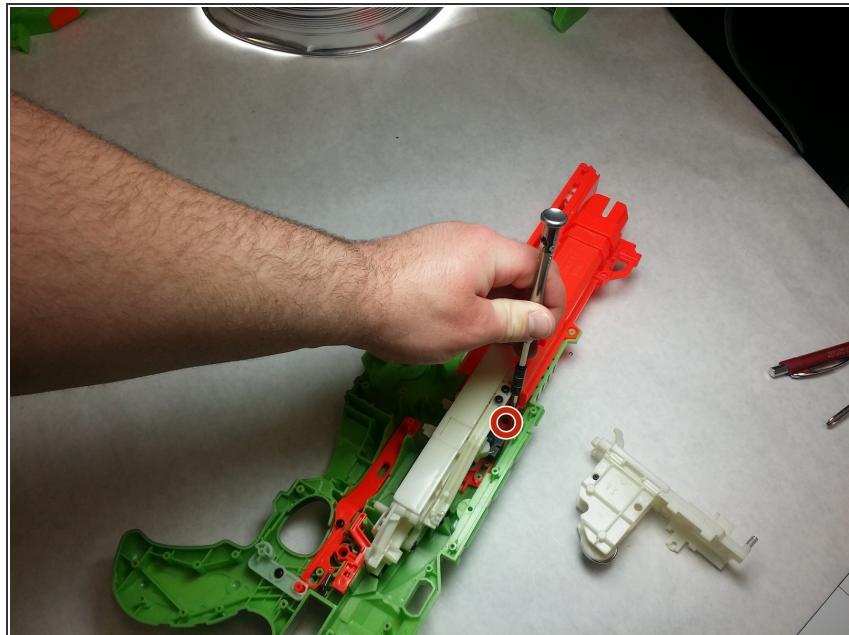

- Remove the two 0.7 cm screws that are towards the back of the case.

## Step 7

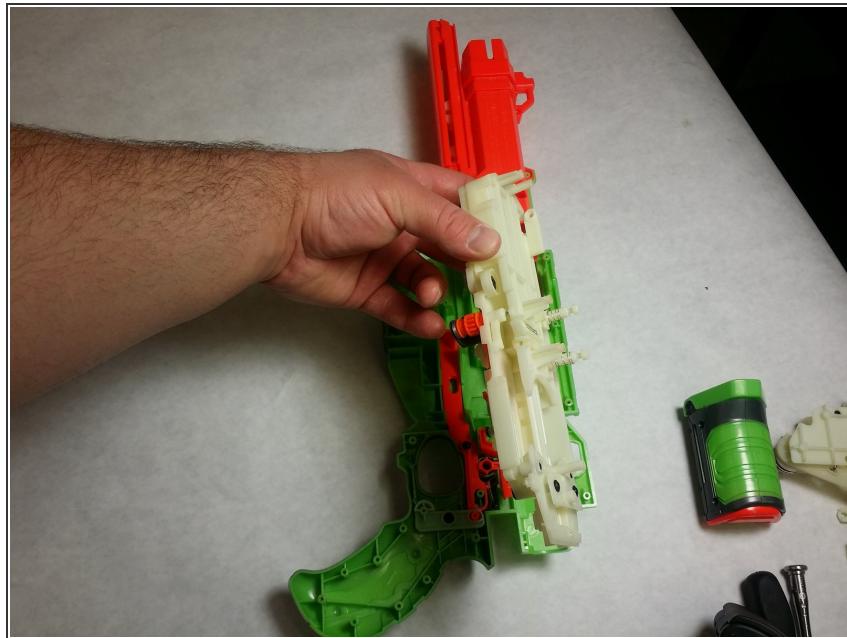

- Pull out the white piece which is the ejector component of the rifle.

To reassemble your device, follow these instructions in reverse order.