



Nerf Zombie Strike Crossbow Trigger Spring Replacement

This guide will convey how to properly change a trigger spring in this Nerf crossbow in case it breaks. Replacement springs can be purchased at your local hardware store.

Written By: Benjamin Bucklin



INTRODUCTION

There are some instances when the spring which allows a person to fire a Nerf crossbow breaks. Once you have opened up the Nerf crossbow you will be able to tell whether or not the spring has broken. If in fact you are dealing with a broken swing then you are in luck since it can be replaced.

TOOLS:

- Cross Screw-Driver, Torx-Screw-Driver TX10 (1)
- #0 Phillips Head Screwdriver (1)
- Magnetic Project Mat (1)

Step 1 — Trigger Spring




- There are 19 1.0 cm screws in total.

Step 2



- Separate each part of the Nerf crossbow.

Step 3

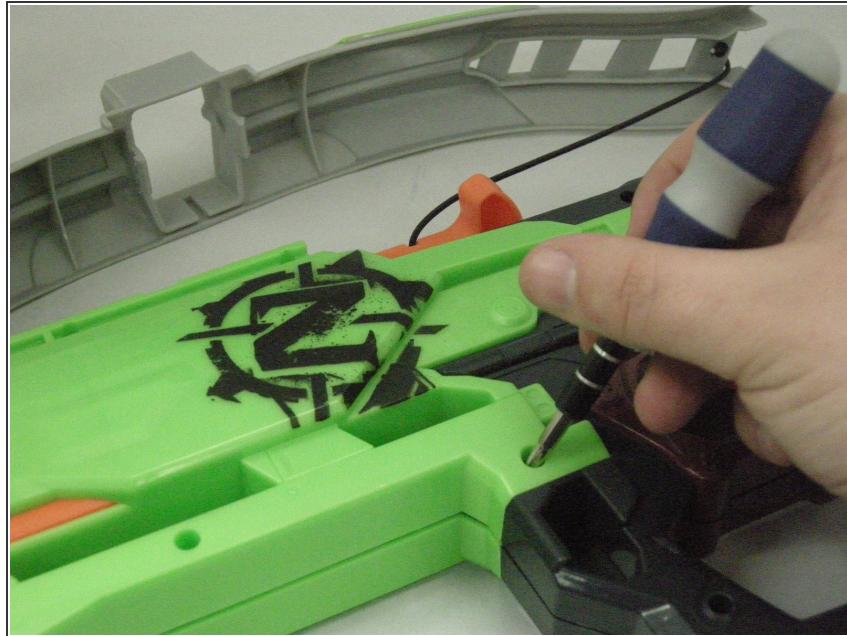

⚠ Use the screwdriver and unscrew each screw one-by-one placing each screw on the magnetic mat to insure they do not get lost.

Step 4



- Take the broken spring off of the trigger.

Step 5



- Replace it with the new spring you bought at your local hardware store.

Step 6



- Now that the spring has been reattached to the trigger repeat step two.
- Finish by performing steps two and three in reverse order.

To reassemble your device, follow these instructions in reverse order.