


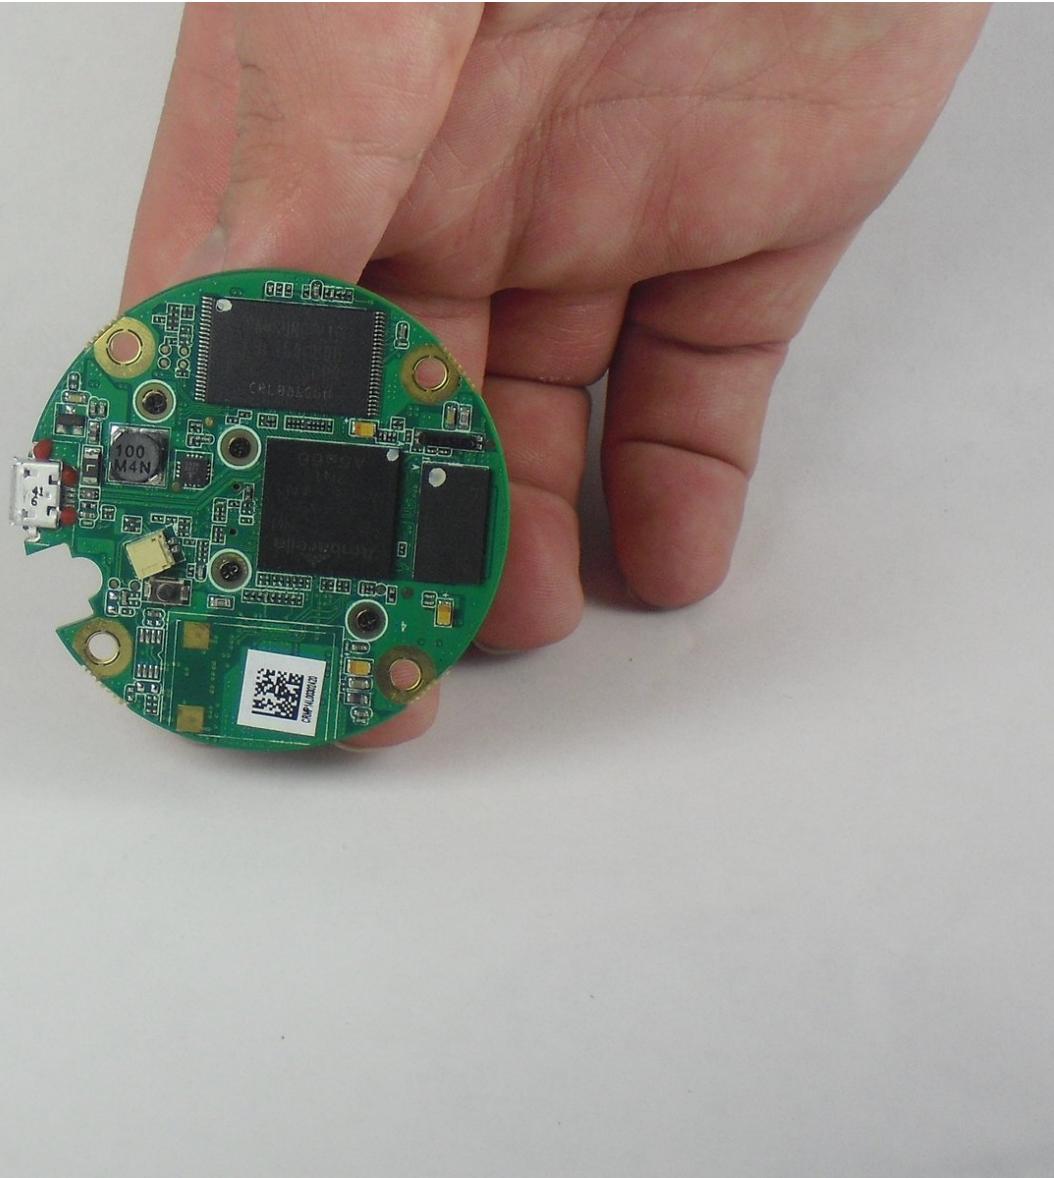

# Nest Dropcam Pro Motherboard Replacement

Replace the motherboard to your Nest Dropcam Pro when the device has power, but nothing works.

Written By: David Foens



## INTRODUCTION

This guide is used to replace the motherboard of the Nest Dropcam Pro if yours has stopped working. Make sure the device is unplugged before opening.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Case




- Press in the mounting clips on each side of the case to remove the camera from the mount.

## Step 2





- Using a Philips #0 screwdriver, remove the four 3 mm screws.

## Step 3

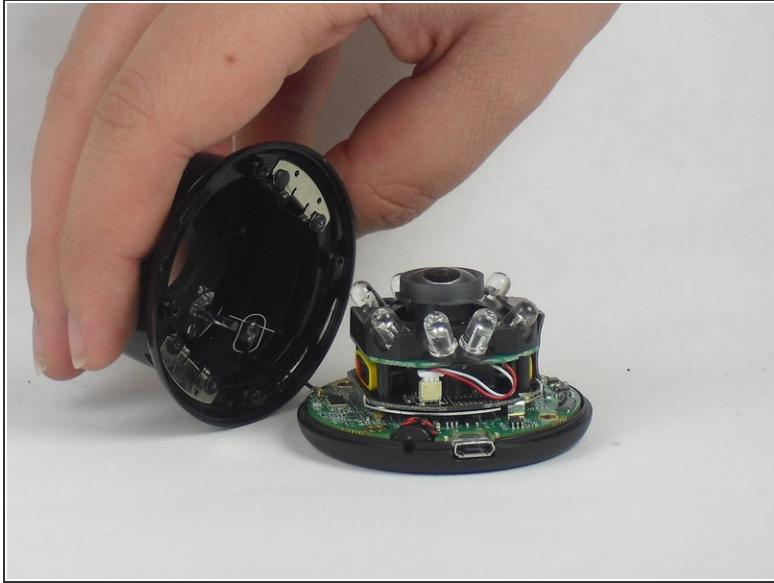



- Lift the front of the case slowly, as there is an antenna cable attached to the motherboard.
- Carefully disconnect the antenna cable from the motherboard. You will feel this cable "pop" out of place when disconnected.

## Step 4 — Motherboard

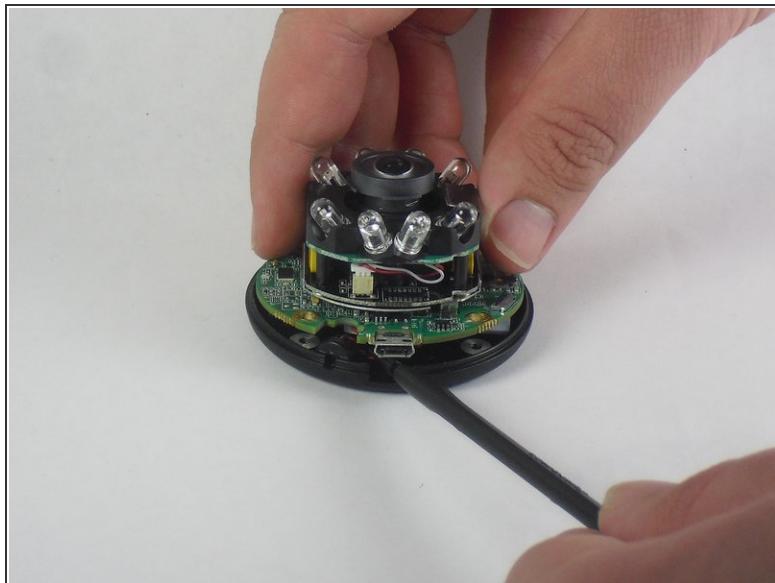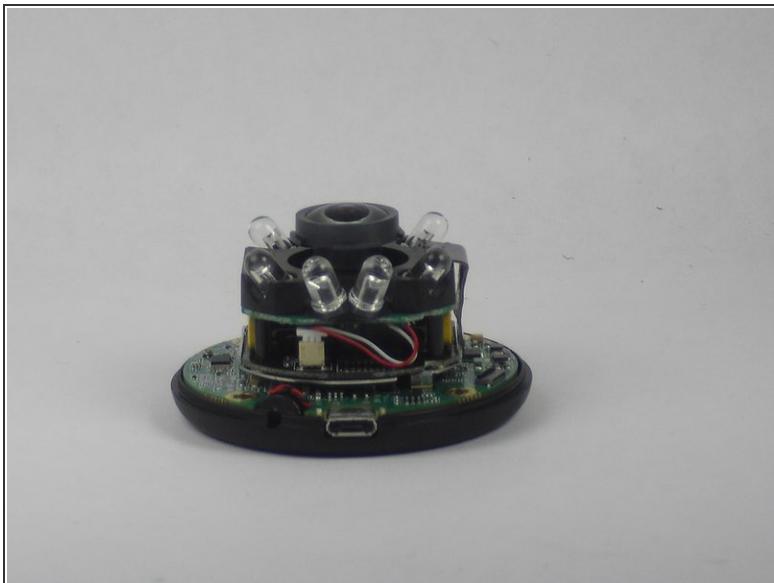



- Insert a spudger tool under the micro-USB port and lift to separate the motherboard from the back case.

## Step 5

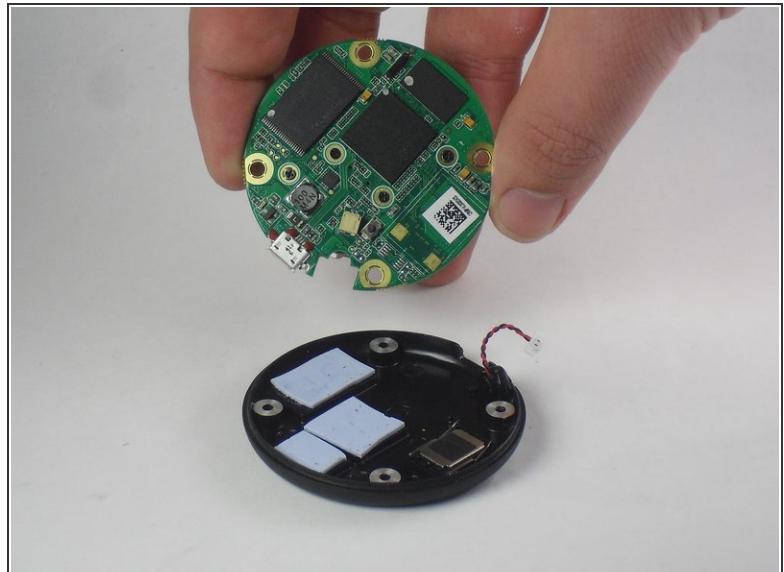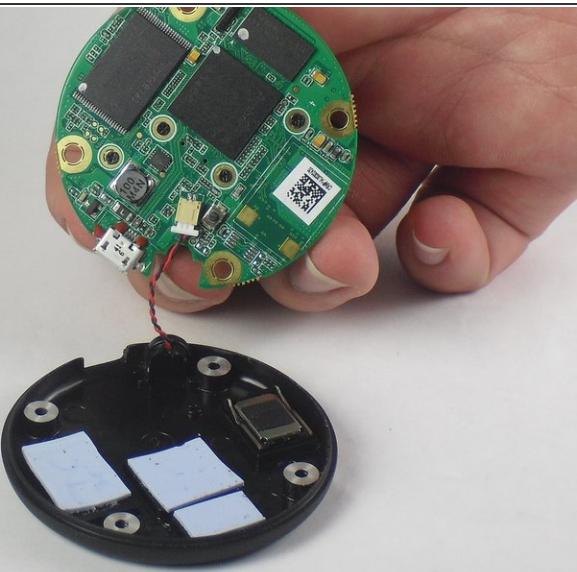



- Pull the motherboard away from the back case.
- Unplug the red and black cable connecting the motherboard to the back case.

## Step 6

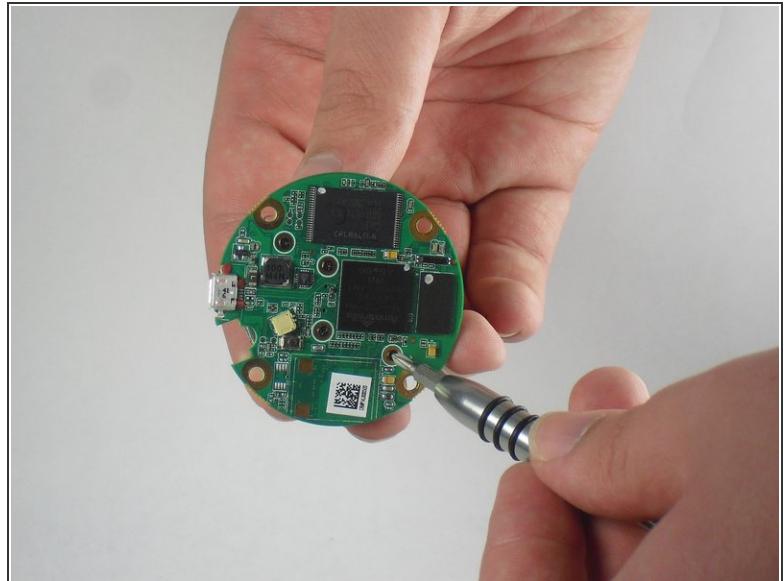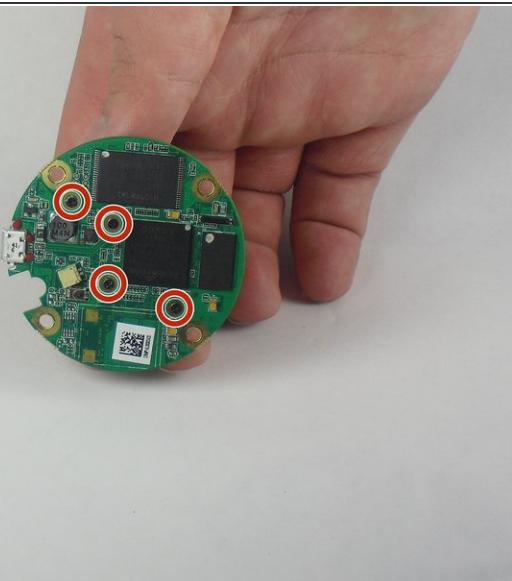

- Using a Philips #0 screwdriver, remove the four 2 mm screws.

## Step 7

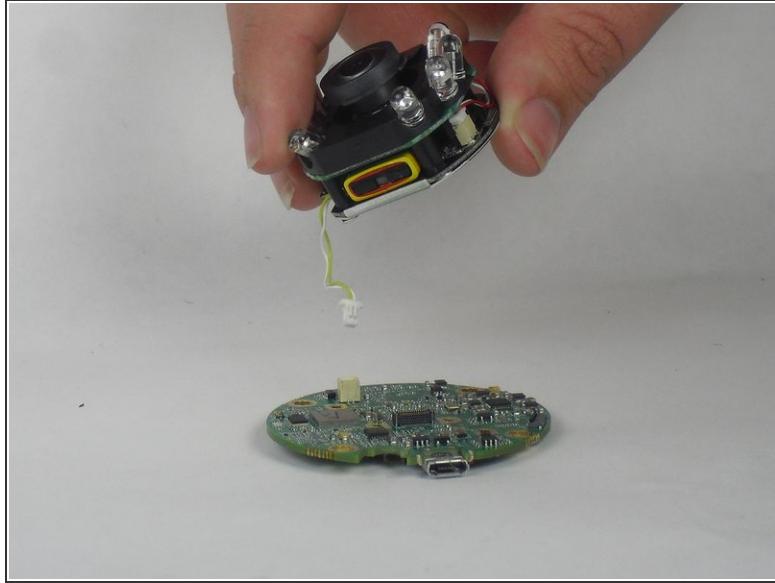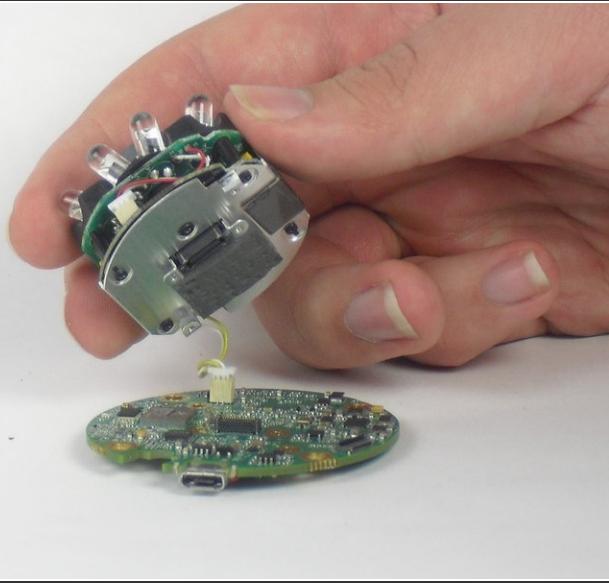

- Lift the lens and LED assembly away from the motherboard.
- Unplug the yellow and white cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.