




Nexoc Pad 7 screen replacement

This guide explains how to remove the monitor from a Nexoc Pad 7.

Written By: Theo Mat

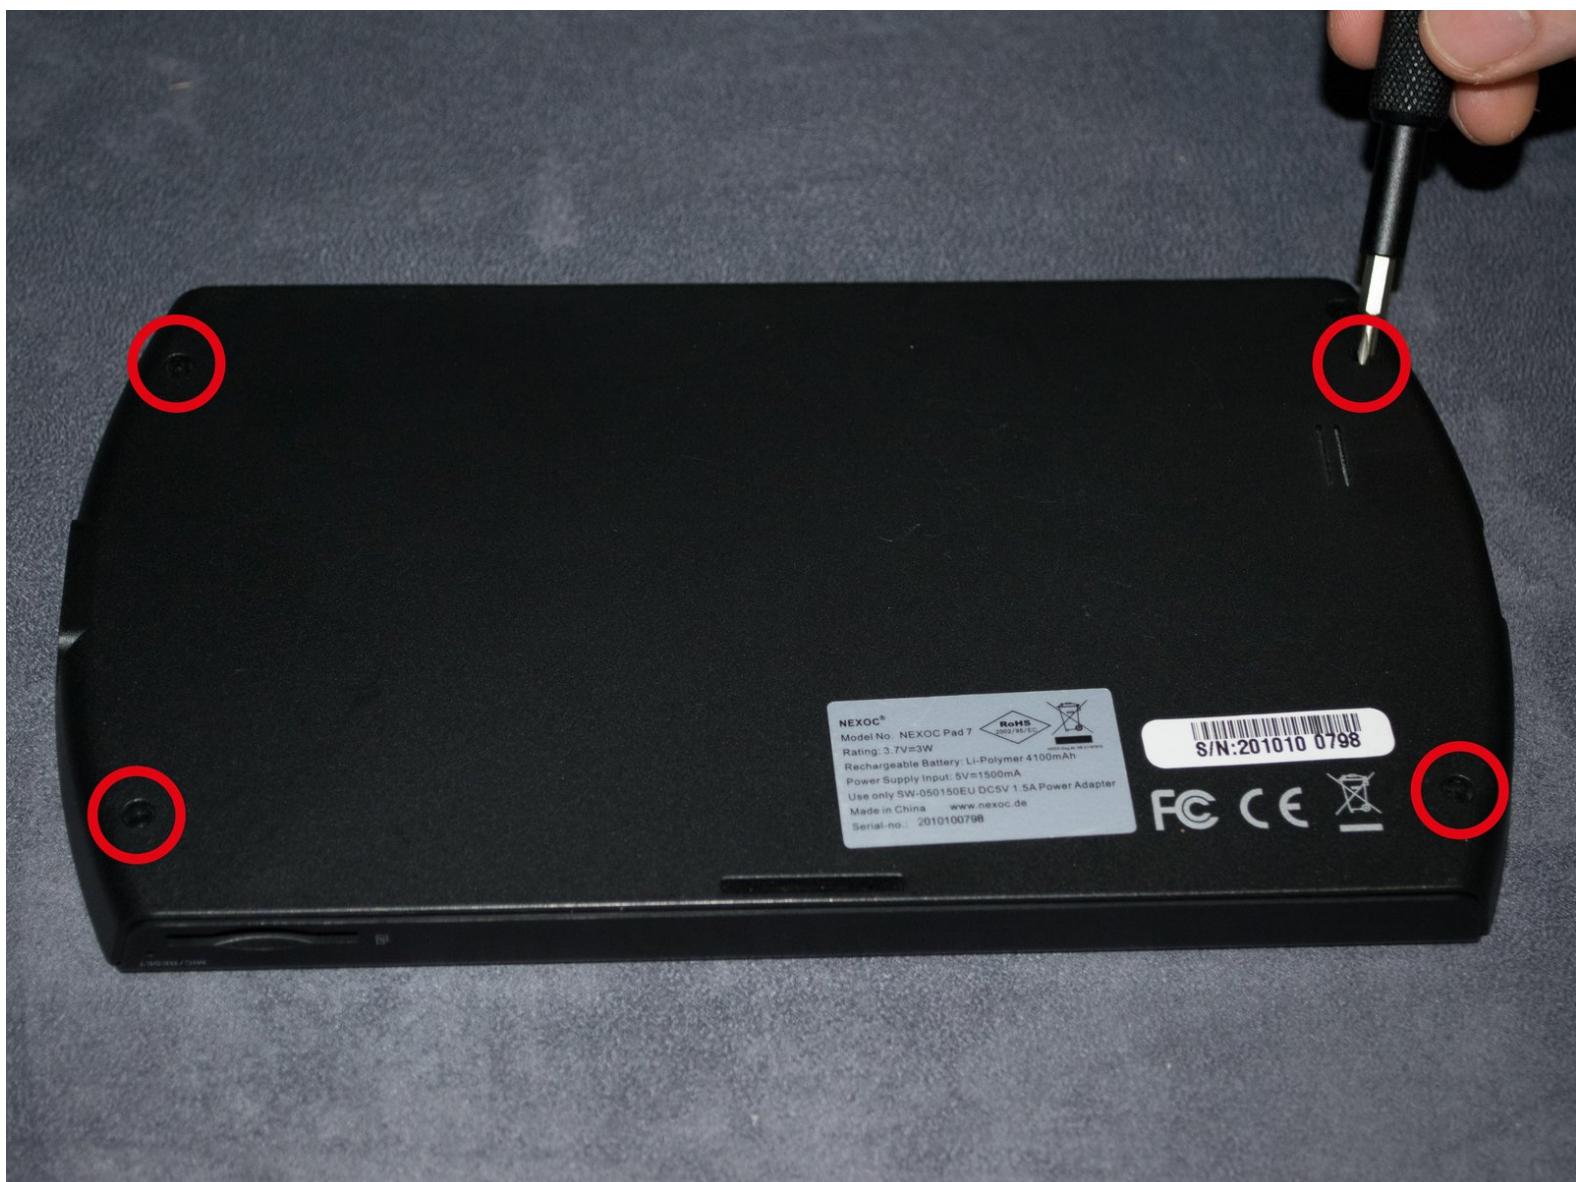

Step 1 — Open housing



 Turn off the device before attempting to open it.

- Unscrew the 4 small Phillips screws on the back of the unit.

Step 2 — Open housing





- Carefully insert a solid, flat object between the front and back of the case.
- Move this object carefully between the housing parts to separate them.

Step 3 — Removing the back of the housing



- ⚠ The soldering points of the speaker on the back are slightly detached.
- Untie the front and back sides and place them on a smooth surface.

Step 4 — Disconnect the cable from the circuit board

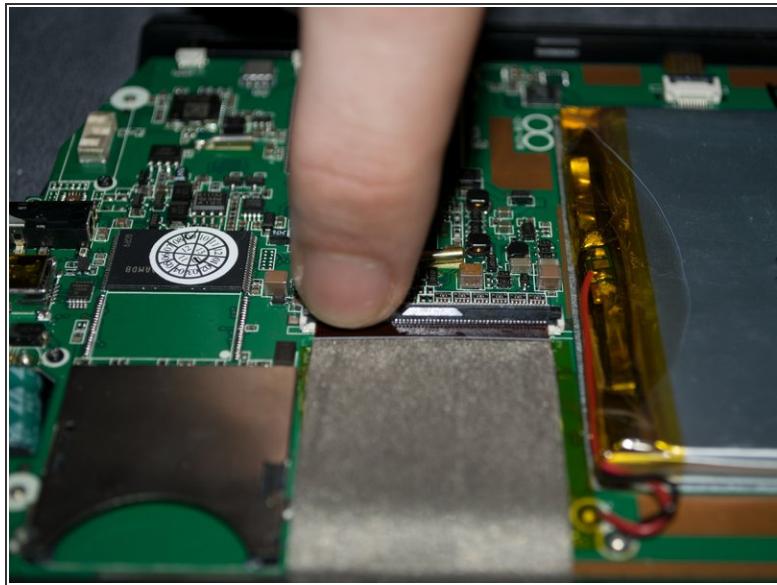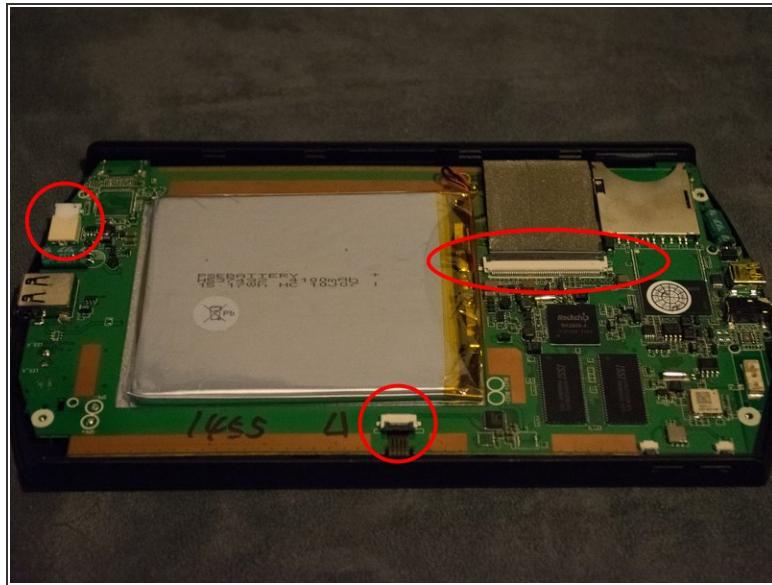

- Flip up the two clamps that hold the flat cables up to release them.
- Carefully pull out the flat cables.
- Unplug the cable on the bottom of the tablet.

(i) The white cable at the top sits very tight, possibly use a small pair of pliers to help.

Step 5 — Release the board from the housing



- Turn the 3 small Phillips screws out of the board.


Step 6 — Disconnect the battery



- Using a spatula, remove the glue between the battery and the screen.

⚠ The battery is soldered only with very thin solder points on the board.

Step 7 — Remove the screen

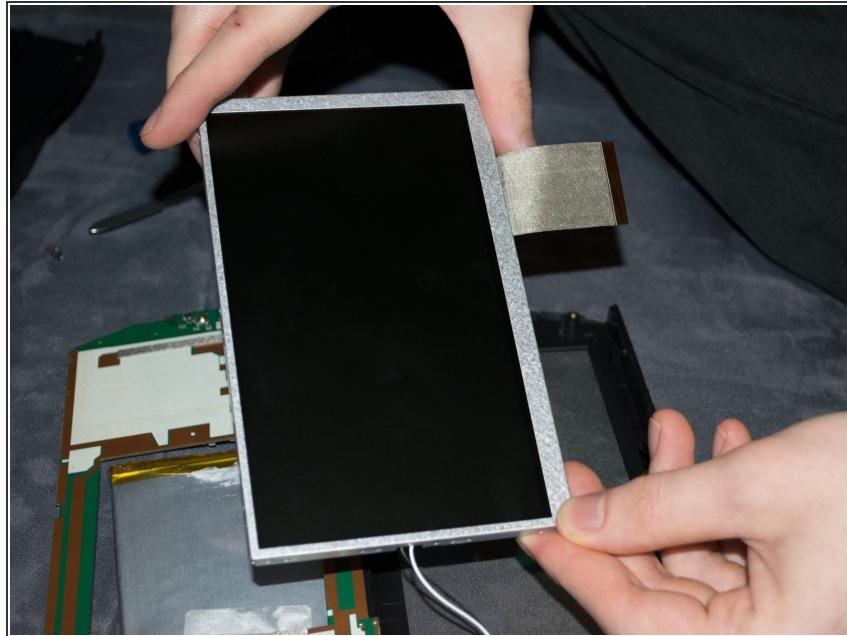

- Take the board and the battery out of the case.
- The screen can now be removed.

Repeat the steps in order to reassemble your device.