



Nextbook Flexx 10 Camera Replacement

This guide will explain how to replace both cameras in the Nextbook Flexx 10.

Written By: Jenna Hummer




INTRODUCTION

This guide will explain how to replace both cameras in the Nextbook Flexx 10.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Front and Rear Camera

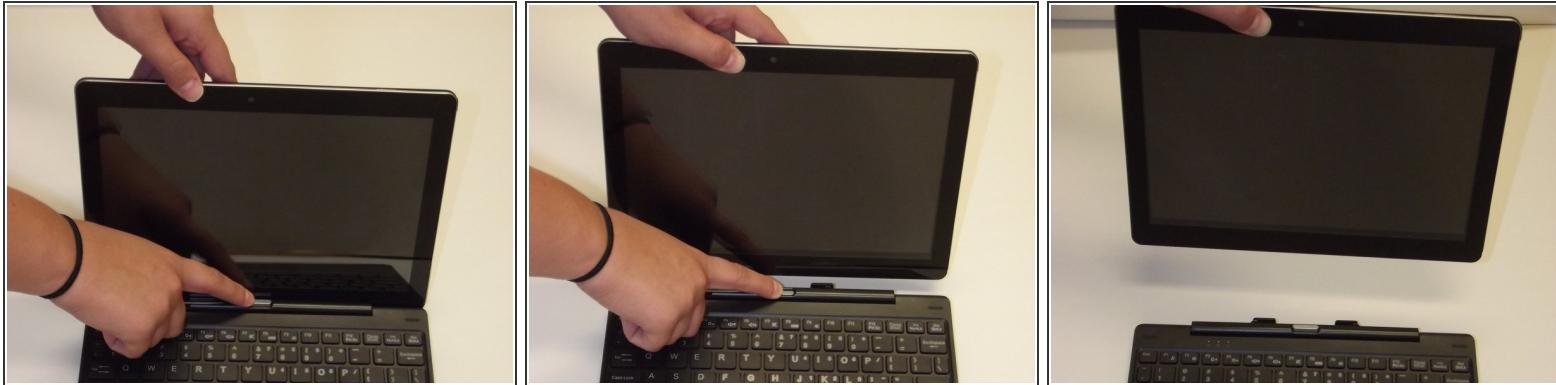


- Remove the top section by pushing the middle button in the center of the base and lift on the screen.

Step 2




- Remove the black back panel of the screen.

Step 3

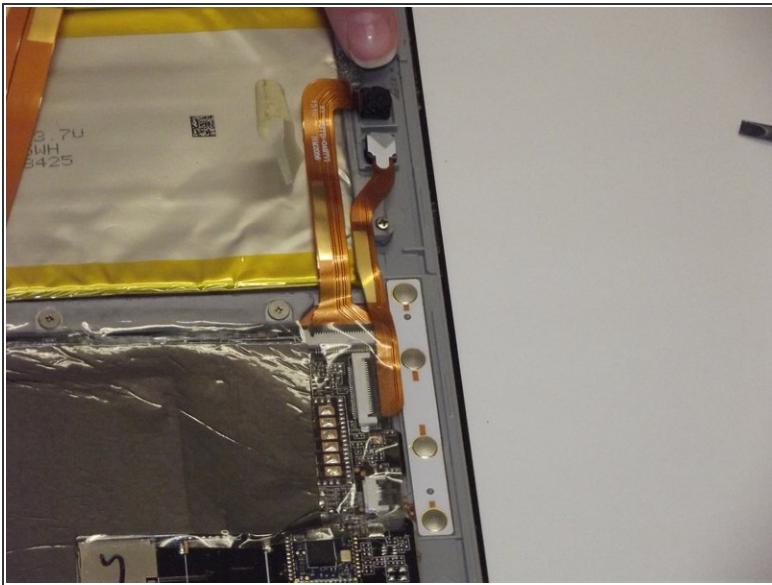


- Place the panel screen down.
- Identify the cameras at the top center.

Step 4

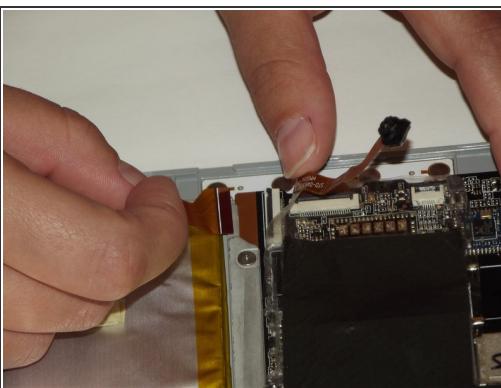

- Find the front camera.
- Follow the gold strip to where it connects to the device.
- There is a black piece that is holding the gold strip. Flip this up to release the camera.
- Follow bullets above for the rear facing camera.

Step 5

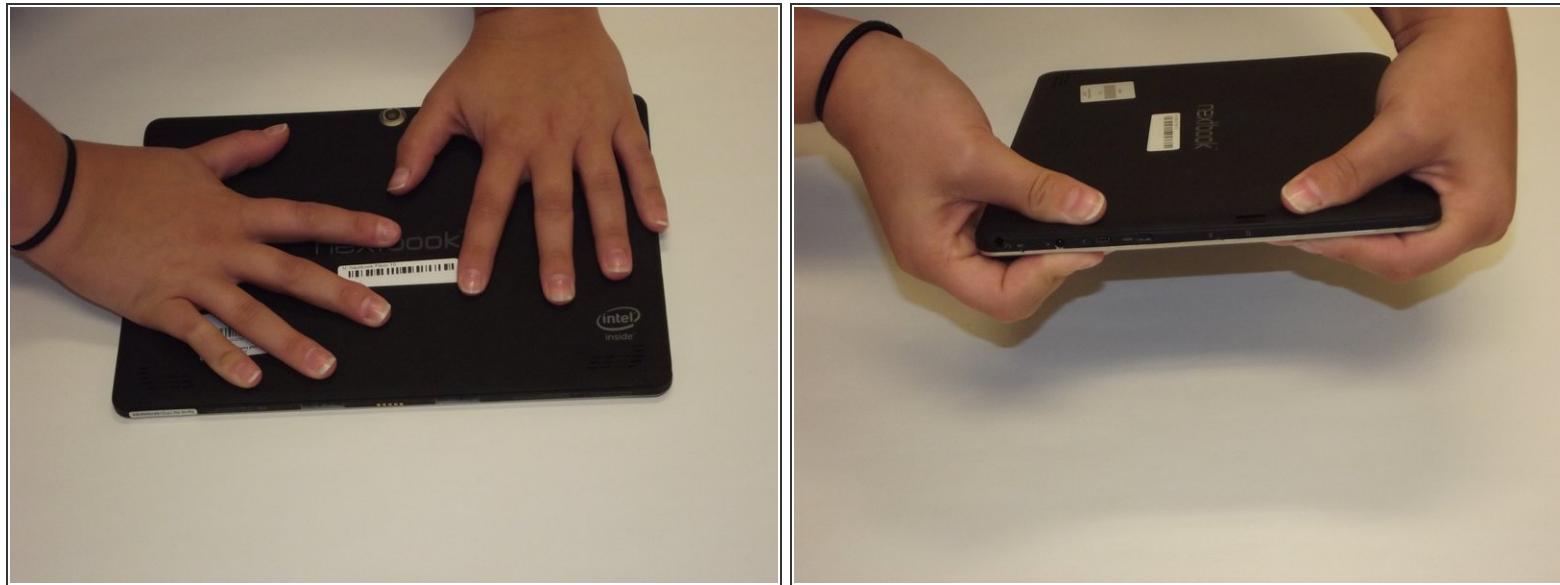

- Insert new camera into each slot, make connections, and close the black flap.
- Snap back panel back onto the back of the screen.
- Put screen and the keyboard back together.

To reassemble your device, follow these instructions in reverse order.