



Nextbook Flexx 10 Back Cover Replacement

Procedure to remove rear cover panel. This is required to perform any maintenance inside of the device. Removing this cover will invalidate your warranty.

Written By: James Campbell



INTRODUCTION

Steps for back cover removal.

You will need to remove the cover to do internal repairs on the Flexx 10. It is held in place by plastic clips that are integrated into the cover. Care should be taken to try to leave these clips intact so the cover will stay on when reassembled.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Back Cover




- To begin, turn off the power to the device and remove the screen from the keyboard.
- Open the 2-in-1, and hold the screen.
- Press the silver button at the top of the keyboard.
- When the screen lifts up, gently lift the screen away from the keyboard.

Step 2



- *You may use your fingers, or a spudger. Be careful not to break your cover OR your fingernail. Removing the cover requires good judgement.*
- The goal is to separate the black from the silver. Start in a corner, or a flat edge -- whichever works best for you. Remember to not use too much force.
- Once you start the initial separation, keep going until you free one edge. The goal now is to free three edges of the rectangle.
- If your progress stops on one side of the rectangle, go to the other side and try there.

Step 3

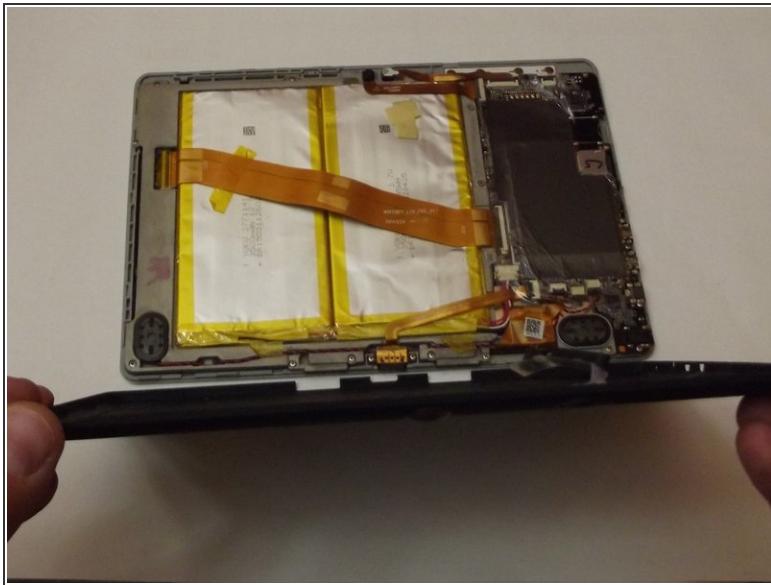

- Gently pull the back cover from the screen assembly.
- ⓘ Keep the plastic cover close. It's great for holding screws!
- ⚡ When putting the cover back on, press firmly around to outside edge with the screen facing down on a flat, debris-free surface.

To reassemble your device, follow these instructions in reverse order.