




Nextbook NEXT7P12-8G Battery Replacement

This is a simple manual that allows you to change the battery in your device.




Written By: David Kyzer

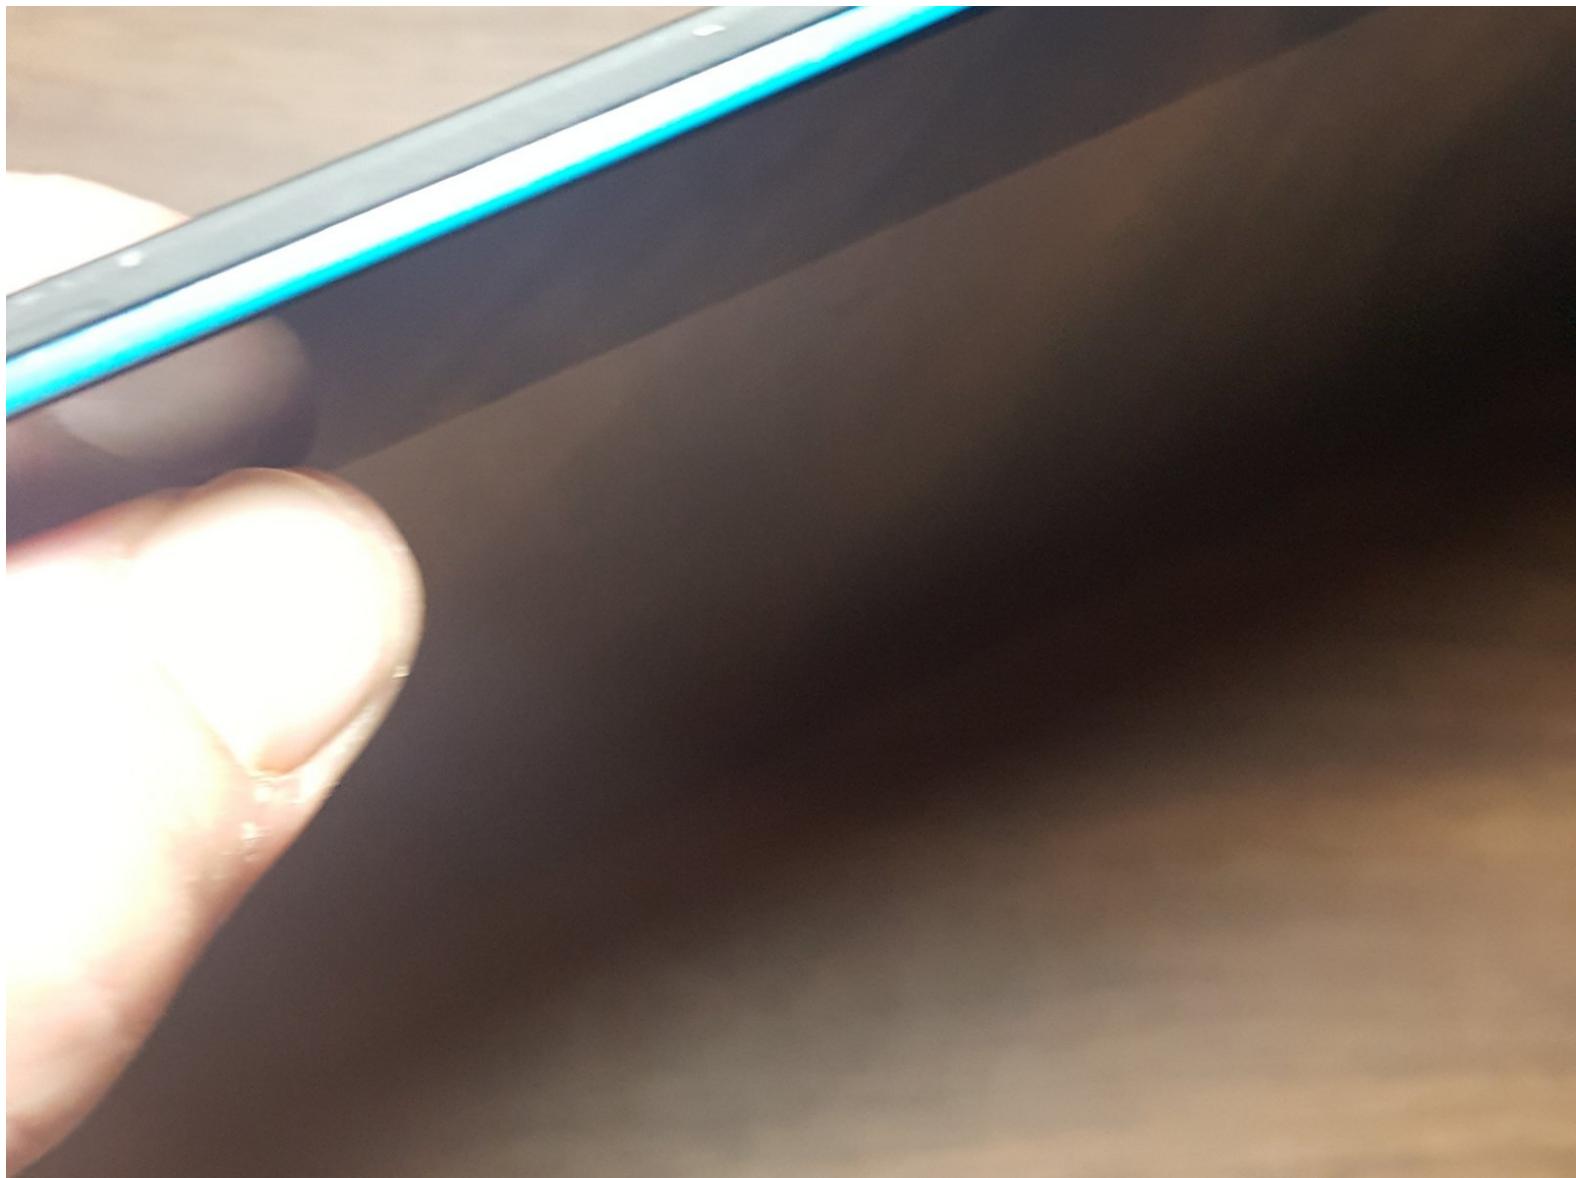

 **TOOLS:**




- [Ifixit Pro Tool Kit \(1\)](#)
- [Heatgun/heatplate \(1\)](#)

Step 1 — Introduction

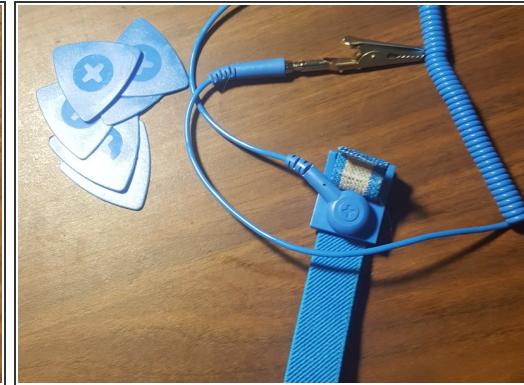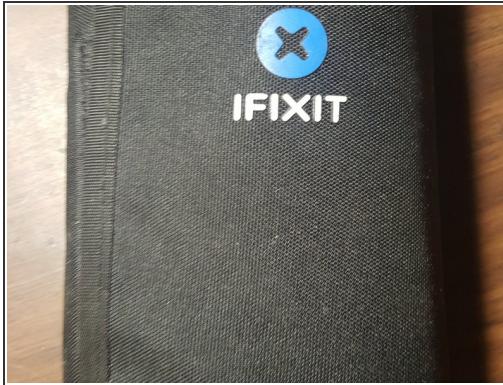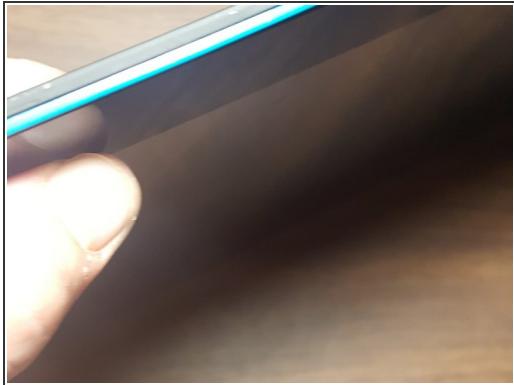


- Time to grab the trusty iFixit Kit
- Always properly ground yourself when working on small electronics..

Step 2 — Sliding off the back wall

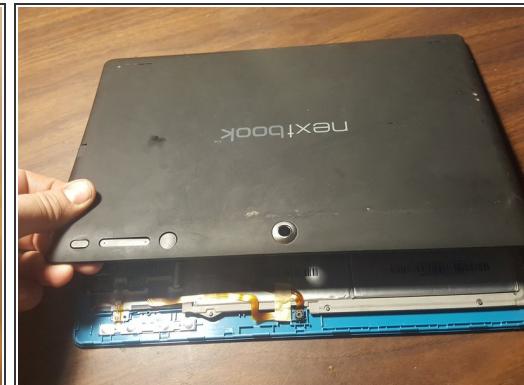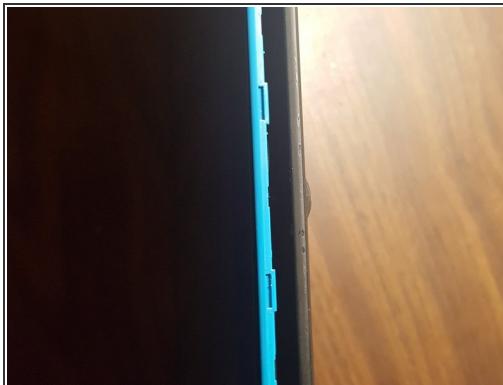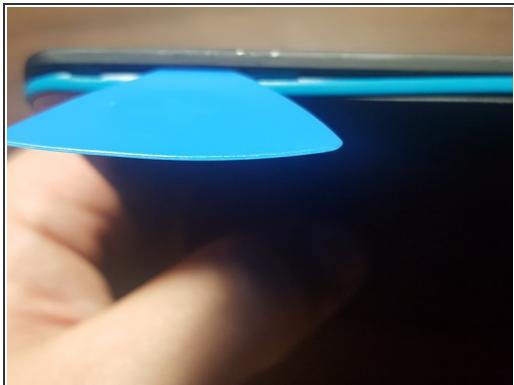

- Picture one and two: Separate back wall and blue mid frame. You are releasing about 8 or 10 clips across the top.
- Picture three : Lay tablet flat and lift at camera side, while sliding the back wall away from you. This will keep you from breaking the clips around the keyboard docking area.

Step 3 — Battery access

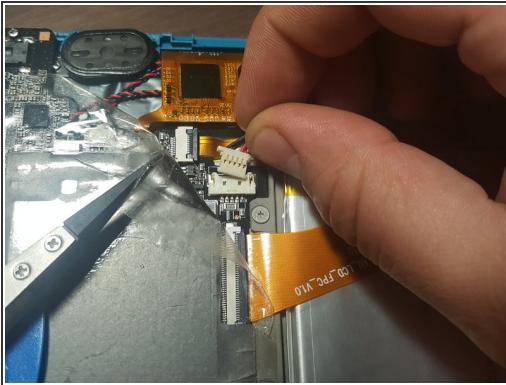

- Picture 1 : Now your in the beast
- Picture 2 : First you want to peel back this tape and expose the battery connector. Remove the battery connector before anything else.
- Picture 2: Next remove the ZIF connector directly underneath of the battery connector.
- Picture 3 : Finally remove the 2 ZIF connectors at the bottom of the battery. These cameras can be pulled out of your way to have access to the battery

Step 4 — Battery removal



- Picture 1: Once the battery is free you will want to apply heat by either a hot plate, or a heat gun, to ease the removal of it. Only use FLAT ifixit plastic pry picks. **DANGER:** Puncturing battery can lead to fire, damage to your device, or even personal injury. **PLEASE BE CAREFUL** and Happy fixing
- ifixit and the creator of this walkthrough is not responsible for any damages to your device or self. All repairs are done at your own risk
- Once battery is removed, follow these steps in reverse to reassemble.

To reassemble your device, follow these instructions in reverse order.