



Nextbook NEXT7P12-8G Camera Replacement

This guide will demonstrate how to replace the camera.

Written By: Grace Cho



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Suction Handle \(1\)](#)
- [Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [Masking Tape \(1\)](#)

 **PARTS:**

- [NEXT7P12-8G Replacement Camera \(1\)](#)

Step 1 — Camera




- Use the plastic opening tool to pry apart the front and back covers of the Nextbook
- Continue prying until the front and back covers are completely separated. Use the suction cup if necessary to pull apart
- We recommend using an extra plastic opening tool to maintain your opening

Step 2



- Once the front and back covers have been separated, set the back cover down and examine the interior of the Nextbook
- Remove the various pieces of masking tape

Step 3

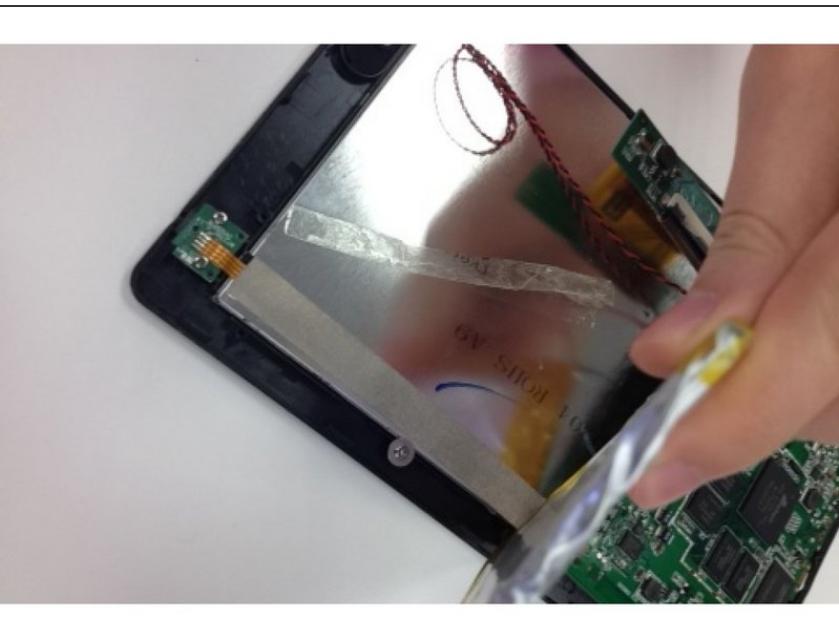

- Carefully peel the battery pack off, starting from the outer edges
- It is held down by an adhesive going diagonally across the back
- Removing the battery will allow you to access the screws holding the chip in place

Step 4



- Use a 4.0 bit screwdriver to remove the screws from the chip

Step 5




- Remove the entire chip by severing small adhesive strips along the edges and pulling the chip away from the frame
- Carefully peel away the black tape with copper detail that is holding the chip to the device

Step 6



- Locate the camera
 - The camera will be a small black square directly behind the camera lens visible on the front side of the Nextbook
- Pry the camera out of the front cover with the plastic opening tool

Step 7

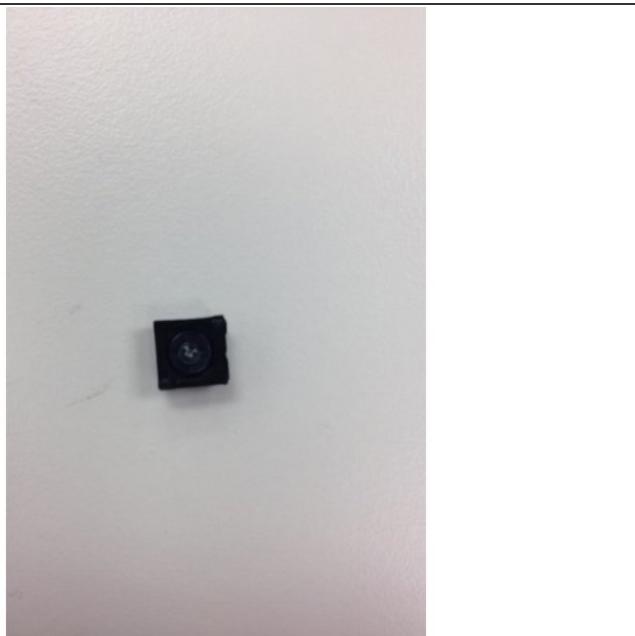

- Replace with a spare camera piece

To reassemble your device, follow these instructions in reverse order.