



Nextbook NX008HD8G Back Panel Replacement

Using this guide, the user will be able to replace the back panel of the Nextbook NX008HD8G.

Written By: Philip Gai



This document was generated on 2019-09-28 01:48:43 PM (MST).

INTRODUCTION

Use this guide to replace a broken back panel. Sliding the plastic opening tool between the back panel and the front glass can be difficult.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel



- Using your finger, open the plastic tab to the right of the rear-facing camera.
- Wedge your fingernail in between the back panel and the plastic tab and pull the plastic tab towards your body.

Step 2




- Using your finger, remove the SD card by pressing down on top of it (toward the bottom of the device) until you hear a clicking sound.
- Once the card pops out, use your finger to pull the card completely out of the SD card slot.

Step 3



- Remove the 5 mm screw using the Phillips PH00 bit in the iFixit metal Screwdriver.



Step 4

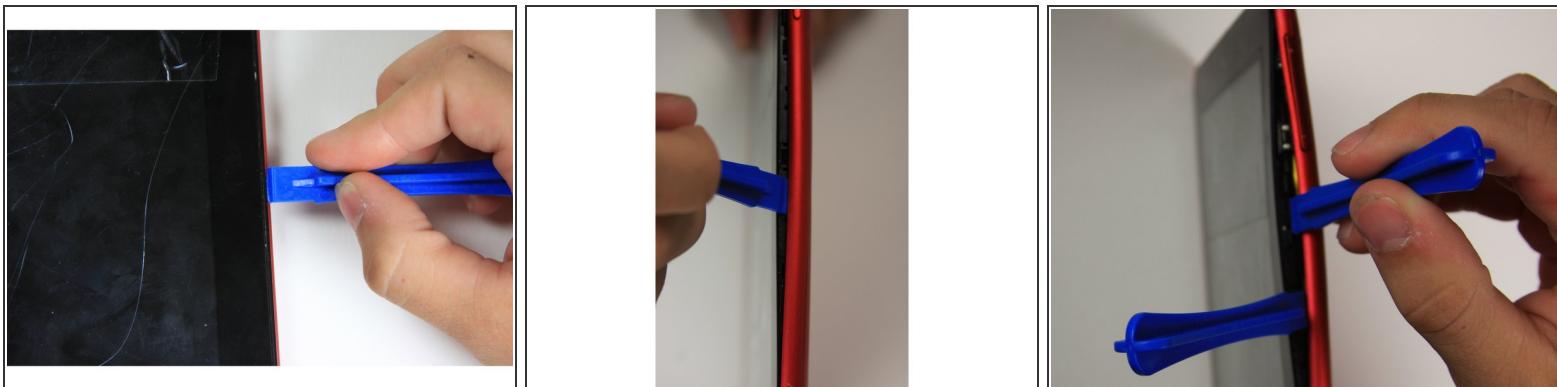

- Use the plastic opening tool to separate the back panel by carefully sliding the narrow end of the tool between the front glass and back panel.
- Use a second plastic opening tool to help pry the front glass from the back panel.

(i) You will hear some cracking sounds when separating the front glass from the back panel. That is okay! That is the back panel latches releasing the front glass.

Step 5

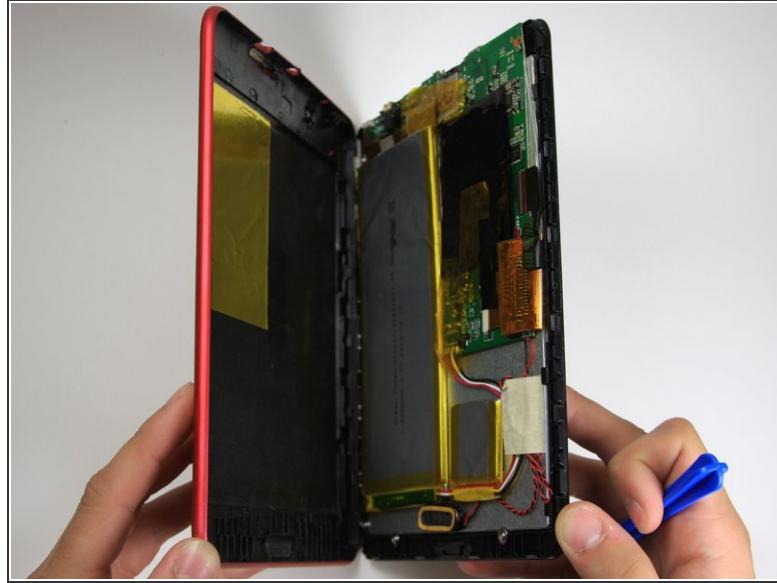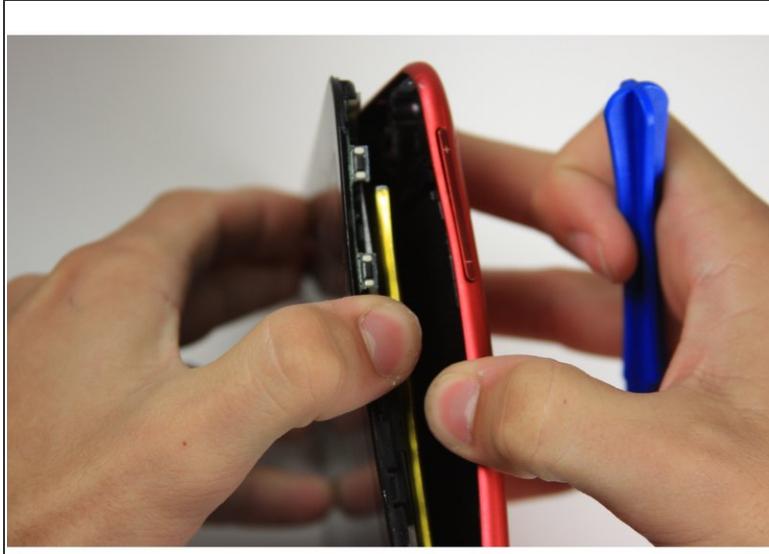

- Use your hands to completely separate the rest of the front glass from the back panel.

 Do not pull the device apart with too much force. If you do, you may break or bend the back panel.

To reassemble your device, follow these instructions in reverse order.