




Nexus 5X Battery Disconnection

prereq battery disconnect

Written By: Dominik Schnabelrauch

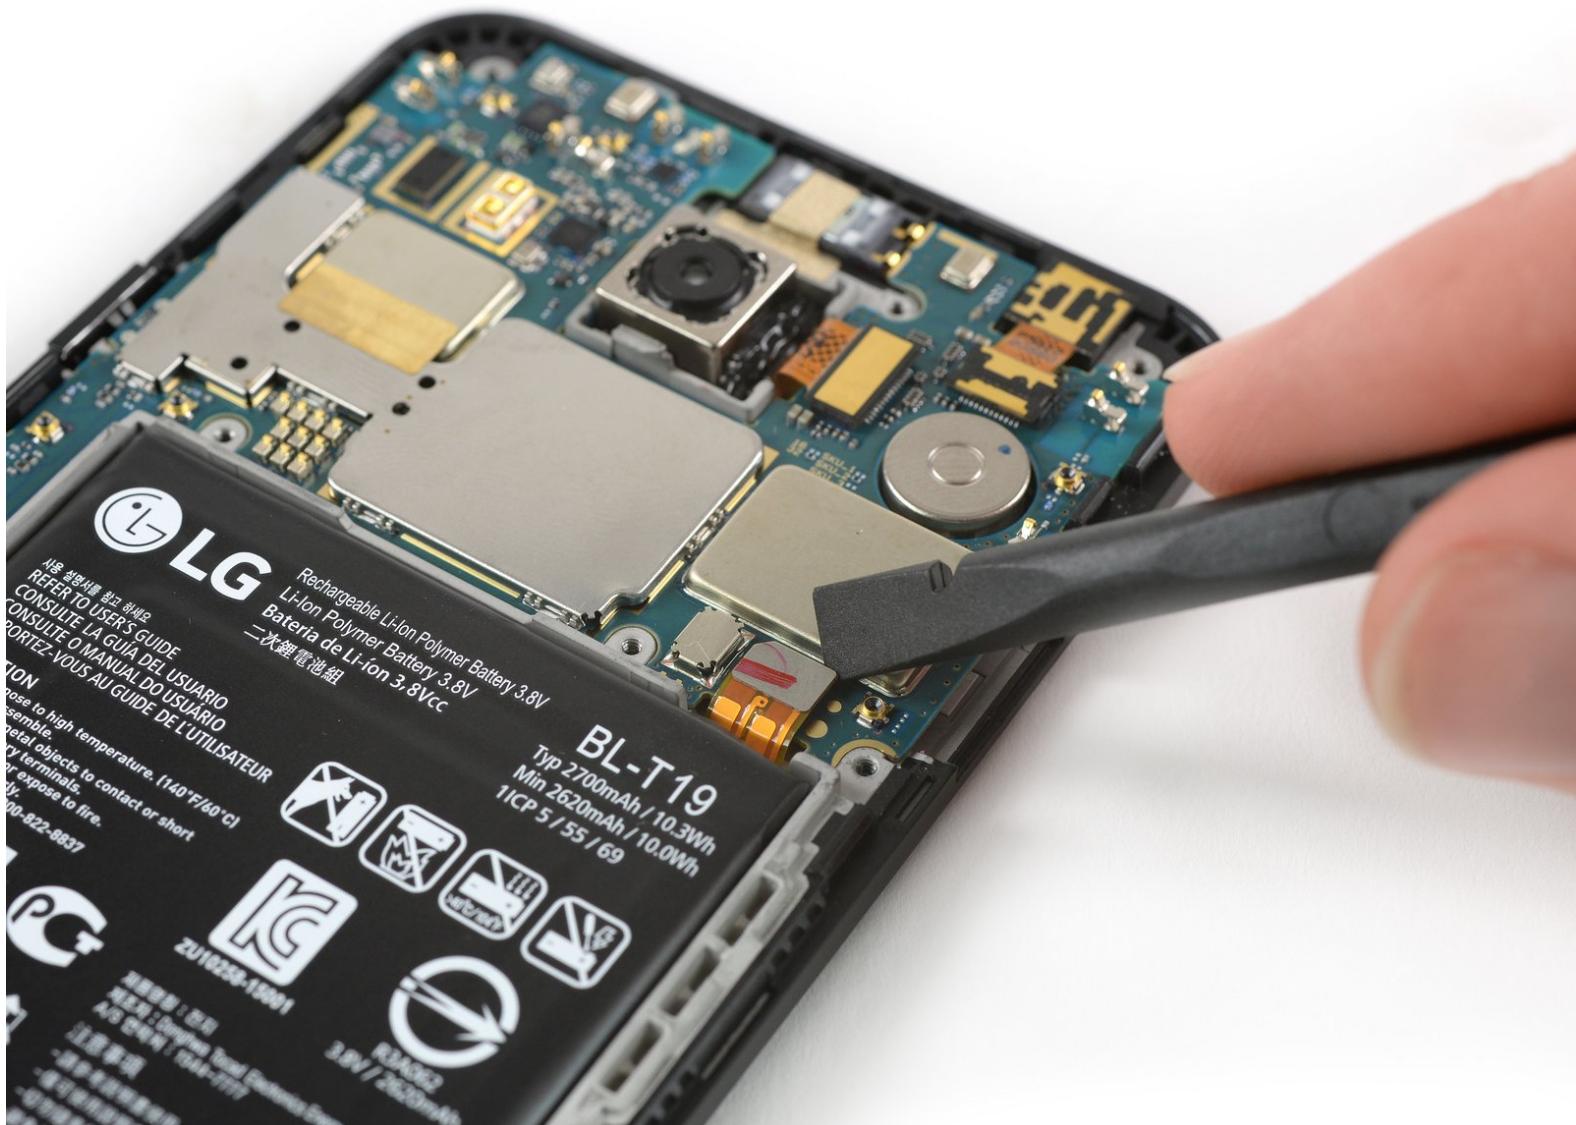


INTRODUCTION

prereq battery disconnect

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Battery Disconnect

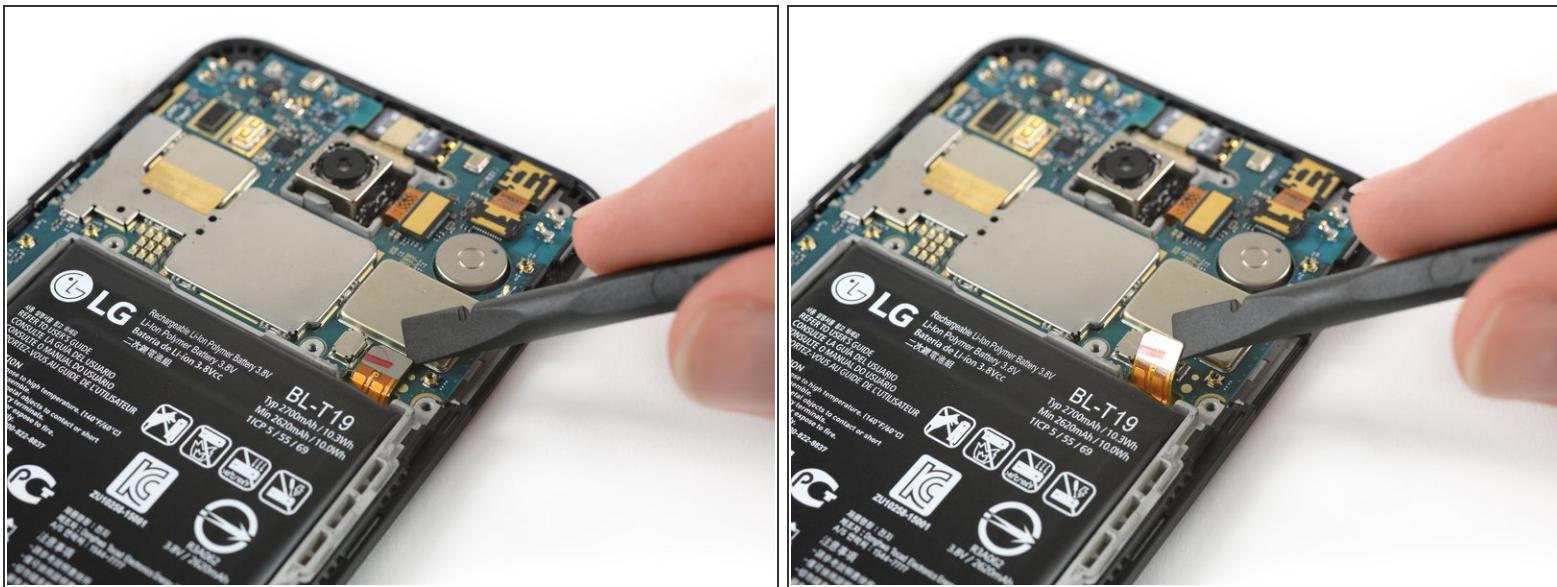

- Use the edge of a spudger to pry up and disconnect the battery flex cable located at the bottom right of the motherboard.

To reassemble your device, follow these instructions in reverse order.