



Nexus 6 SIM Card Replacement

Replace the SIM card.

Written By: Geoff Wacker



INTRODUCTION

Use this guide to replace the SIM card in your Nexus 6.

TOOLS:

- [SIM Card Eject Tool \(1\)](#)

Step 1 — SIM Card



- With a SIM card eject tool (a paperclip will work as well), push down on the hole at the top of the phone until the SIM card holder releases. This should not take much pressure.
- Remove the SIM card and the SIM card holder.

To reassemble your device, follow these instructions in reverse order.