



Nexus S SIM Card Replacement

Replace the SIM card in your Nexus S.

Written By: Walter Galan



INTRODUCTION

Use this guide to replace the SIM card.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Rear Panel



- Gently insert a plastic opening tool between the rear panel and the inner rear frame near the rear-facing camera.
- Use your plastic opening tool to pry up the rear case around the perimeter of the Nexus S.

Step 2



- Remove the rear panel from the Nexus S.

Step 3 — Battery



- Using the edge of a plastic opening tool, lift the battery from the end closest to the headphone jack.
- Remove the battery from the Nexus S.

Step 4 — SIM Card



- Use your thumb to slide the SIM card downwards from the SIM card slot.
- Remove the SIM card.

To reassemble your device, follow these instructions in reverse order.