



Nexus S Speaker Assembly Replacement

Written By: Walter Galan



INTRODUCTION

Internal prereq.



TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Speaker Assembly



- Use the flat end of a metal spudger to dislodge the speaker from its recess in the front display assembly.

To reassemble your device, follow these instructions in reverse order.