



Nikon COOLPIX P500 Battery Replacement

Details the location of the battery pack and how to replace it.

Written By: Carmen Dang



Step 1 — Battery



⚠ Electric shock is a huge risk if the battery is not removed while taking the camera apart.

- Press down and forward on the battery cover latch.
- Push the orange latch, in the direction of the arrow on it, to release the battery.

To reassemble your device, follow these instructions in reverse order.