



Nikon COOLPIX P600 Battery Replacement

This guide will teach users of the Nikon COOLPIX P600 how to replace its battery.

Written By: Geronimo Gutierrez IV



INTRODUCTION

In this guide you will learn how to replace the Nikon COOLPIX P600 battery, in as little as three easy steps. The steps will include where the battery compartment is located, what the switch to the battery cover looks like, and how to remove the battery.

Additional Information

[Nikon COOLPIX P600 Technical Specifications](#)


[Nikon COOLPIX P600 Service & Support](#)

Step 1 — Battery



- Turn the camera upside down so that the lens is facing away from you.

Step 2

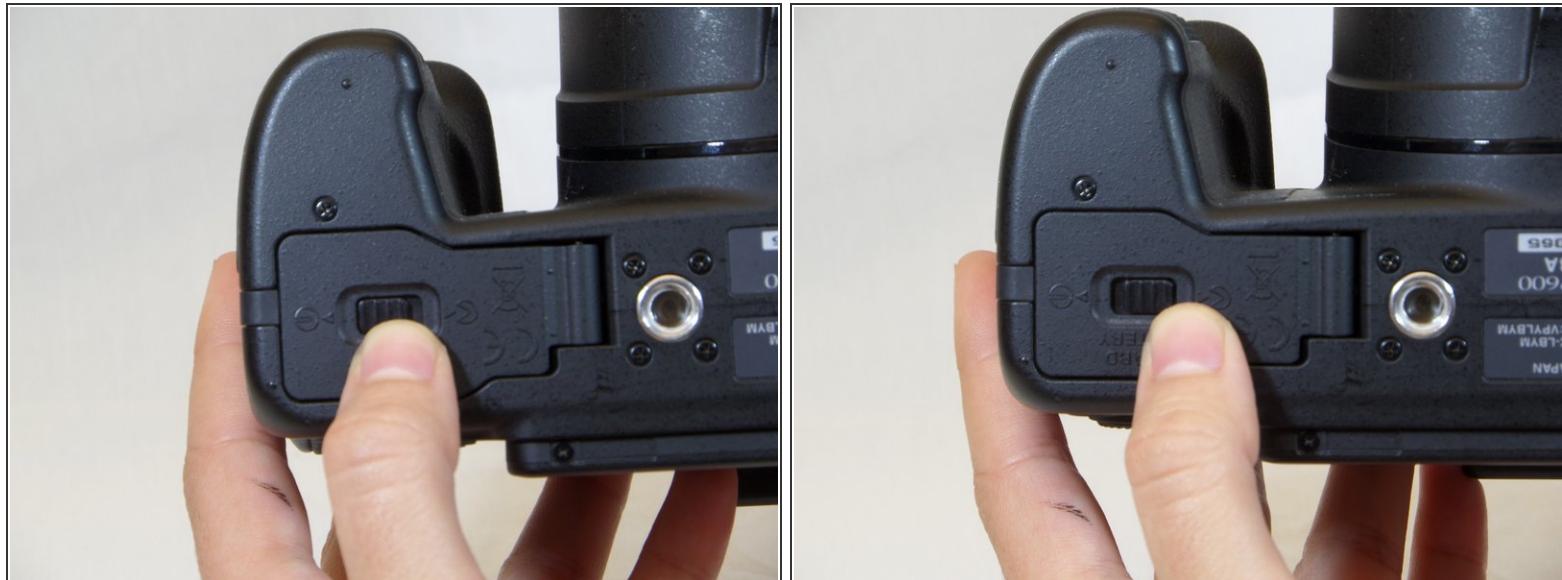

- Slide the switch on the battery cover towards the center of the camera.

Step 3



- Once the battery cover is open, push the solid yellow tab in the direction of the arrow. This will then eject the battery out of the camera.

To reassemble your device, follow these instructions in reverse order. Make sure the battery is pushed back into the battery compartment enough to have the yellow latch seen in step three click back over the top of the battery before attempting to close the battery cover.