



# Nikon COOLPIX P7700 Back Casing Replacement

This guide will show how to replace a back casing of a Nikon COOLPIX P7700 camera.

Written By: Dustin Wahl




## INTRODUCTION

This guide showcases how to replace the back casing on a Nikon COOLPIX p7700 camera. By following these seven simple steps, you should comfortably be able to remove the casing on the camera to get to the inside.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Casing

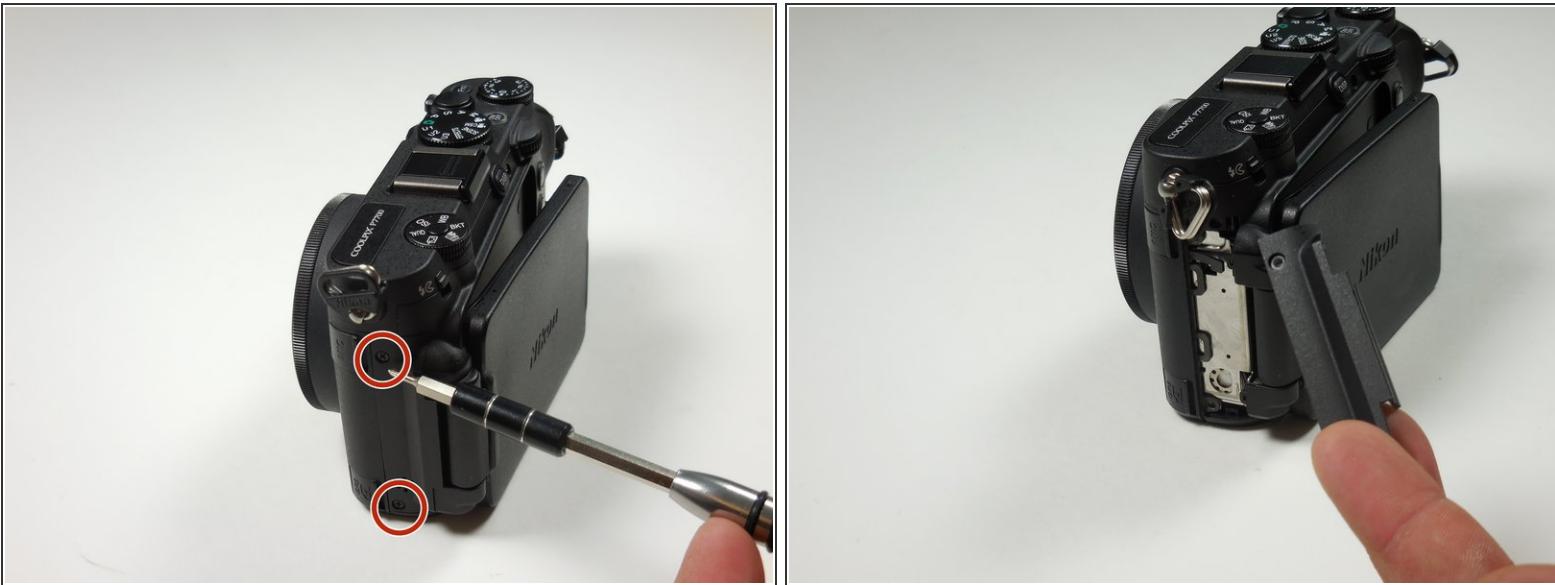

- Turn camera to the left side and remove the two 4.3 mm black side screws using the Phillips #00 screwdriver.
- Remove the side panel.

## Step 2



- Open the touch screen, and remove the three 4.3 mm black screws inside using the Phillips #00 screwdriver.

## Step 3



- Remove the 4.3 mm black screw on top of the camera, right above where the screen folds out. Use the Phillips #00 screwdriver.

## Step 4




- Remove the two 4.3 mm black screws on the right side of the camera using the Phillips #00 screwdriver.

## Step 5



- Remove the 4.3 mm black screws on the bottom of the camera using the Phillips #00 screwdriver.


## Step 6

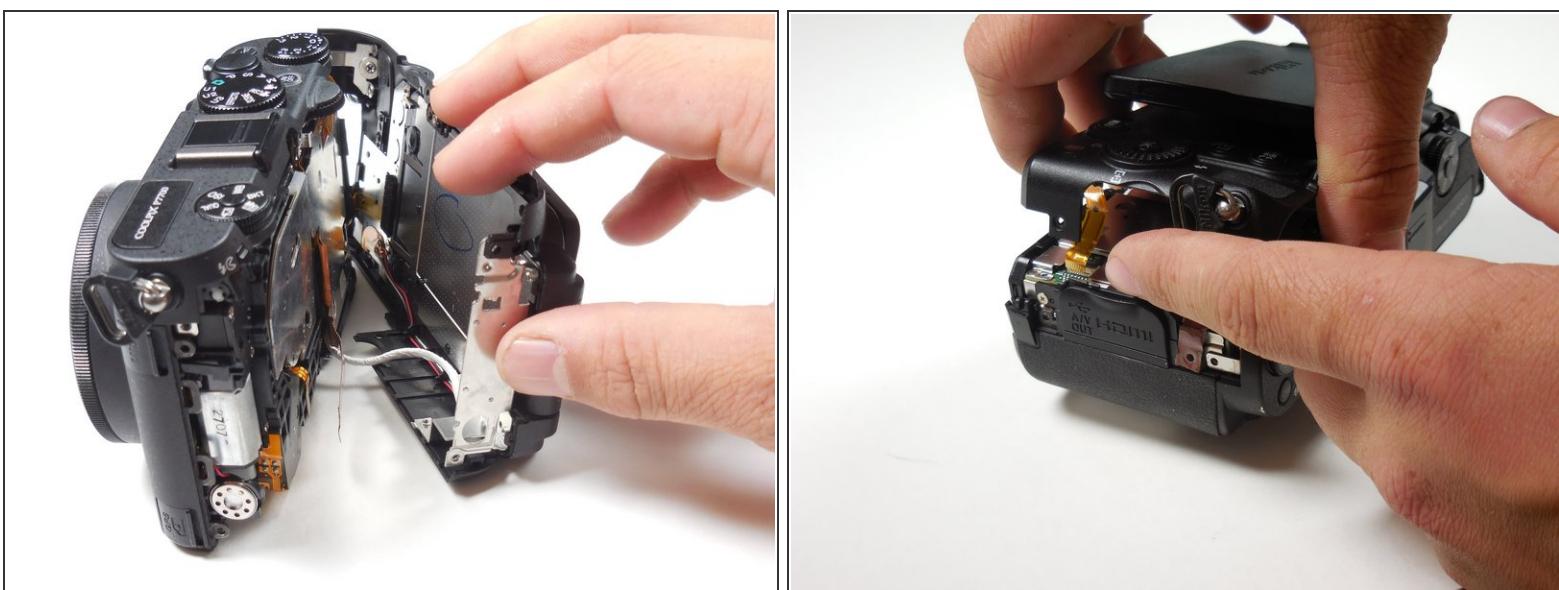

- Begin separating the camera into two parts.

*(i)* It is okay to remove the orange ribbon. This will be easily put back into place when re-assembling.

## Step 7

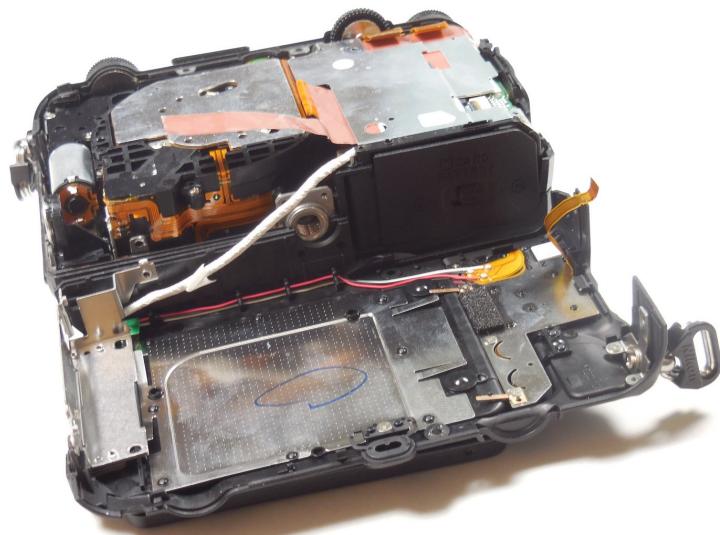

- Remove the back casing.

To reassemble your device, follow these instructions in reverse order.