



Nikon COOLPIX P7700 LCD Screen Display Replacement

This guide will accomplish how to remove and replace a damaged Nikon Coolpix P7700 display screen.

Written By: Matthew Seidel



This document was generated on 2019-09-18 05:43:10 AM (MST).

INTRODUCTION

This guide explains how to repair the Nikon COOPIX P7700 LCD display screen in six straightforward steps.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — LCD Screen Display



- Remove the camera's battery.

Step 2



- Fold out the screen on the back of the camera.

Step 3



- Remove the 4.3 screw on the top and bottom of the screen casing. Use the Phillips #00 screwdriver.

Step 4



- Place the camera lens-side down and twist the screen so that it is perpendicular to the camera.
- Remove the 4.3 mm screw on the side of the casing using the Phillips #00 screwdriver.
- Twist the screen in the other direction and remove the other 4.3 mm screw.

⚠ These screws are very brittle! Use care removing them.

Step 5



- Remove the casing from the screen

Step 6



- Replace the LCD display.

To reassemble your device, follow these instructions in reverse order.