




Nikon COOLPIX P7700 Multi Selector Wheel Replacement

This guide will show how to replace the rotary multi selector control wheel on a Nikon COOLPIX P7700 camera.

Written By: Dustin Wahl

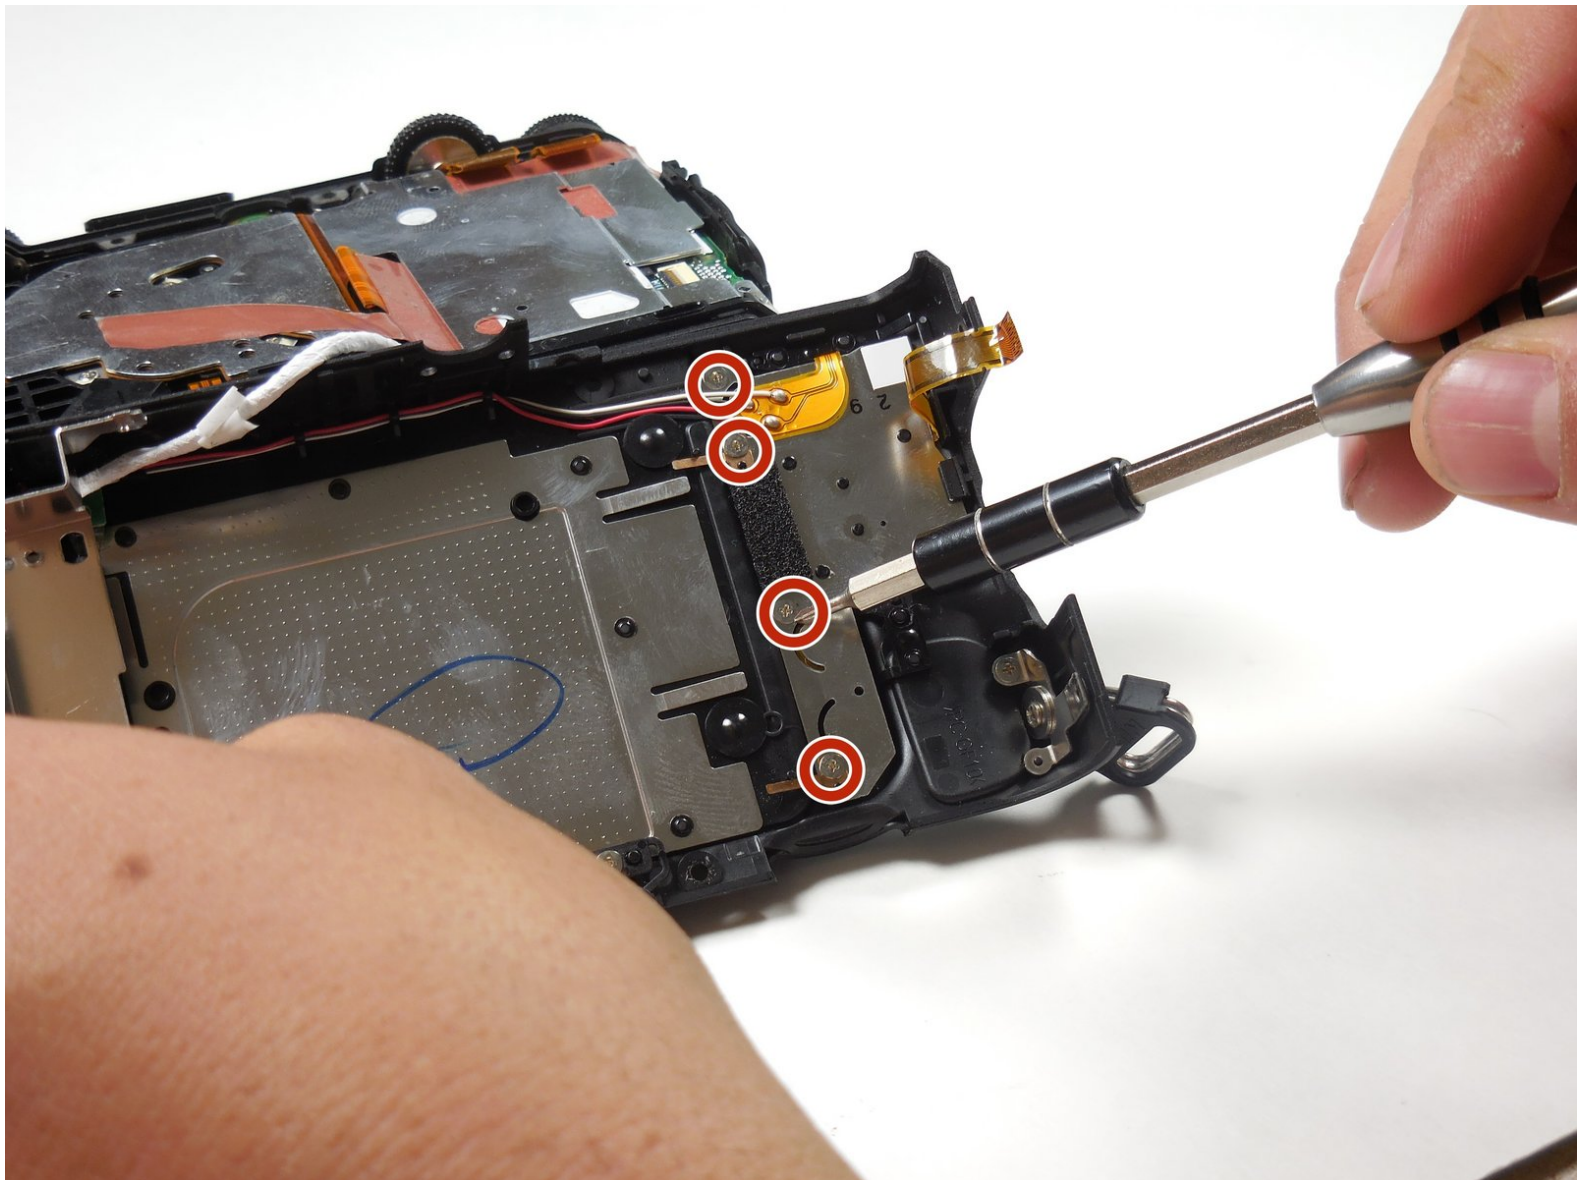

INTRODUCTION

By following these nine simple steps, one can successfully replace the multi selector wheel of the Nikon COOLPIX P7700 camera after having removed the casing.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Casing



- Turn camera to the left side and remove the two 4.3 mm black side screws using the Phillips #00 screwdriver.
- Remove the side panel.

Step 2



- Open the touch screen, and remove the three 4.3 mm black screws inside using the Phillips #00 screwdriver.

Step 3



- Remove the 4.3 mm black screw on top of the camera, right above where the screen folds out. Use the Phillips #00 screwdriver.

Step 4





- Remove the two 4.3 mm black screws on the right side of the camera using the Phillips #00 screwdriver.

Step 5



- Remove the 4.3 mm black screws on the bottom of the camera using the Phillips #00 screwdriver.


Step 6

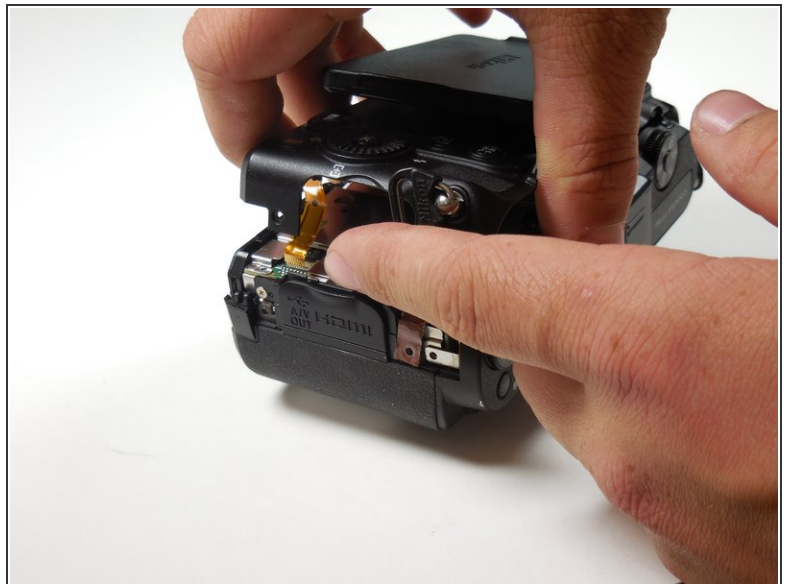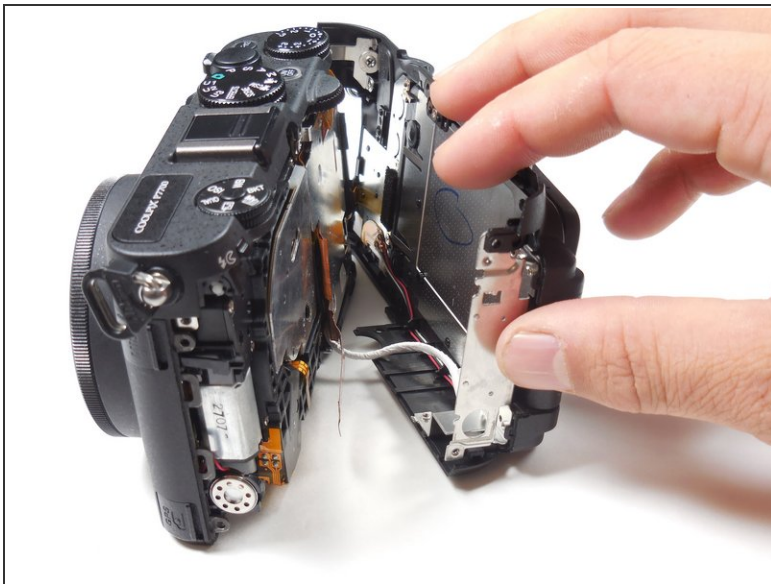

- Begin separating the camera into two parts.


i It is okay to remove the orange ribbon. This will be easily put back into place when re-assembling.

Step 7

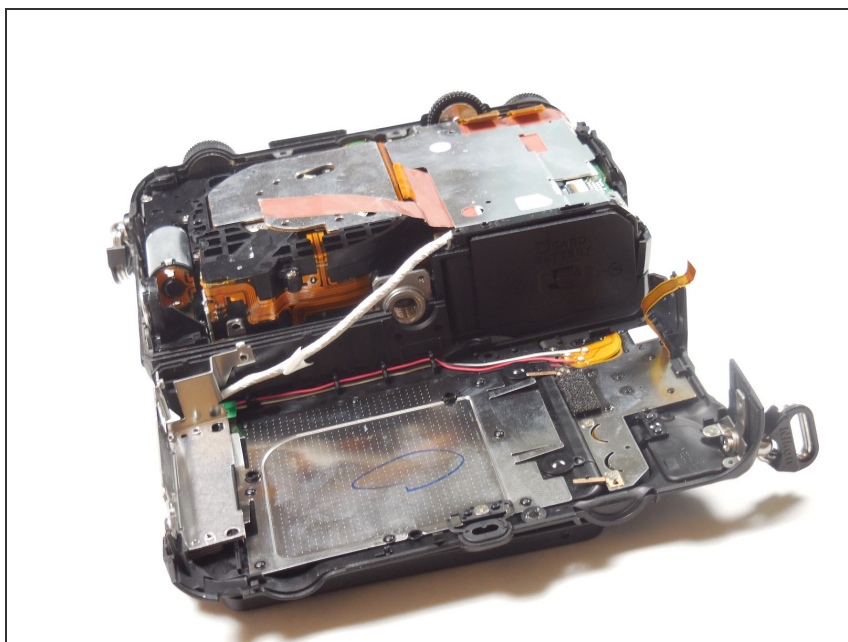



- Remove the back casing.

Step 8 — Multi Selector Wheel

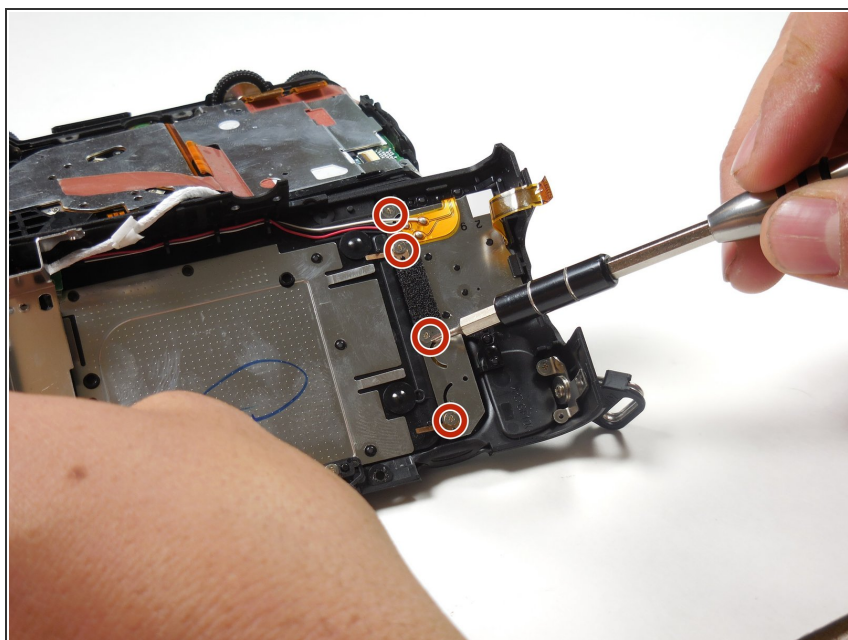

- Remove the four 4.3 mm screws located on the far right metal plate. Use the Phillips #00 screwdriver.

Step 9

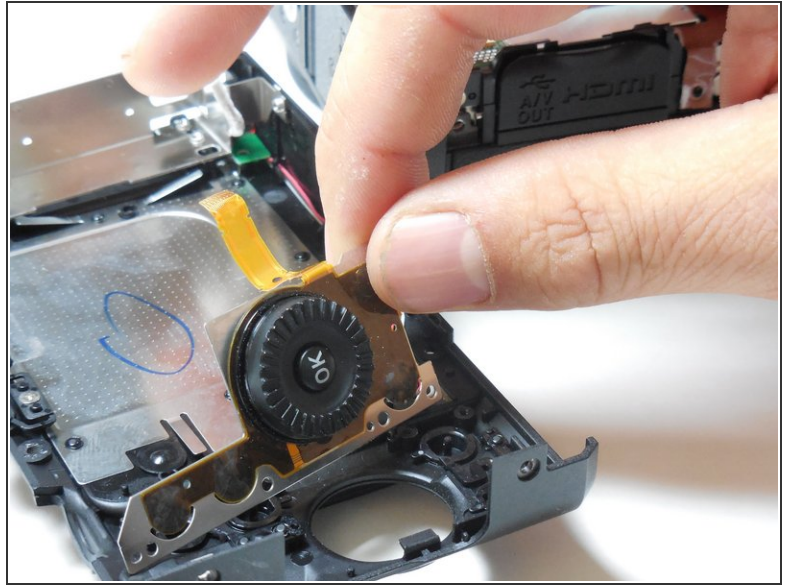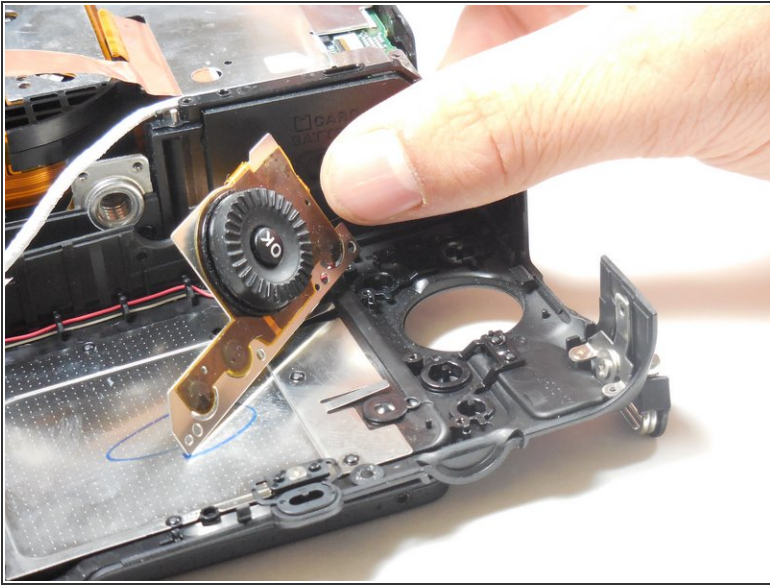

- Remove and replace wheel.

To reassemble your device, follow these instructions in reverse order.