


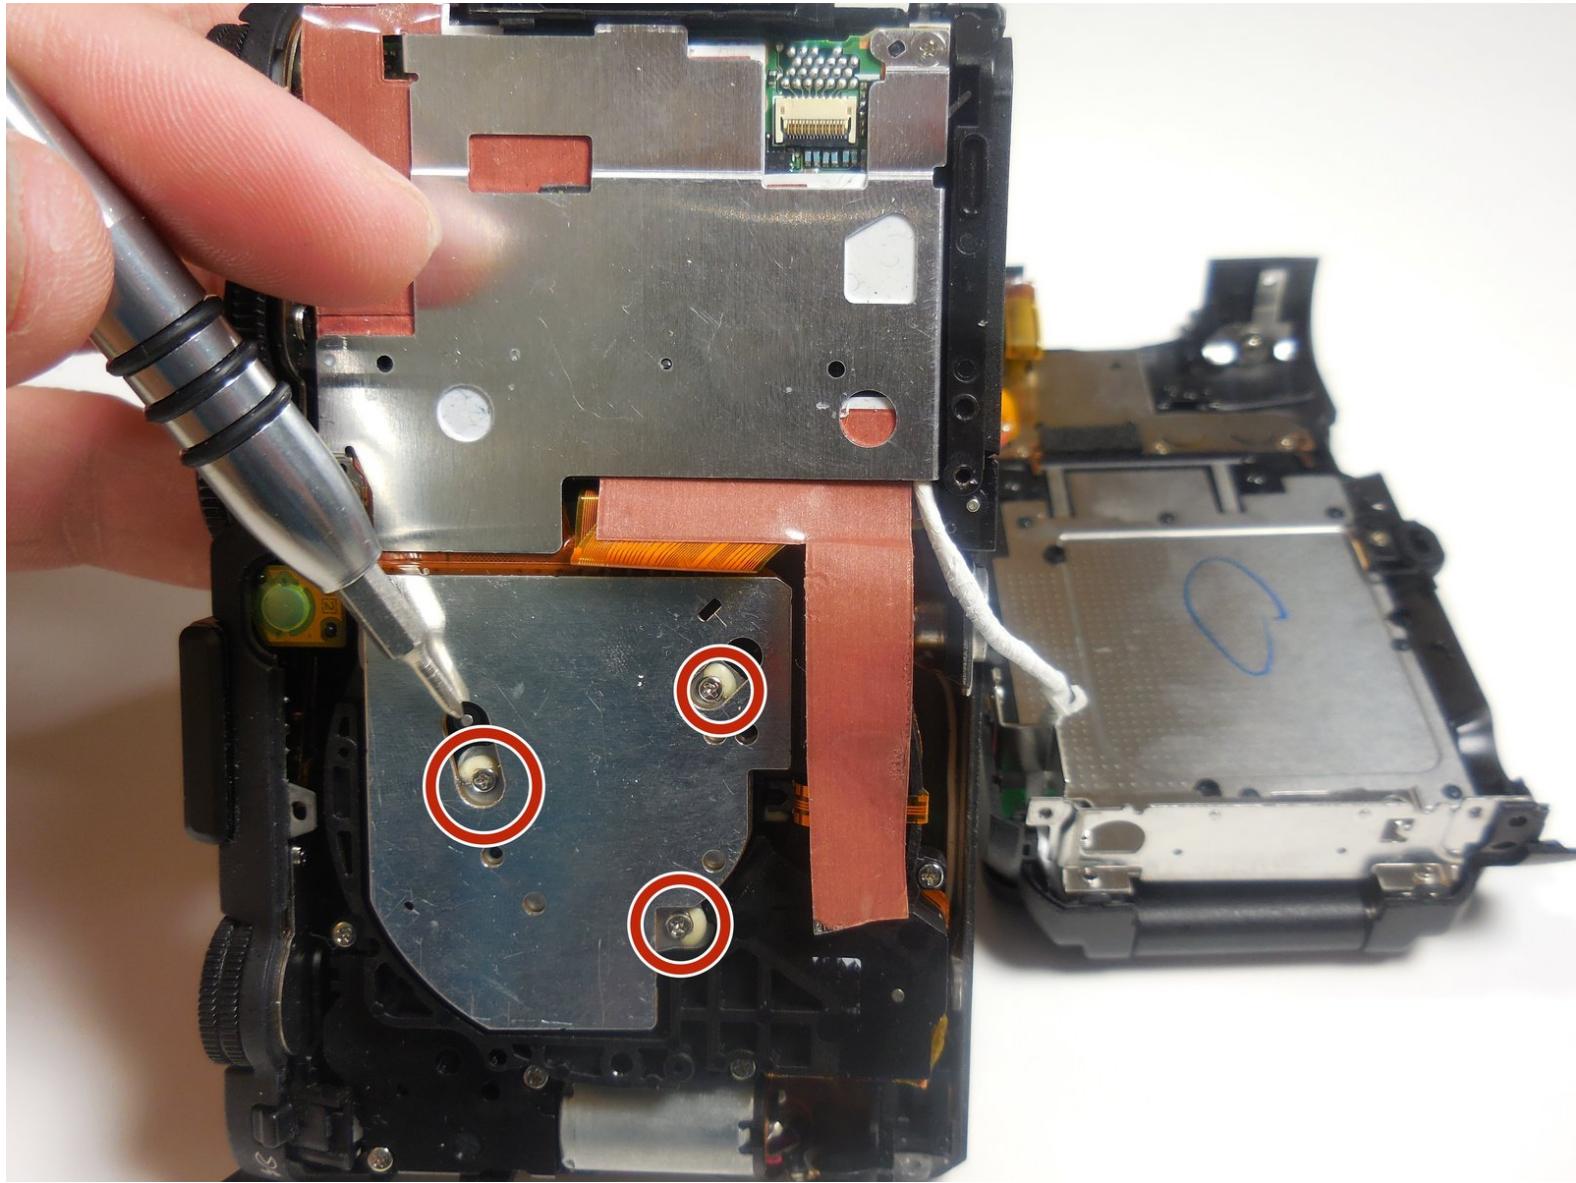

Nikon COOLPIX P7700 Reflective Mirror Replacement

This guide will show how to replace a Nikon COOLPIX P7700 Reflective mirror.

Written By: Dustin Wahl



INTRODUCTION

By following these ten steps one can effectively replace the Nikon COOLPIX P7700 camera's internal reflective mirror.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Casing



- Turn camera to the left side and remove the two 4.3 mm black side screws using the Phillips #00 screwdriver.
- Remove the side panel.

Step 2



- Open the touch screen, and remove the three 4.3 mm black screws inside using the Phillips #00 screwdriver.

Step 3



- Remove the 4.3 mm black screw on top of the camera, right above where the screen folds out. Use the Phillips #00 screwdriver.

Step 4





- Remove the two 4.3 mm black screws on the right side of the camera using the Phillips #00 screwdriver.

Step 5



- Remove the 4.3 mm black screws on the bottom of the camera using the Phillips #00 screwdriver.

Step 6

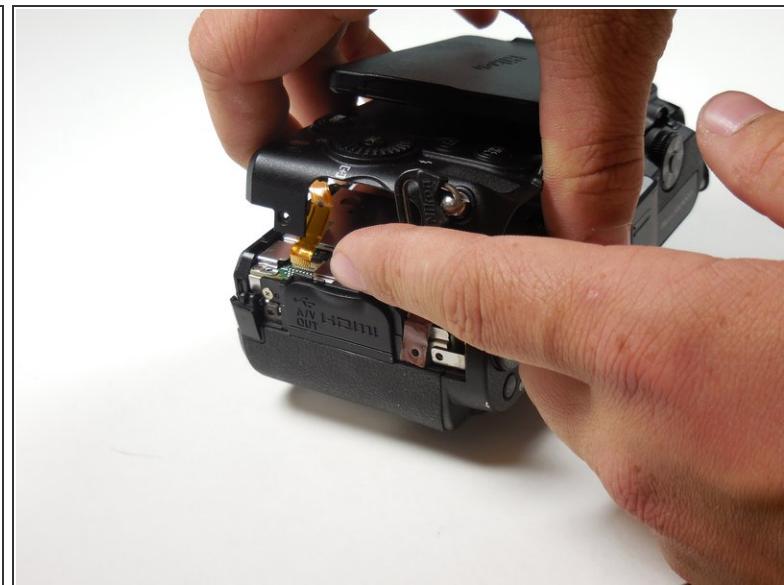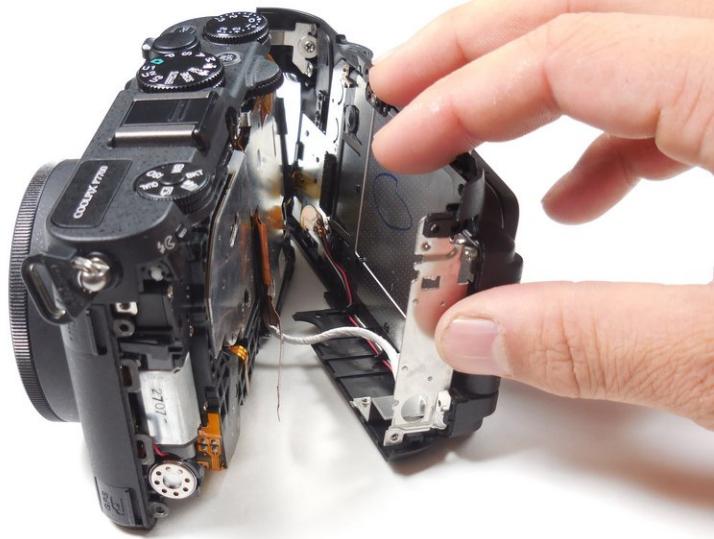

- Begin separating the camera into two parts.



(i) It is okay to remove the orange ribbon. This will be easily put back into place when re-assembling.

Step 7

- Remove the back casing.




Step 8 — Reflective Mirror

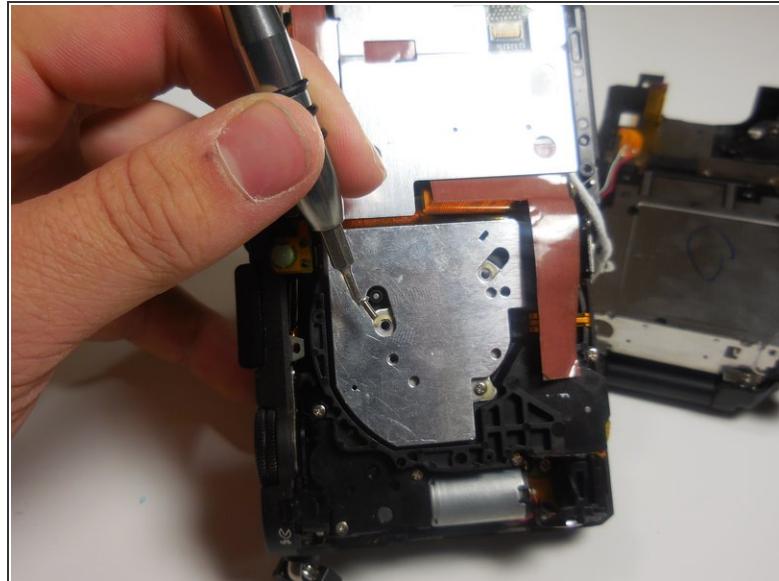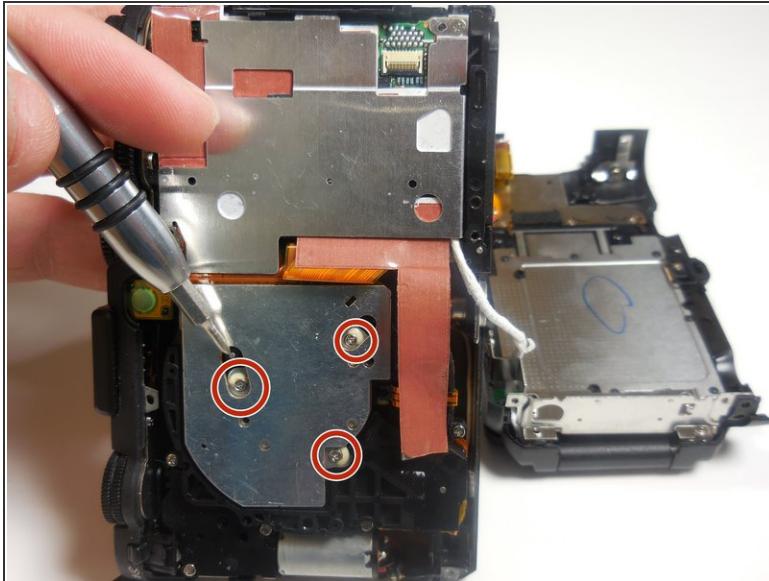


- Remove the three 4.3 mm screws on the right metal sheet using the Phillips #00 screwdriver.
- *i* It is okay to remove the orange ribbon.

Step 9

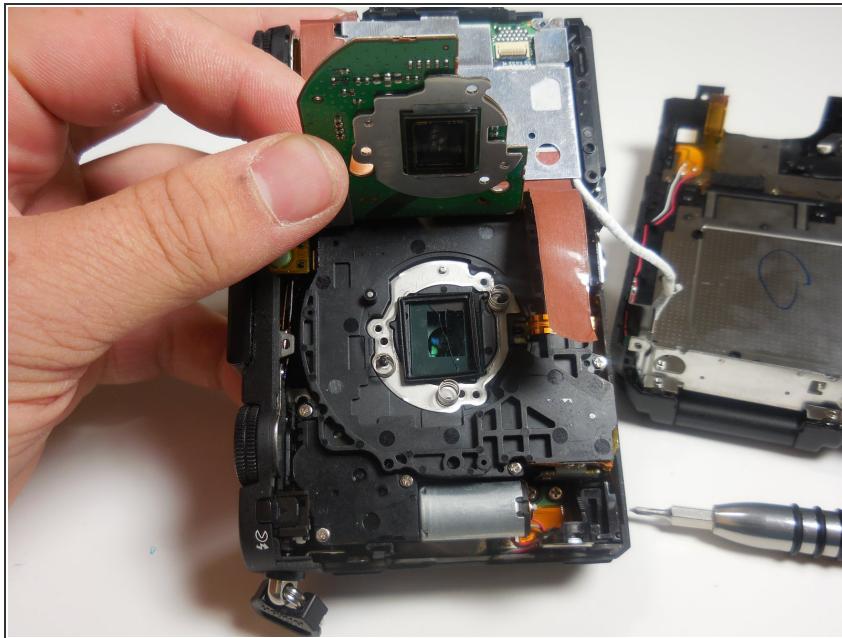

- Lift the metal sheet up to locate the reflective mirror.

Step 10

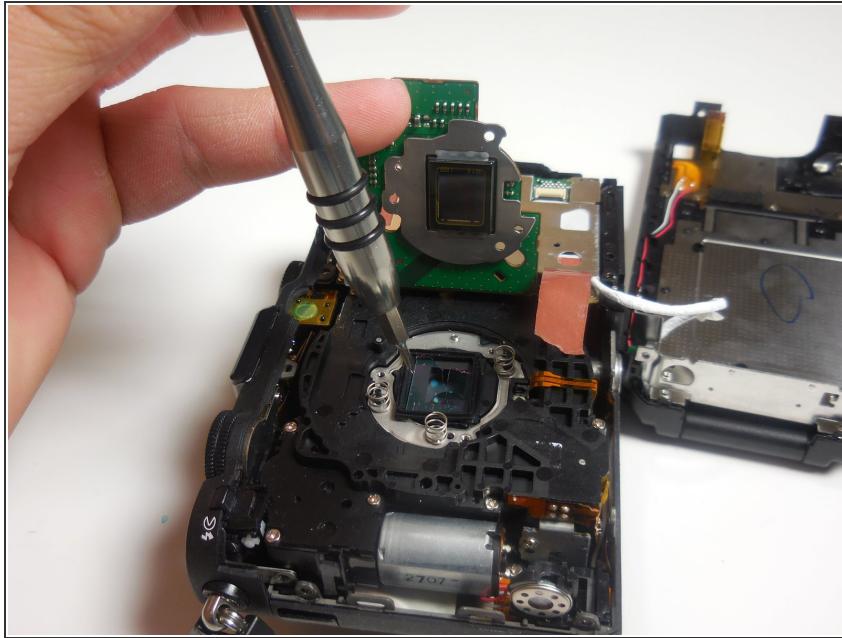

- Remove and replace the reflective mirror.

To reassemble your device, follow these instructions in reverse order.