



# Nikon COOLPIX S610c Battery Replacement

Replace the battery for the Nikon COOLPIX S610c

Written By: dominic



## INTRODUCTION

This guide demonstrates installing the battery of the Nikon COOLPIX S610c.

## Step 1 — Battery



- On the bottom right of the camera, locate the battery flap switch.

## Step 2



- Move this switch to the right so the battery flap can flip open.

## Step 3



- Slide the orange switch to the right as shown. Now the battery can be pulled out. Reverse these steps to re-install.

To reassemble your device, follow these instructions in reverse order.