




Nikon CoolPix S5 Back Cover Replacement

This guide demonstrates how to install the back cover on the Nikon CoolPix S5 camera.

Written By: Patty Richeson

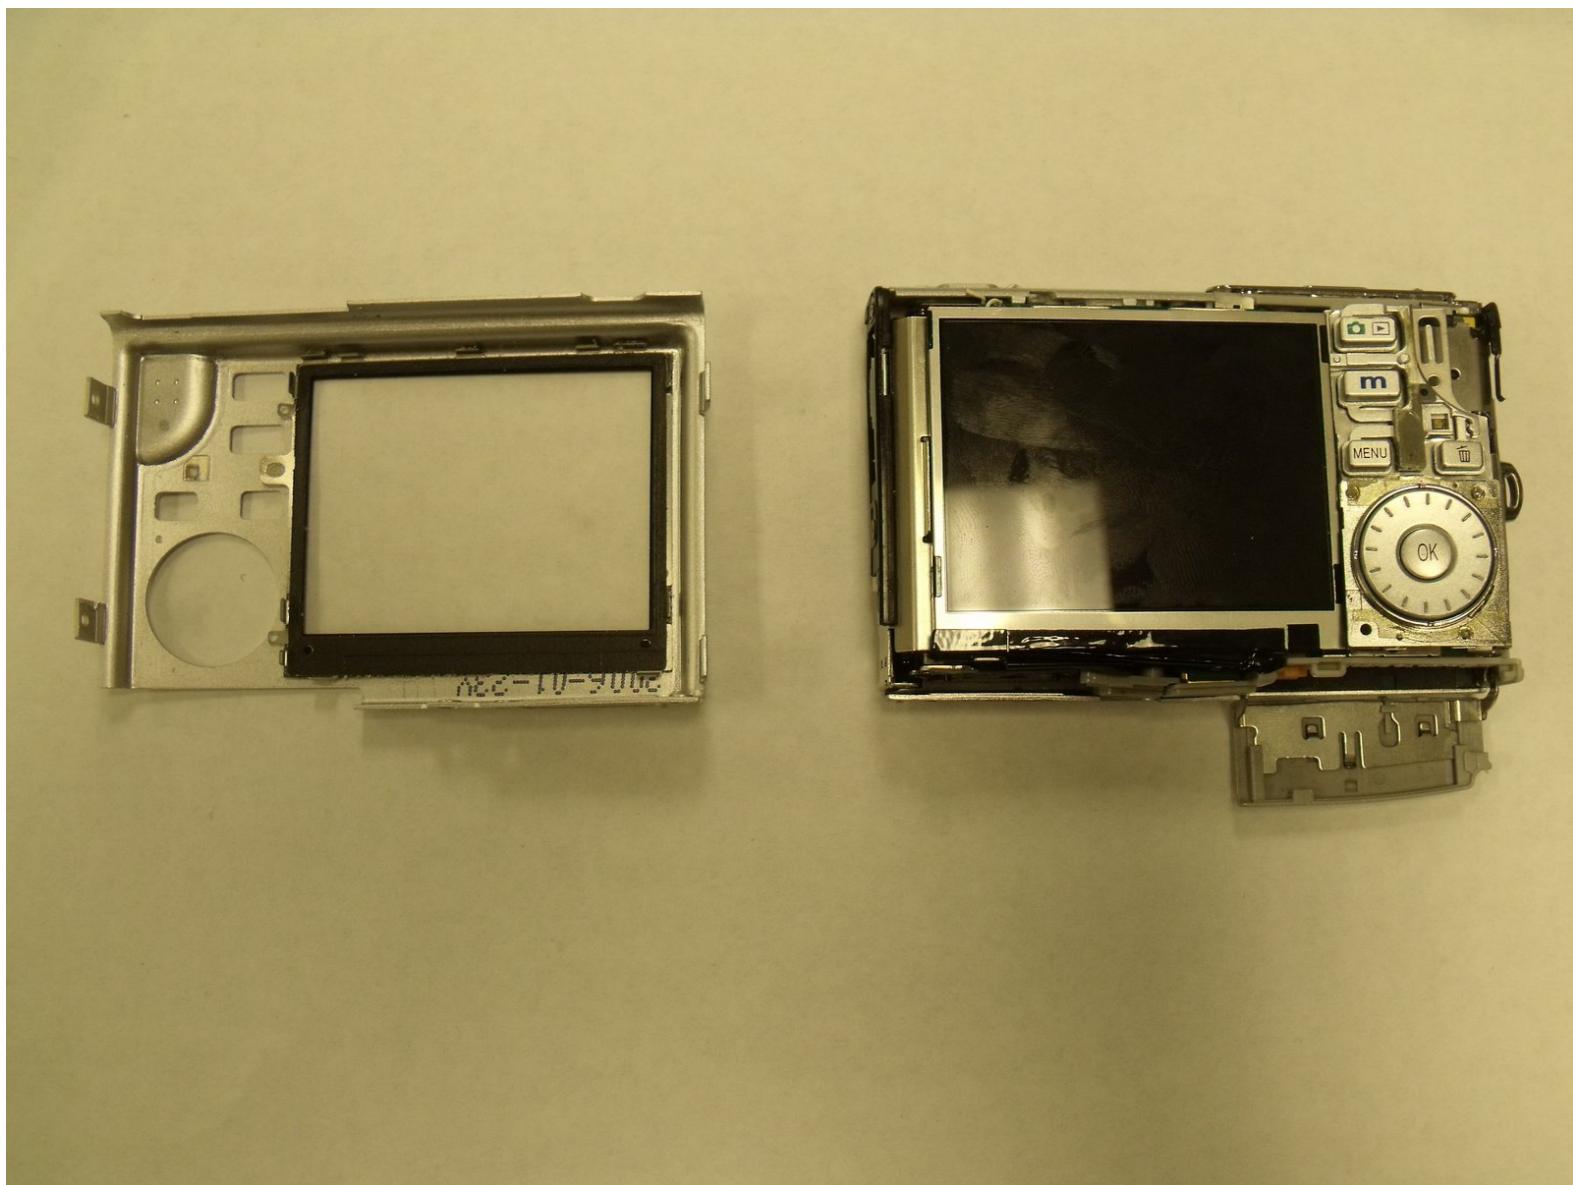


INTRODUCTION

This guide is to be used to install the back cover in the event that it becomes damaged. A Phillips screwdriver will be needed to complete this installation.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Cover

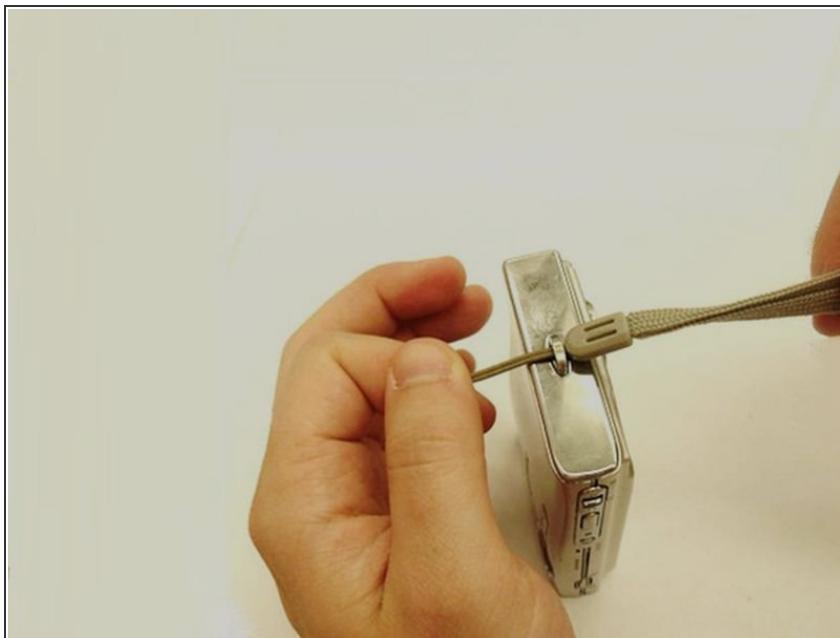


- Remove wrist strap by unknotting the strap.

Step 2

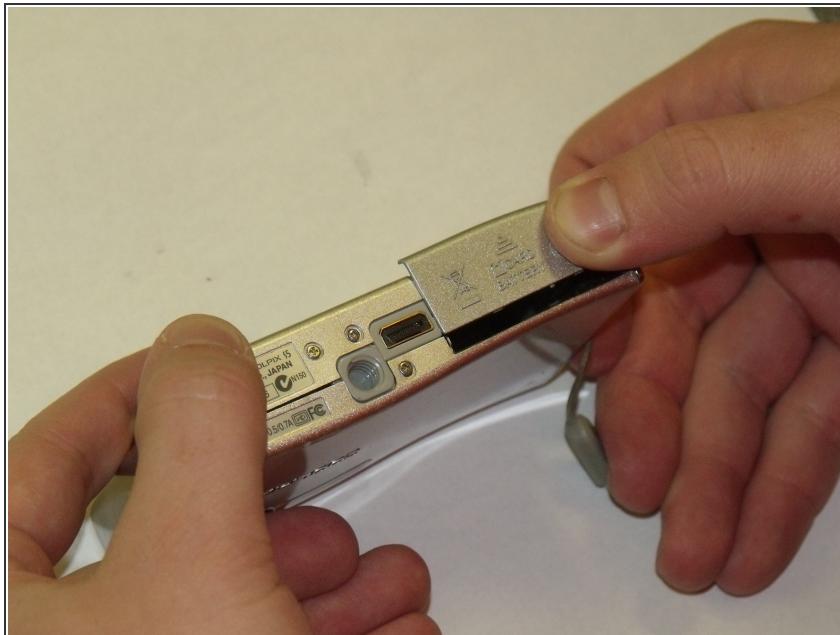


- Open SD/Battery cover.

Step 3

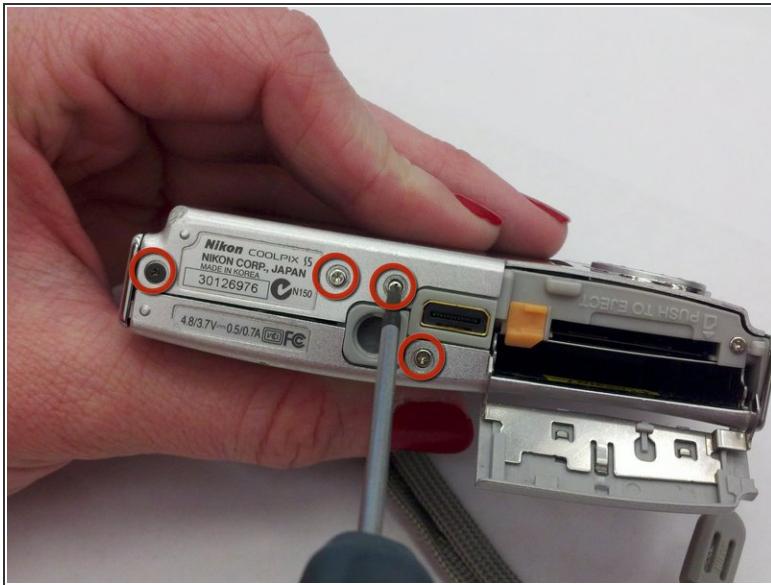


- Remove the four screws on the bottom of the camera using the Phillips-Head screwdriver.

Step 4

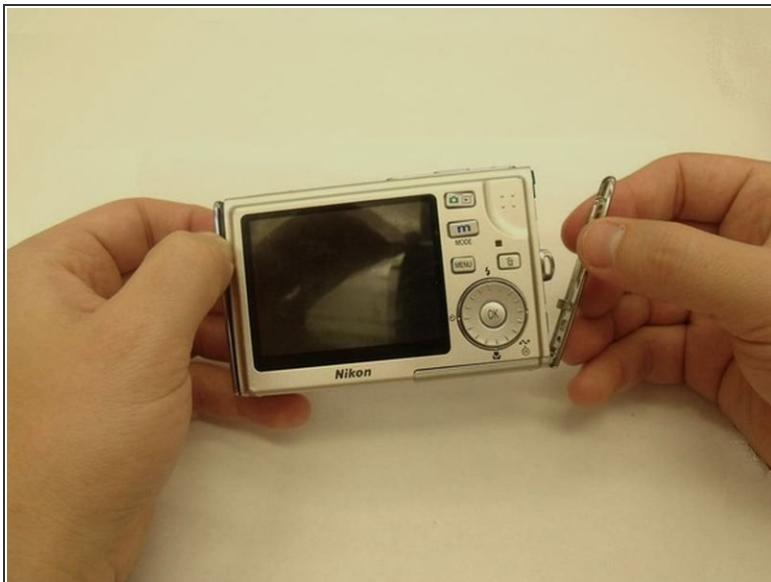


- Pull the silver side panels on each side.

Step 5

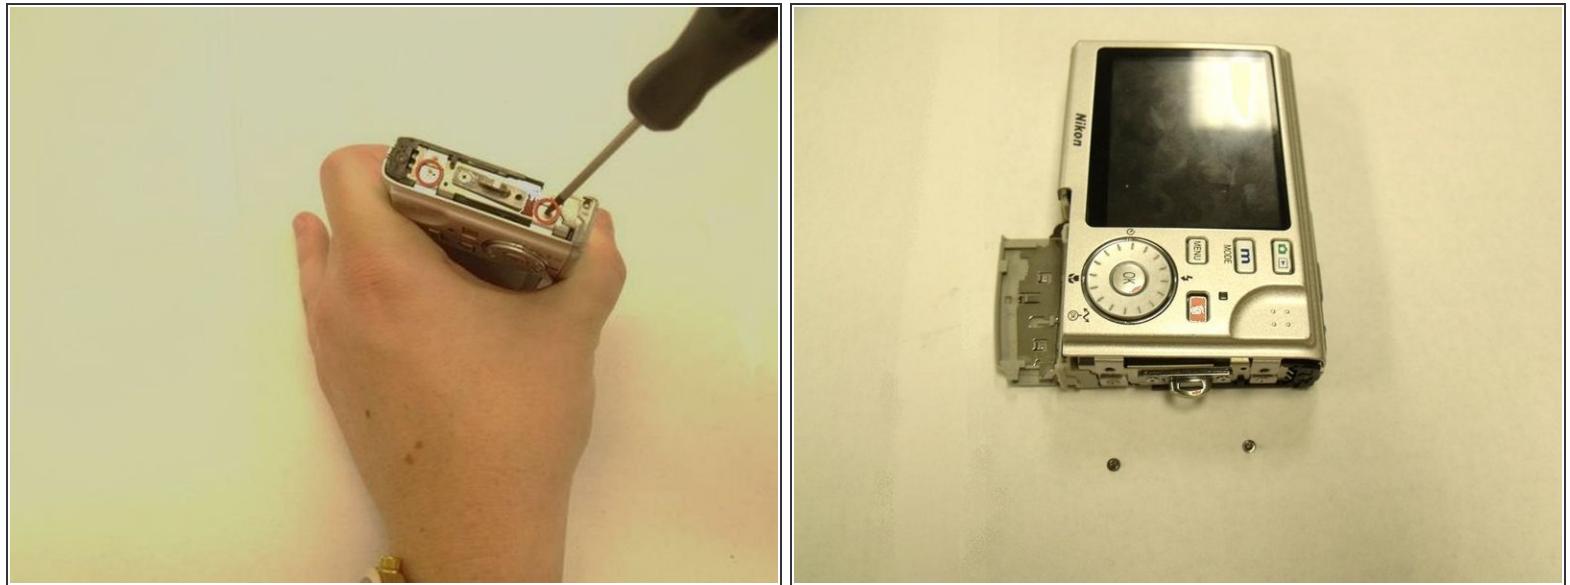

- On the right side of the camera (that contains the wrist strap loop), use the screwdriver to remove the two screws holding the backplate in place.
- Repeat this step for the left side.

Step 6

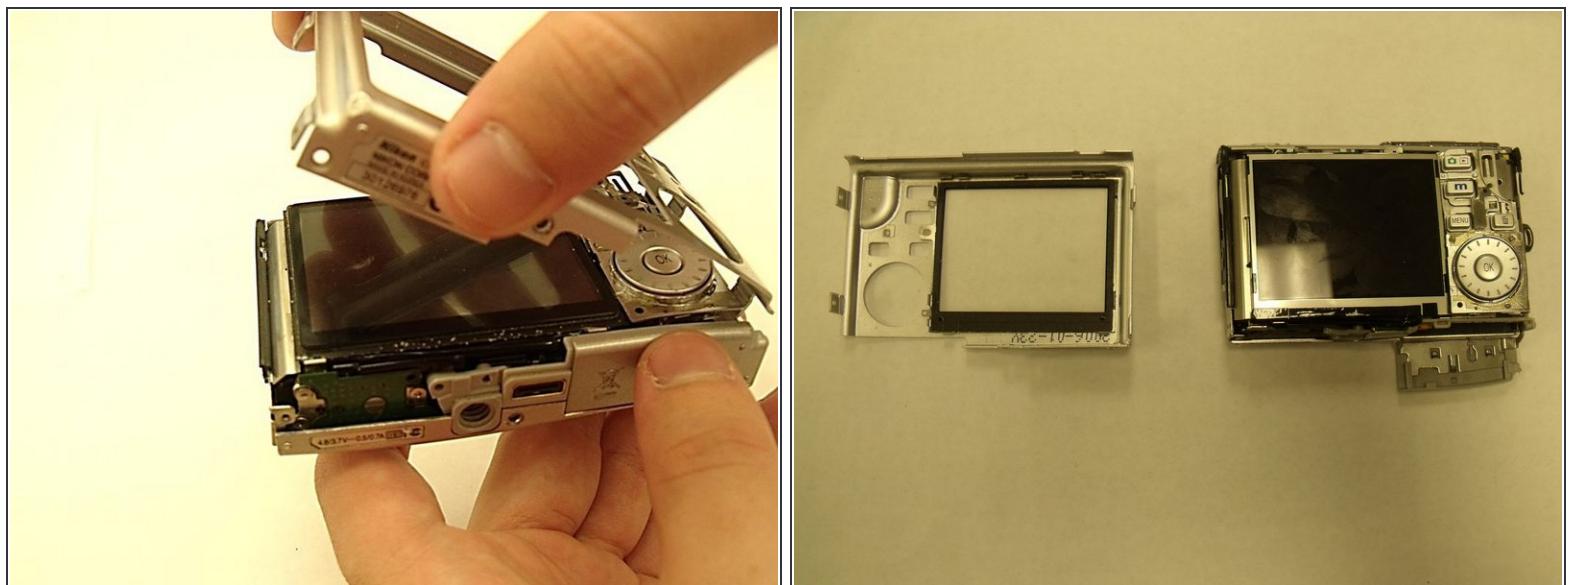

- Pull the back silver faceplate to separate it from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.