



# Nikon CoolPix S5 Plastic LCD Screen Cover Replacement

This guide demonstrates how to install the plastic LCD screen cover on the Nikon CoolPix S5 camera.

Written By: Josh Miller




## INTRODUCTION

This guide is to be used to install the plastic LCD screen cover in the case that it becomes damaged or no longer functions properly due to overuse. A Phillips screwdriver will be needed to complete this installation.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover

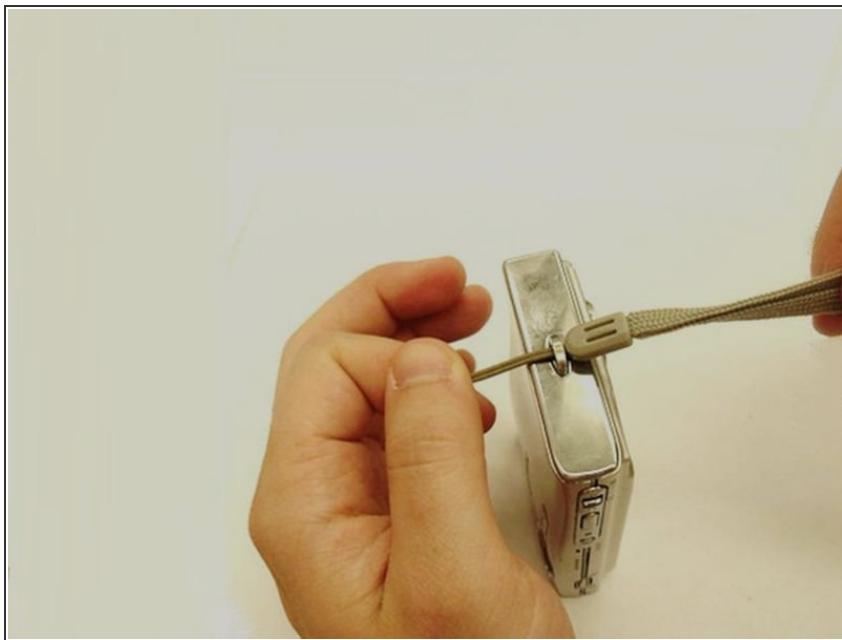


- Remove wrist strap by unknotting the strap.

## Step 2

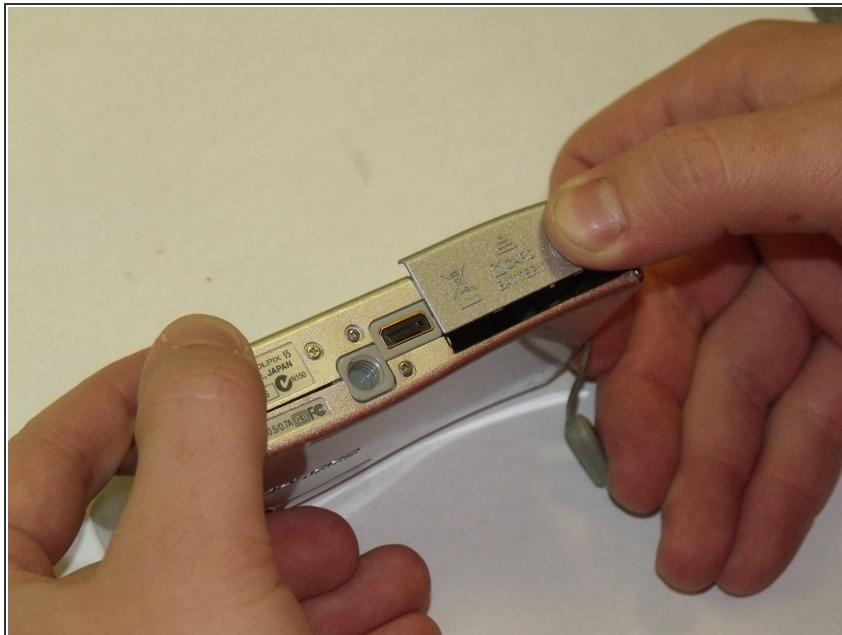


- Open SD/Battery cover.

## Step 3

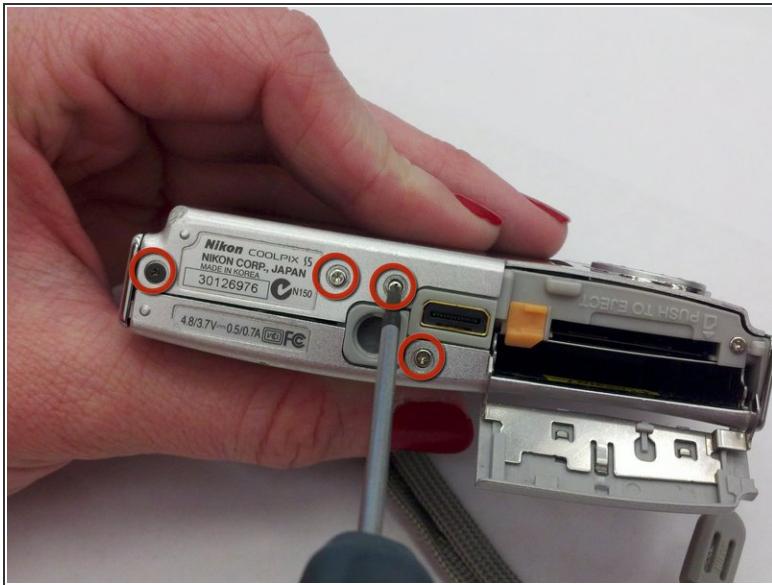


- Remove the four screws on the bottom of the camera using the Phillips-Head screwdriver.

## Step 4

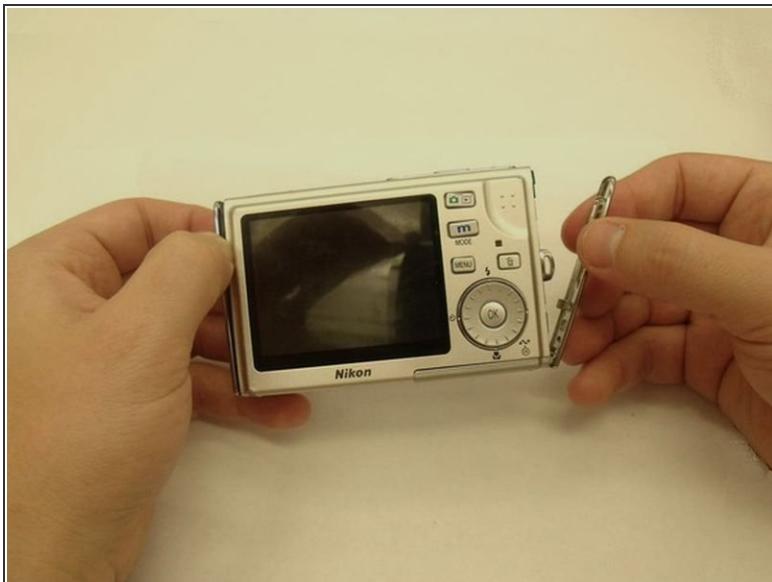


- Pull the silver side panels on each side.

## Step 5

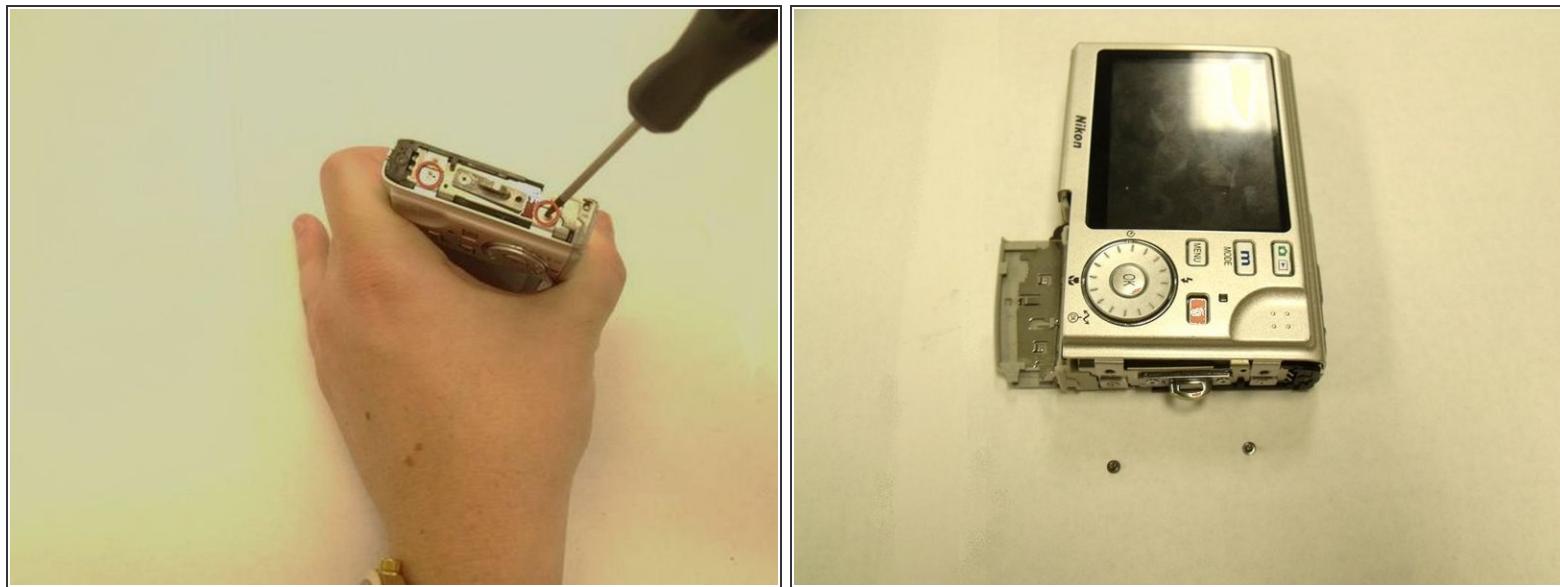


- On the right side of the camera (that contains the wrist strap loop), use the screwdriver to remove the two screws holding the backplate in place.
- Repeat this step for the left side.

## Step 6

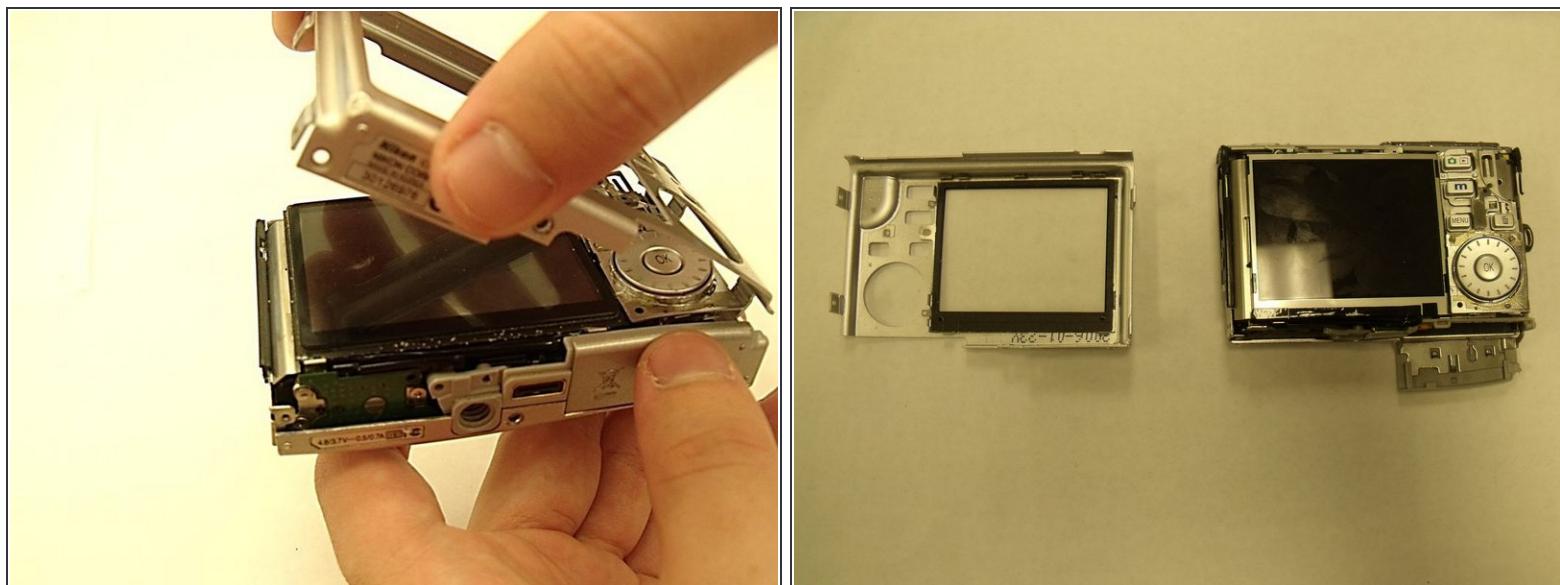

- Pull the back silver faceplate to separate it from the rest of the camera.

## Step 7 — Plastic LCD Screen Cover

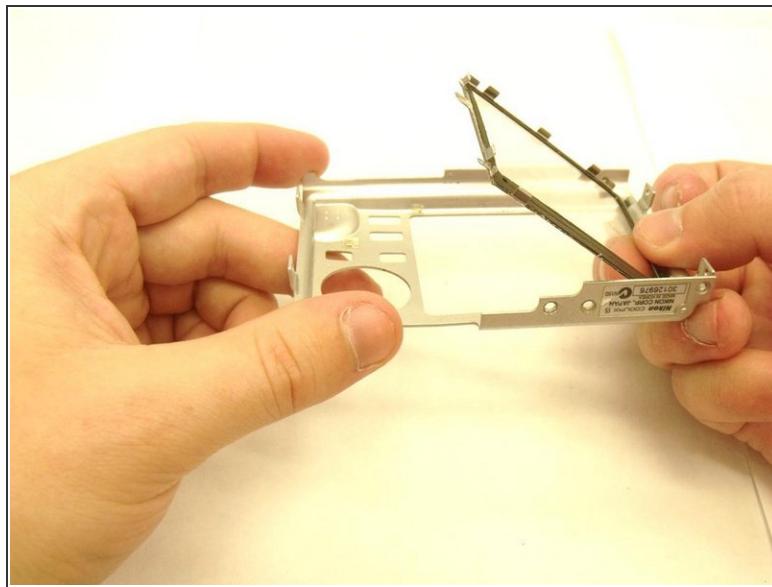

- Press lightly on the outer surface of the plastic LCD screen cover in each corner.
- The plastic LCD screen cover should pop out of the back plate.

To reassemble your device, follow these instructions in reverse order.