



# Nikon CoolPix S600 Front and Rear Casing Replacement

How to remove the camera's case to access the internal parts of the camera

Written By: andreas anggasastraa



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Front and Rear Casing



- With the lens facing forward, remove the one 4.2 mm screw on the bottom right hand corner of the camera.

## Step 2

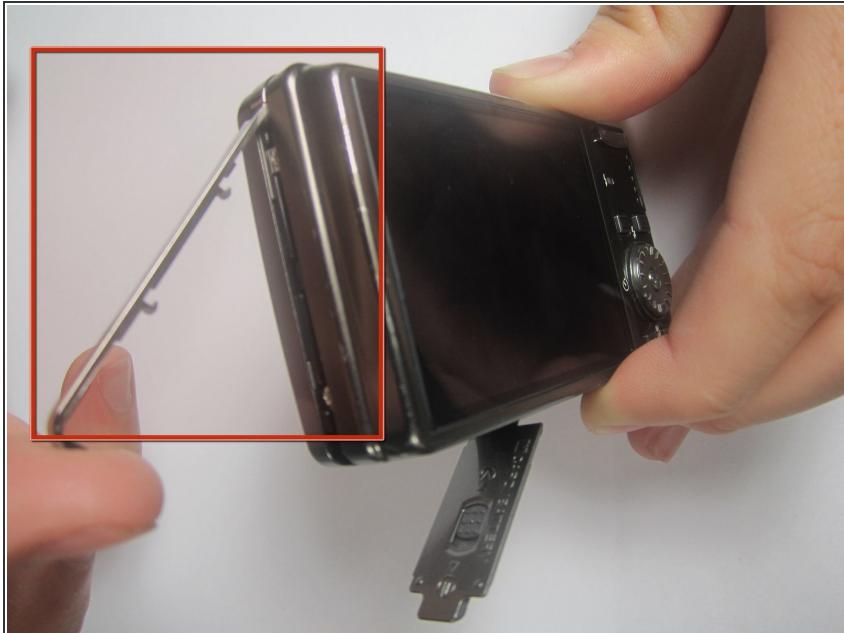

- Remove the chrome side cover from the body of the camera.

## Step 3




- Remove the four 3.2 mm screws on the bottom of the camera.

## Step 4



- Remove the two 3.2 mm screws from the right side of the camera (with lens is facing forward)
- Remove the one 3.2 mm screw from the left side of the camera (with lens facing forward)


## Step 5

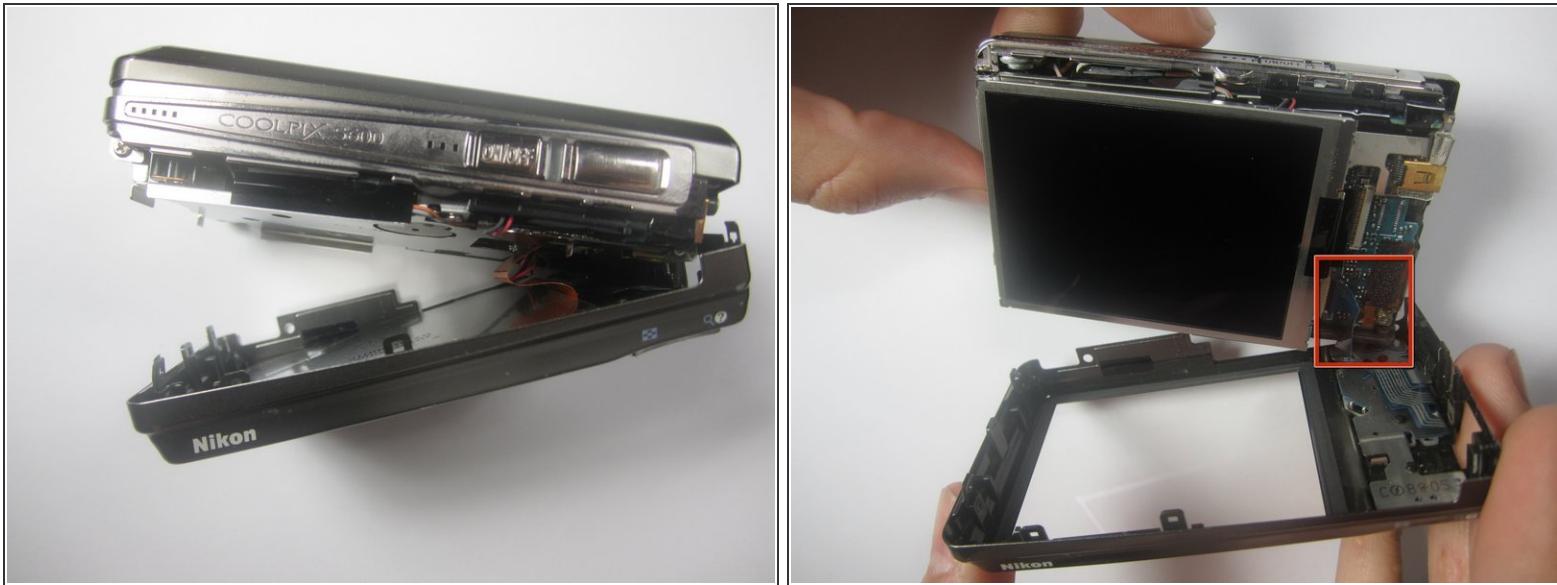

- Gently separate the back cover from the body of the camera.

**⚠** The back casing will still be connected to the circuit board by a ribbon

## Step 6

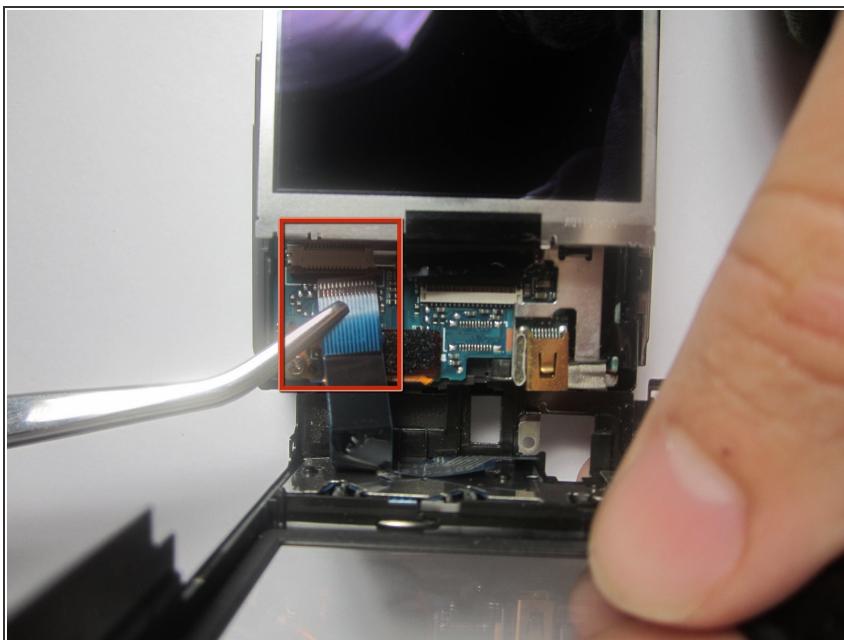


- Use the tweezers to disconnect the ribbon from the circuit board.

## Step 7



- Remove the one 2.6 mm screw from the left side of the camera (with the lens facing forward)


## Step 8

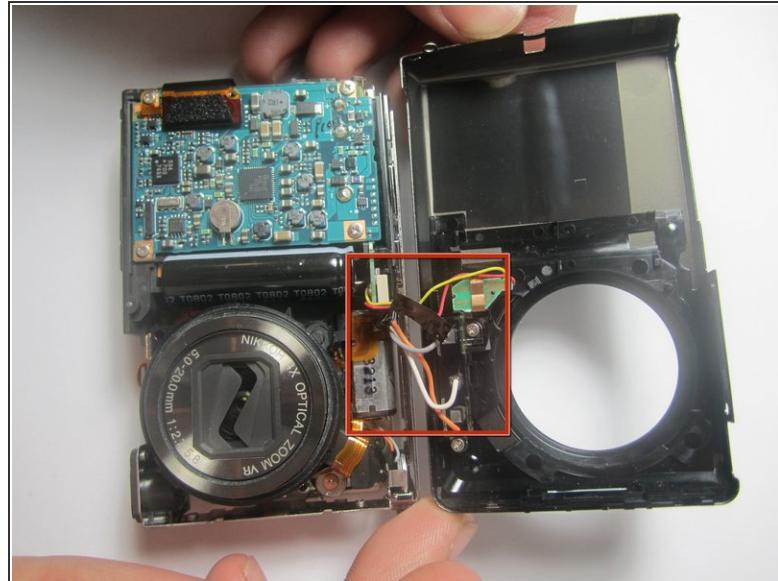

- Gently separate the front cover from the body of the camera.


**⚠** The front casing will still be connected to the circuit board by a few wires

## Step 9

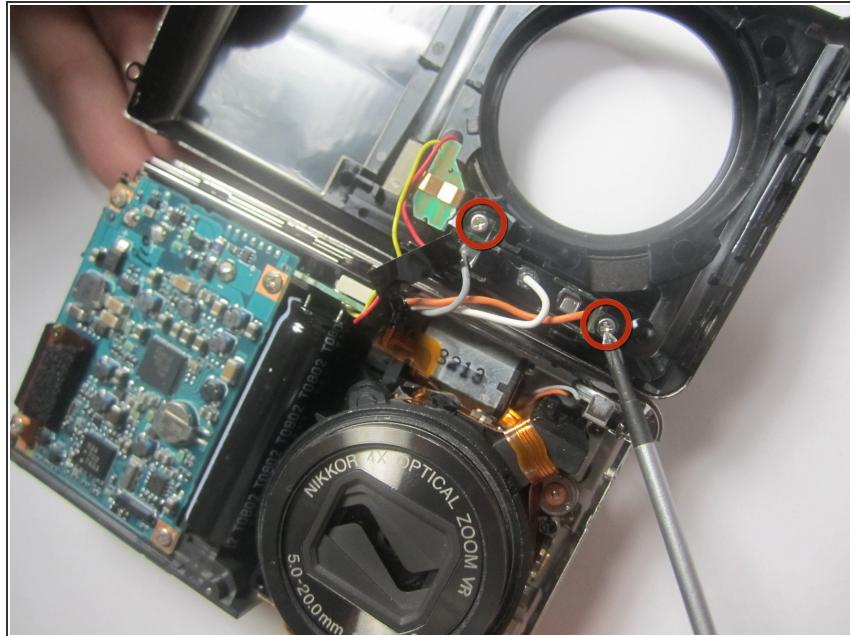

- Remove the two 3.2 mm screws that hold the flash to the front cover.

## Step 10

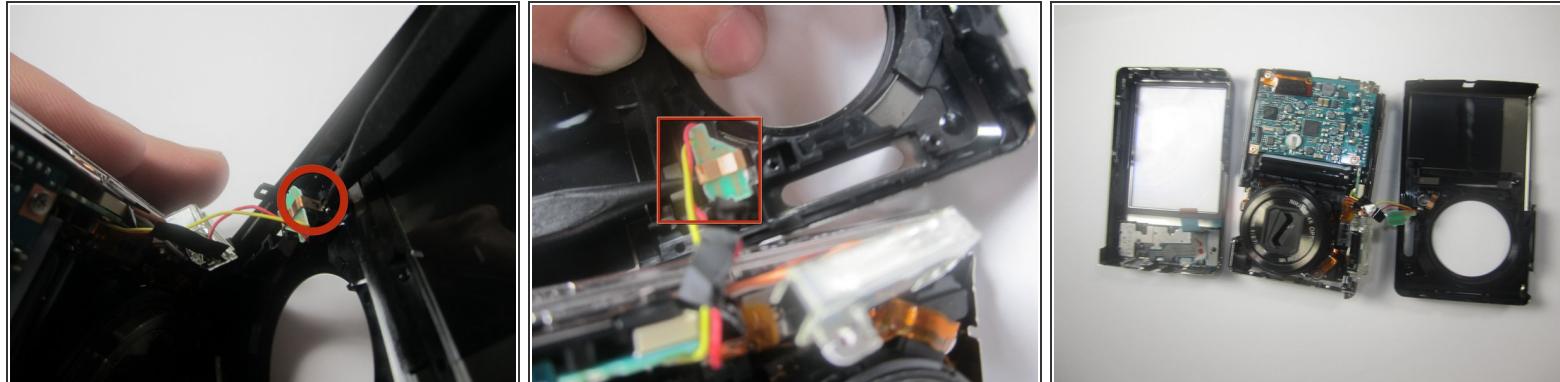

- Use the Spudger to remove the copper colored light bulb clip.
- Remove the front cover entierly from the camera body.

To reassemble your device, follow these instructions in reverse order.