 




Nikon Coolpix 3500 Battery Replacement

How to replace a Nikon Coolpix 3500 battery.

 
Written By: richard guenther

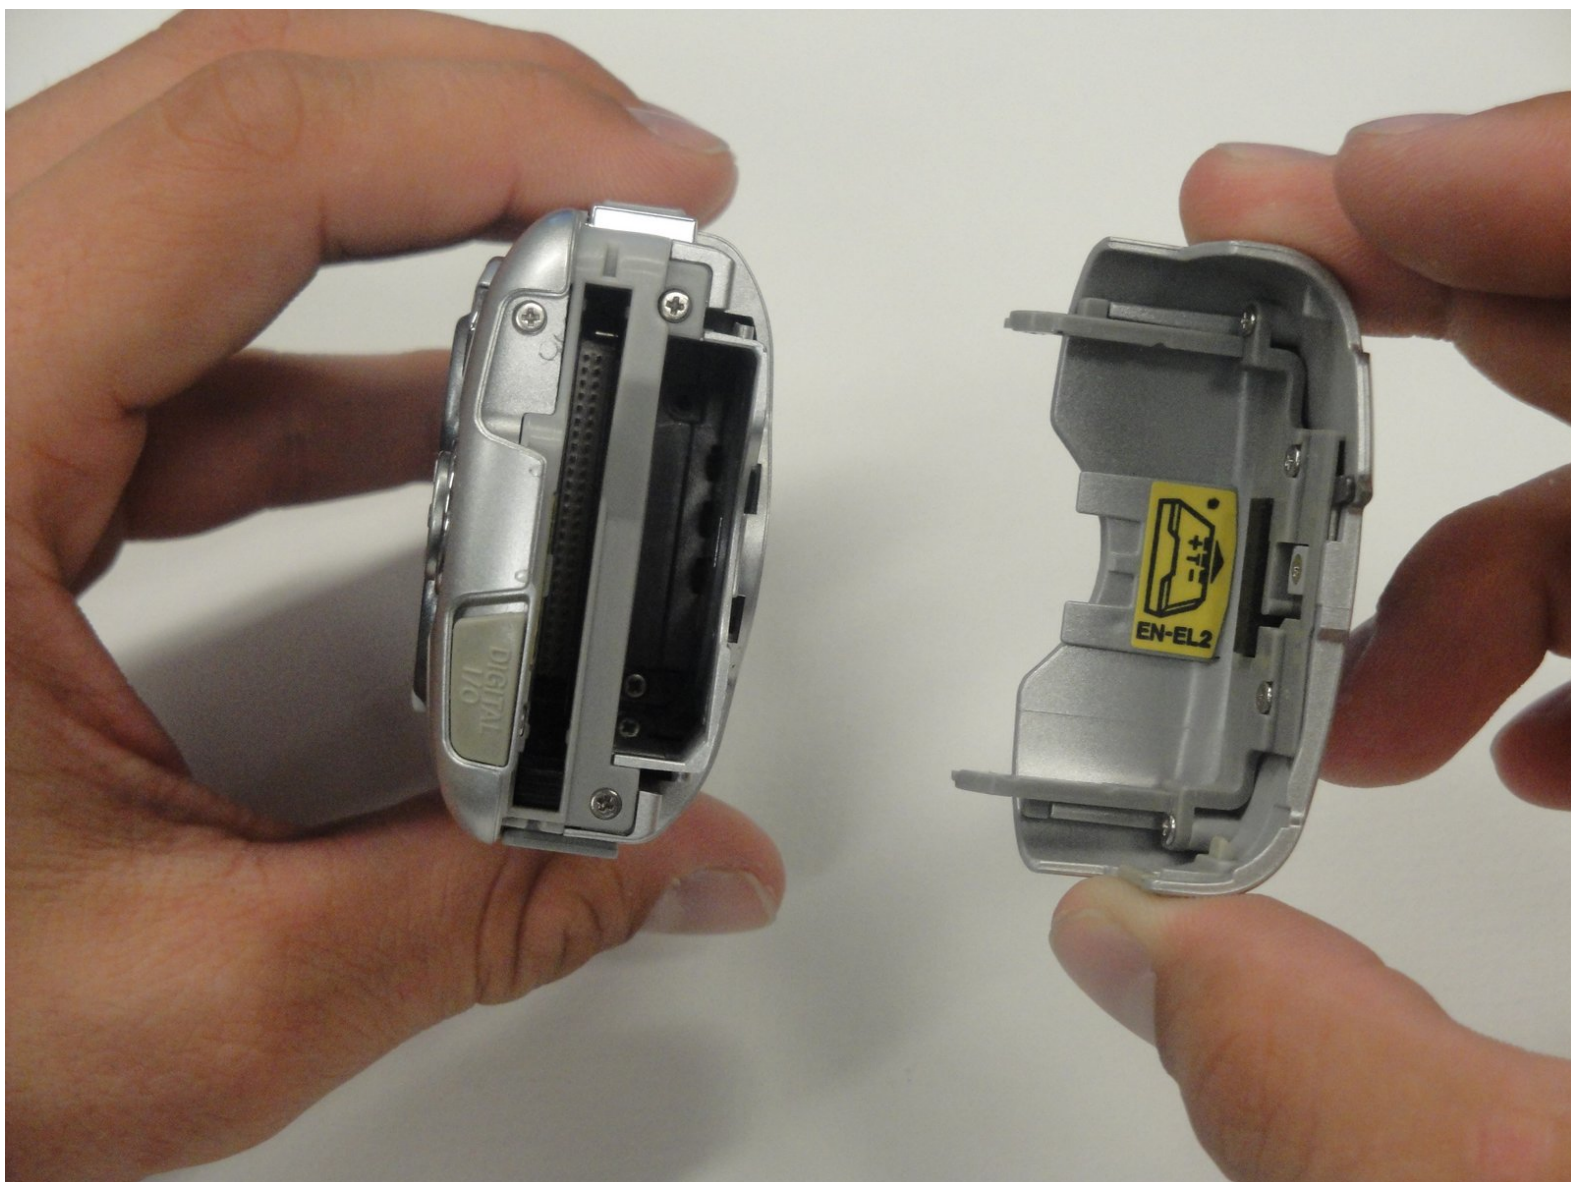

INTRODUCTION

Replacing the battery of a Nikon Coolpix 3500

Step 1 — Battery

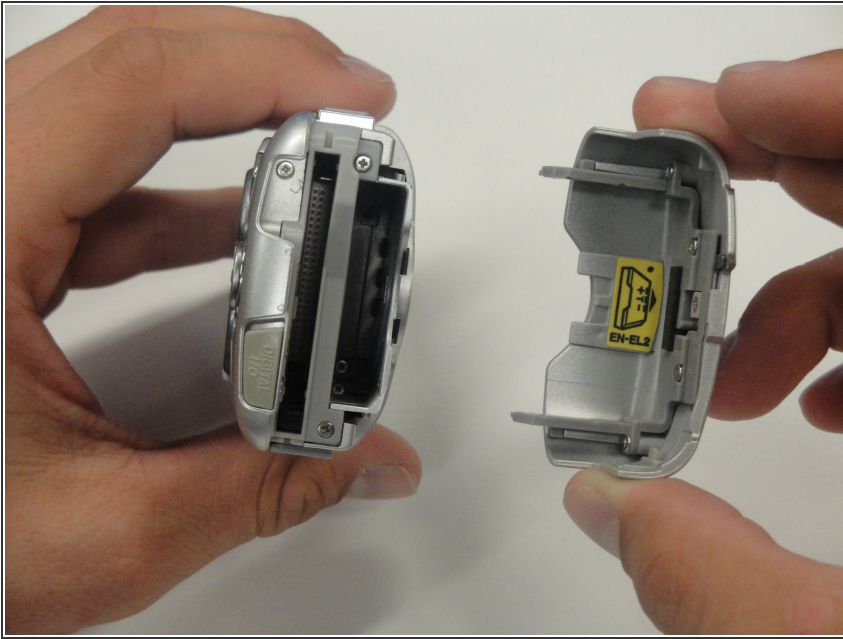

- Unlatch the battery cover. Slide the cover out and flip it open.
- Remove the battery.
- Gently remove the battery cover.

To reassemble your device, follow these instructions in reverse order.