



# Nikon Coolpix 3500 Front Cover Replacement.

How to replace a Nikon Coolpix 3500 front cover.

Written By: richard guenther




## INTRODUCTION

Replacing the front cover of a Nikon Coolpix 3500.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery

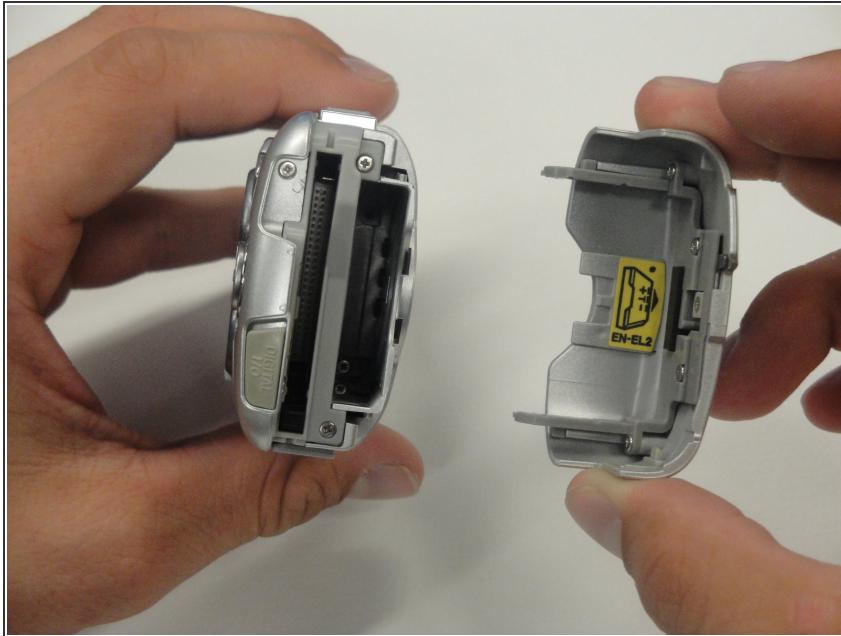


- Unlatch the battery cover. Slide the cover out and flip it open.
- Remove the battery.
- Gently remove the battery cover.

## Step 2 — Front Cover

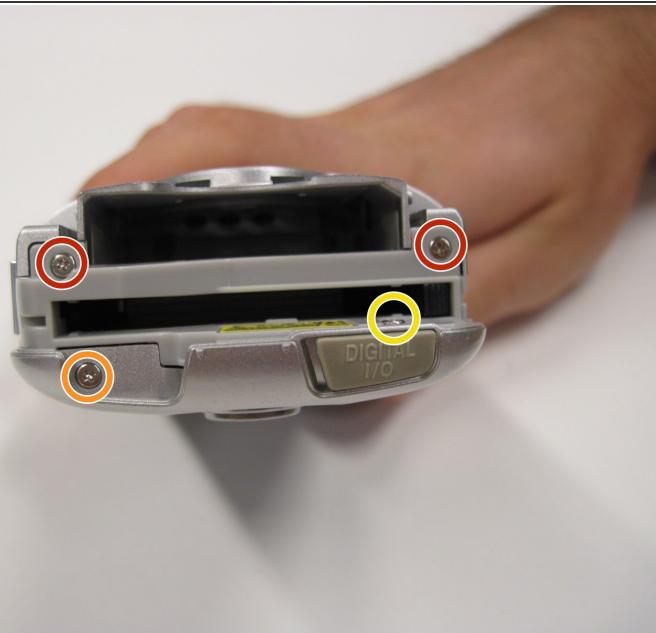

- Remove the two 4.5 mm screws that sit next to the battery slot.
- Remove the 3 mm screw that sits below the CF card slot.
- Remove the 4.5 mm screw that sits above the digital I/O cover.

## Step 3

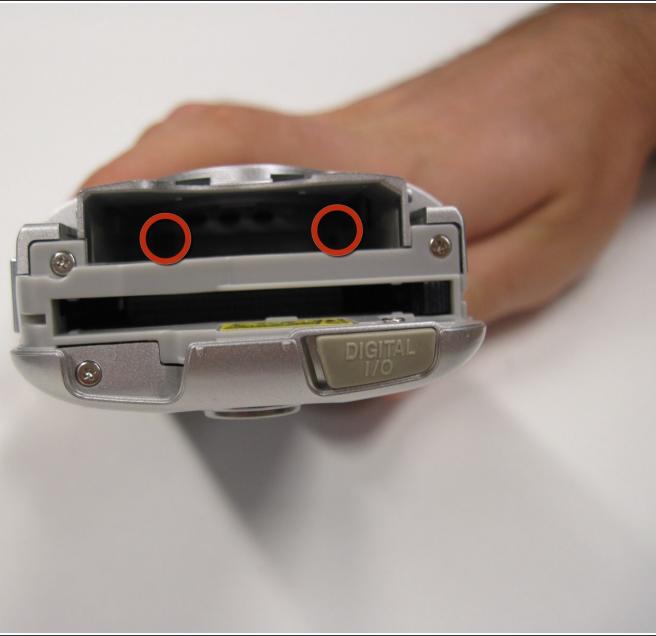

- Remove the two 4.5 mm screws that sit inside the battery slot.

## Step 4



- Remove the two 5 mm screws that sit near the camera strap eyelet.
- Remove the camera strap eyelet.

## Step 5



- Remove the 5 mm screw and cap that were underneath the camera strap eyelet.

## Step 6





- Remove the five 3.5 mm screws that sit at the bottom of the camera.
- Remove the grey plastic piece, which the five screws held in place, by gently detaching the front cover.

**⚠ Do not apply too much force; two wires still connect the front cover to the motherboard.**

This document was generated on 2020-02-28 09:46:12 PM (MST).

## Step 7

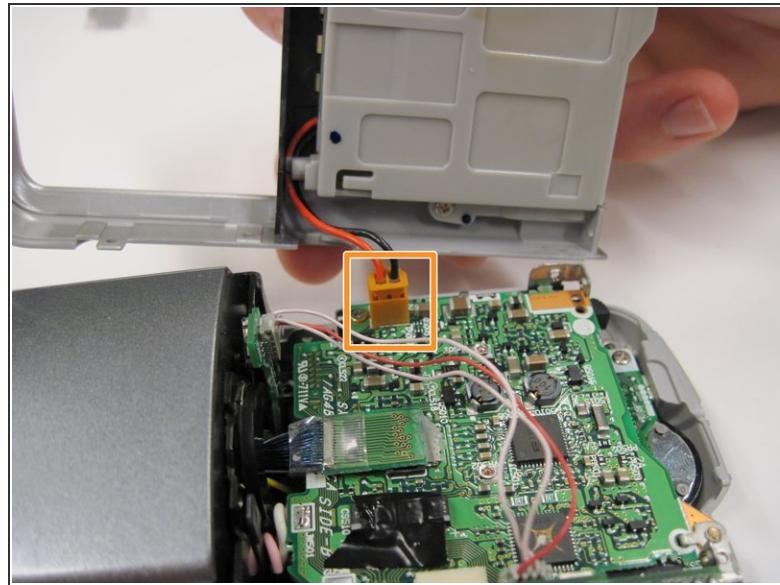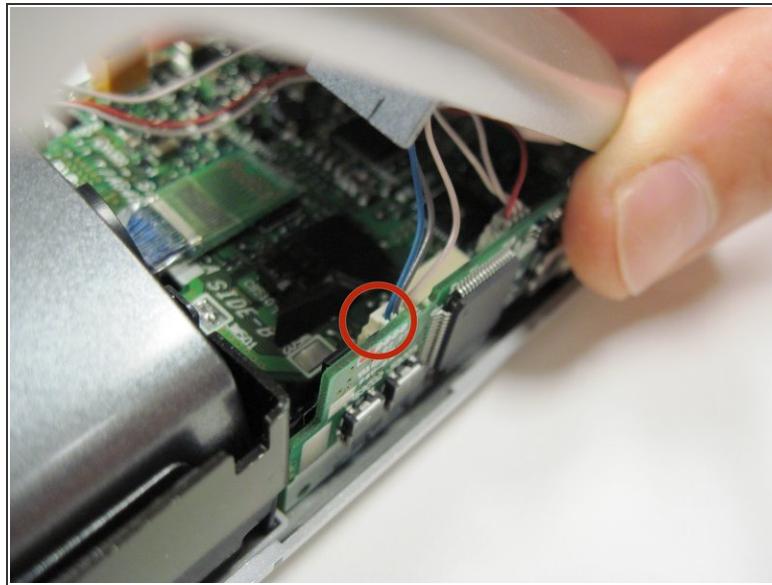

- Using a spudger, detach the white-capped wire.
- Using a spudger, detach the orange-capped wire and set the front cover aside.

To reassemble your device, follow these instructions in reverse order.