



Nikon Coolpix 5400 Back Cover Replacement

This guide will show you how to remove and replace the back case of the Nikon Coolpix 5400 camera.

Written By: Rhett Myers



INTRODUCTION

This guide will walk you through how to remove the back case of the Nikon Coolpix 5400. The process only requires a handful of screws to be removed and a few connecting wires. When removing the wire connectors, be careful not to break the plastic fittings.

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Back Cover



- Remove one 3.0mm Phillips #0 screw from the top of the case.

Step 2



- Remove two 3.0mm Phillips #0 screws from the card reader side of the case.

Step 3



- Remove four 3.0mm Phillips #0 screws from the bottom of the camera.

Step 4




- Remove one 3.0mm Phillips #0 screw from the side of the camera.

Step 5



- Use a plastic opening tool to gently remove the back case from the rest of the camera.


Step 6

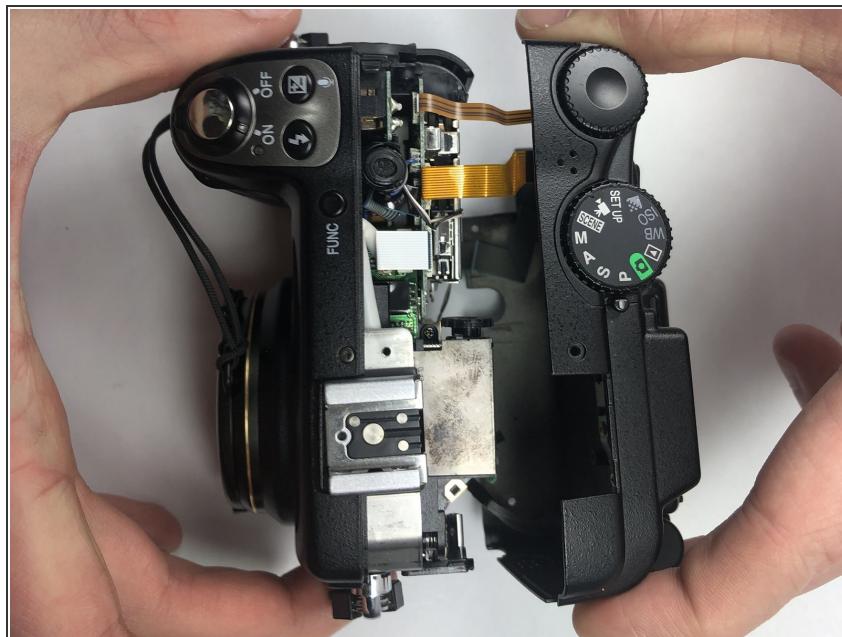

- Pull the back of the camera cover apart.


⚠ Connecting wires that are still attached to the back cover are fragile.

Step 7

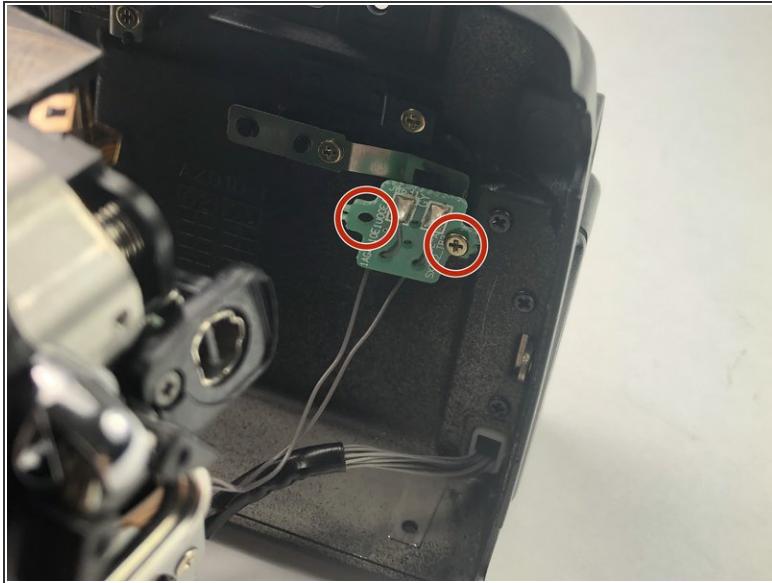

- Remove the two 4.0mm Phillips #0 screws holding the circuit board to the back case.


Step 8

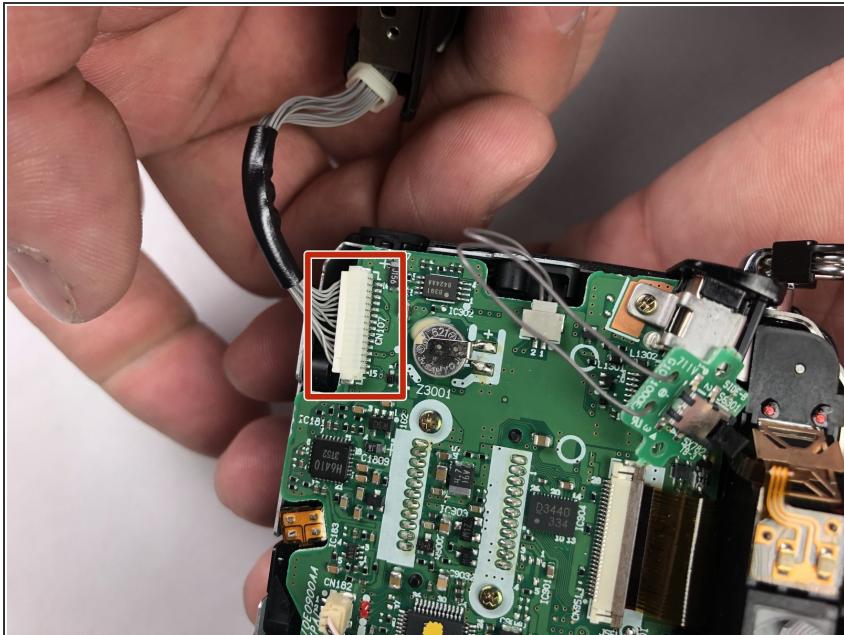

- Pull the LCD screen cables in the direction that the wires are exiting the circuit board.

⚠ Pull the wire connector gently, the plastic is very fragile.

Step 9

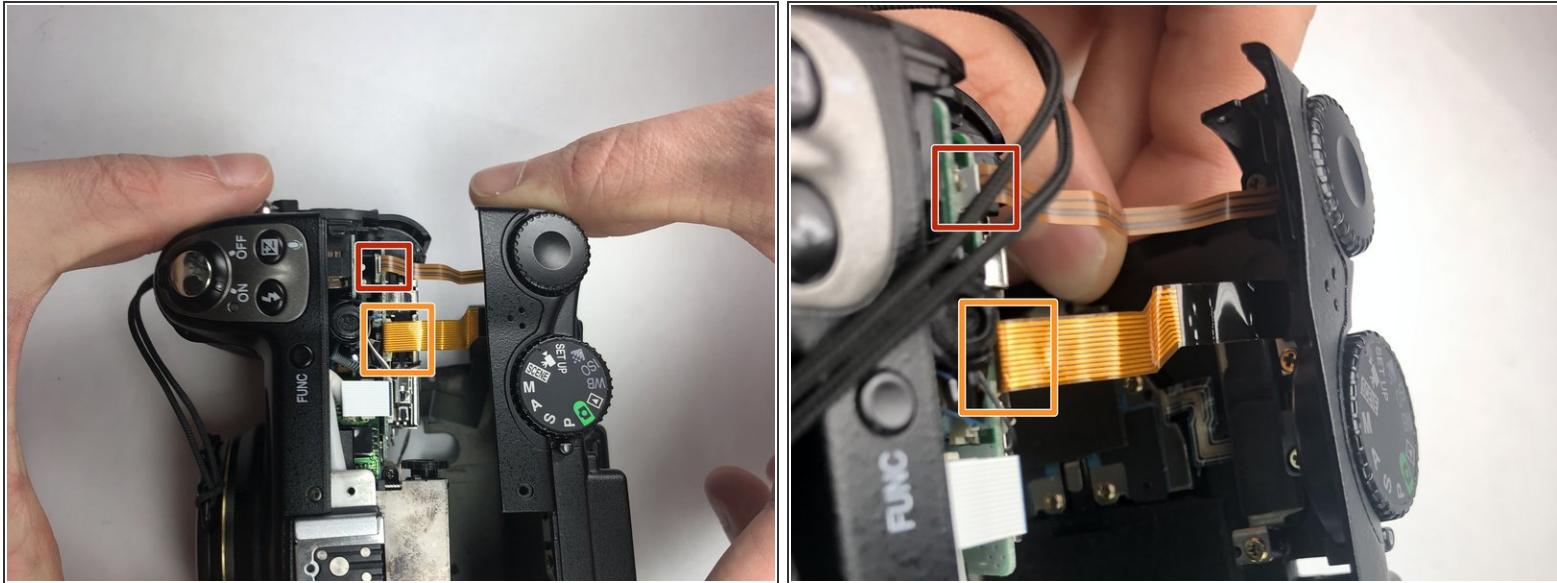

- Pull the toggle wheel wire connector up and away from the top of the camera.
- Pull the button control panel wire connector up and away from the top of the camera.

⚠ Gently remove the wire connectors; the plastic is fragile.

Step 10



- Remove the six 3.0mm Phillips #0 screws holding the button control panel.
- Remove the back cover from the camera body.

To reassemble your device, follow these instructions in reverse order.