



Nikon Coolpix 5400 Battery Door Replacement

Replace the battery door on a Nikon Coolpix 5400.

Written By: Savanah Cosand



INTRODUCTION

This guide will allow a user to replace the battery door on the Nikon Coolpix 5400.

The back housing must be removed to access the press fit pin holding the battery door.

Be careful not to drop the press fit pin into the body of the camera when removing with the tweezers.

A flat head screwdriver, a Phillips #0 screwdrivers, tweezers, and a plastic opening tool are required for this replacement.

[Remove the battery](#) before beginning any work to prevent electrical shock.

TOOLS:

- [Flathead Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery Door



- Remove one 3mm Phillips #0 screw from the top of the camera back cover.

Step 2



- Remove three 3mm Phillips #0 screws from the side of the back cover.

Step 3





- Lift memory card flap.
- Remove one 3mm Phillips #0 screw from the side of the back case.

Step 4



- Remove four 3mm Phillips #0 screws from the bottom of the back case.

Step 5

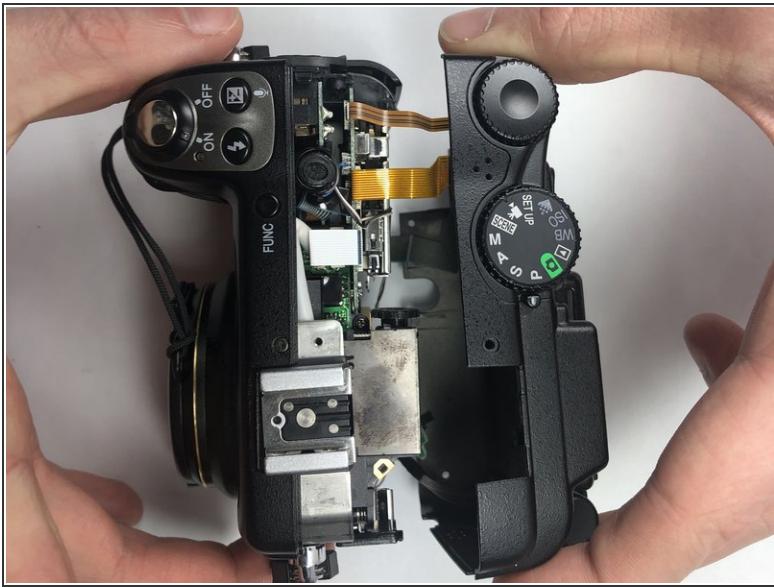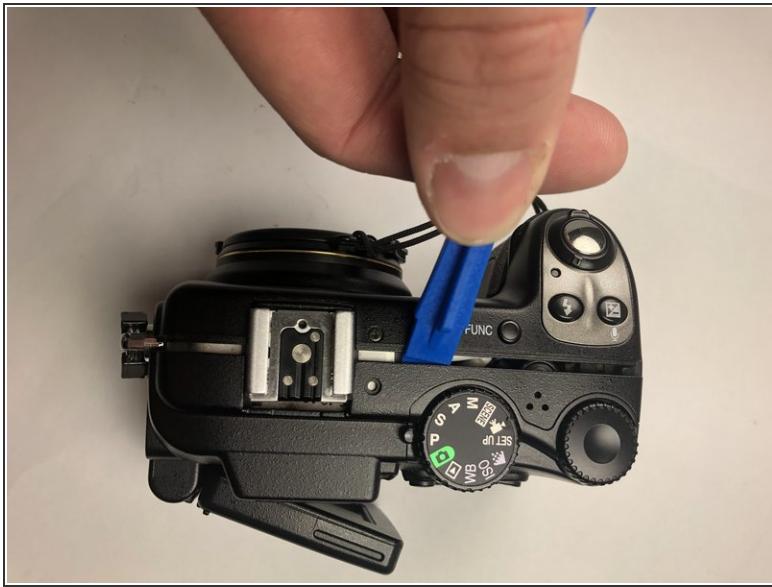

- Use a plastic opening tool to gently pop the back case away from the body of the camera.
- Pull the back case away from the camera very gently.

! The connecting cables are very fragile and easily broken.

Step 6



- Flip camera over so the bottom is facing up.
- Push the sliding latch to open the battery door.
- Push the press fit pin firmly with a flat-head screwdriver to release it from the hinge housing.
- Push to the left, half the length of the pin.


Step 7



- Grasp the press fit pin firmly with precision tweezers to pull it from the housing.

⚠ Do not drop the pin into the camera body.

Step 8

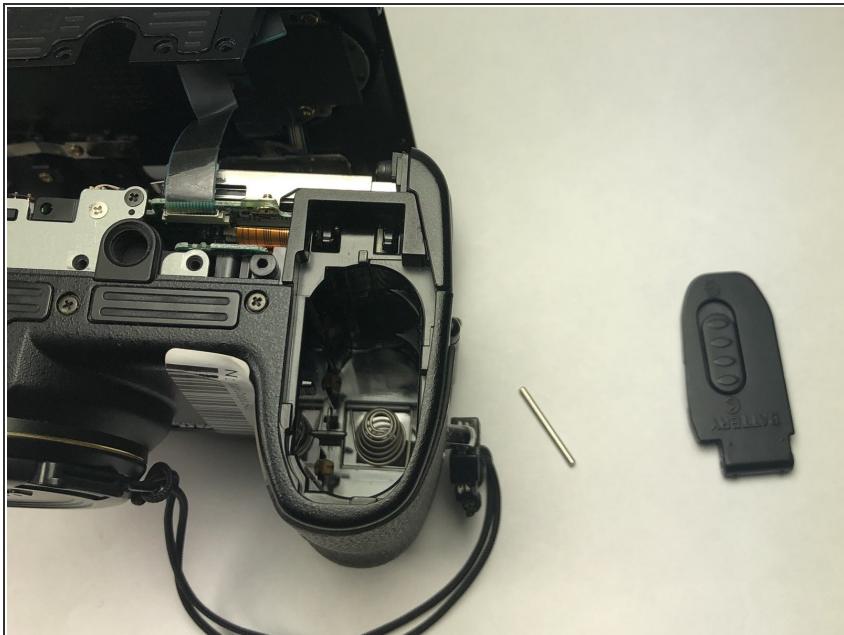

- Remove the battery door by lifting it out of the camera body.

To reassemble your device, follow these instructions in reverse order.