



# Nikon Coolpix 7900 Back Cover Replacement

To outline the process for removing the back cover of the Nikon Coolpix 7900.

Written By: Kaky Payne



## INTRODUCTION

Use this guide to replace the back cover.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

### PARTS:

- [Spudger](#) (1)

## Step 1 — Back Cover



- Remove the four 3.0mm screws on the bottom of the camera.

## Step 2




- Remove the two 3.0mm screws on the left side of the camera near the memory card compartment.

## Step 3




- Remove the two 3.0mm screws on the right side of the camera.

## Step 4

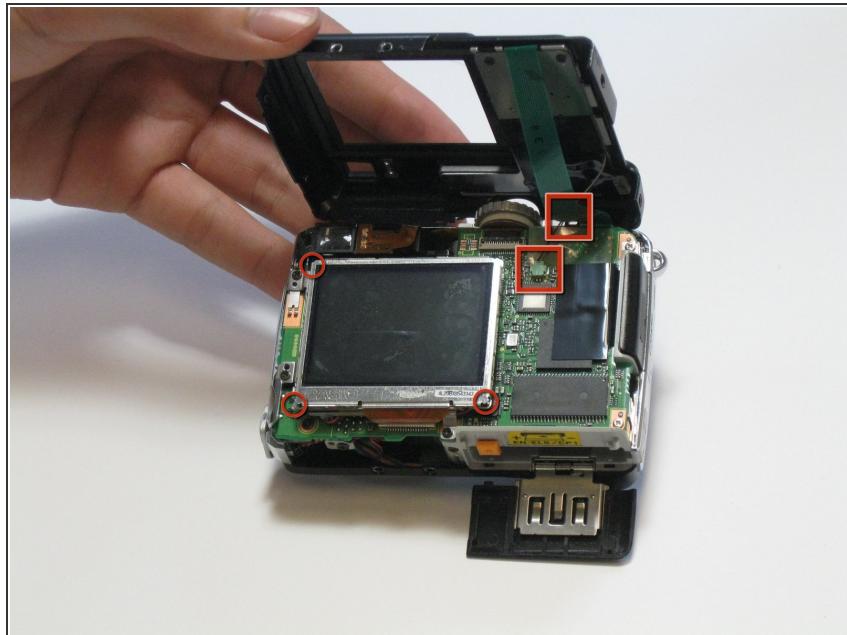


- Carefully open the back cover. Take care as there are connectors still attached.

## Step 5

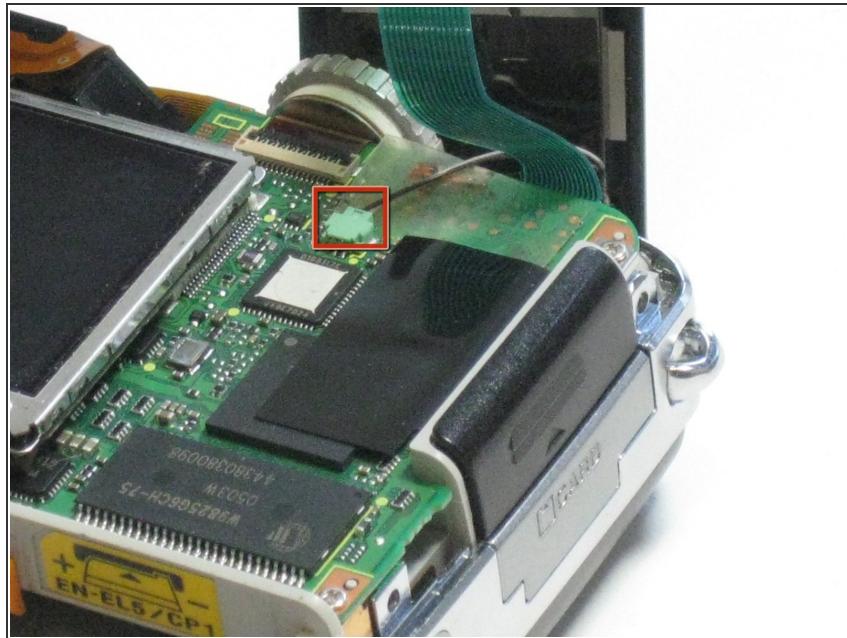

- Disconnect the cable by pulling the head upward along the green circuit board. If you only are changing the LCD, skip this step.

## Step 6

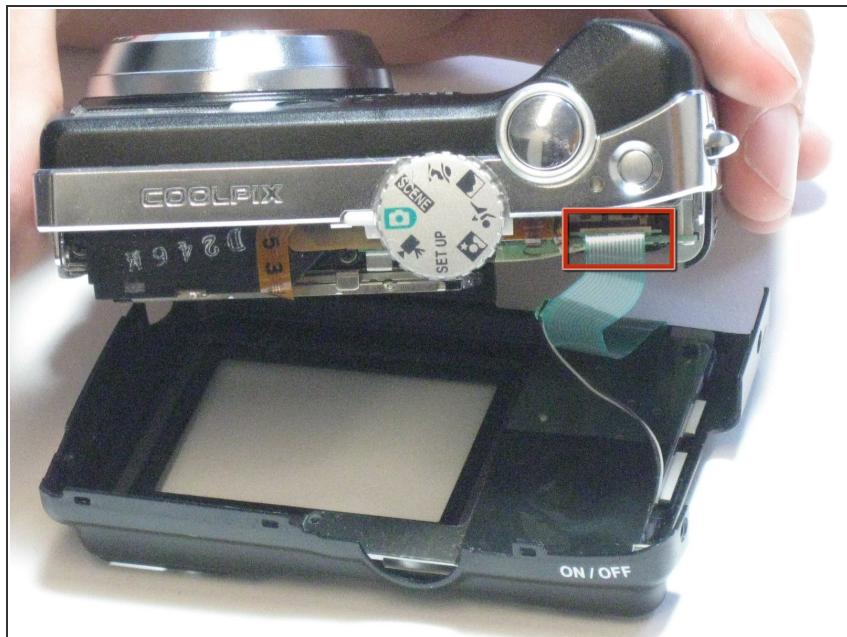

- Disconnect the ribbon cable by grabbing the two handles and pulling it directly out of the socket. If you are only changing LCD, skip this step.

**i** The back cover will be disconnected from the camera

To reassemble your device, follow these instructions in reverse order.